



# Operator's Manual

LBP-56V125/  
LBP-56V250/LBP-56V400

# Batteries

## WARNING

*This product contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.  
Cancer and Reproductive Harm [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)*

## WARNING



*Read and understand all provided literature before use.  
Failure to do so could result in serious injury.*

TABLE OF CONTENTS

---

Introduction.....3

Servicing Information.....3

    Parts / Serial Number.....3

    Service.....4

    ECHO Consumer Product Support..... 4

    Product Registration.....4

    Additional Literature.....4

Safety.....5

    Manual Safety Symbols and Important Information.....5

    International Symbols.....6

    Important Safety Warnings.....6

    Recommended Ambient Temperature .....8

    Environmentally Safe Battery Disposal.....9

Description.....10

Contents.....11

Operation.....12

    Check Battery Charge.....12

    Battery Protection Features.....13

    Cold Weather Operation.....13

    Storage.....13

Specifications.....14

Product Registration.....15

Warranty.....17

## INTRODUCTION

---

Specifications, descriptions and illustrative material in this literature are as accurate as known at the time of publication, but are subject to change without notice. Illustrations may include optional equipment and accessories, and may not include all standard equipment.



Read and understand all provided literature. Literature contains specifications and information for safety, operation, maintenance, storage, and assembly specific to this product. Scan QR code for more information.



For additional literature, including safety manuals where applicable, or questions regarding terms used in this manual, visit:

<https://www.echo-usa.com/manuals>

 


## SERVICING INFORMATION

---

### Parts / Serial Number

Genuine ECHO Parts and Assemblies for your ECHO products are available only from an Authorized ECHO Dealer. When you do need to buy parts always have the Model Number and Serial Number of the unit with you. For future reference write them in the space provided below.

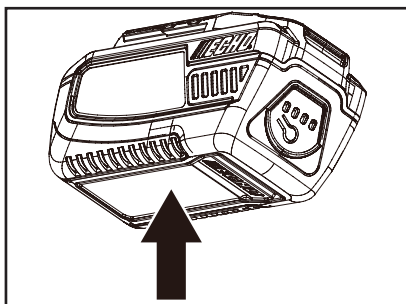

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

## Service

Service of this product during the warranty period must be performed by an Authorized ECHO Service Dealer. For the name and address of the Authorized ECHO Service Dealer nearest you, ask your retailer or call: 1-800-432-ECHO (3246). Dealer information is also available on our Web Site [www.echo-usa.com](http://www.echo-usa.com). When presenting your unit for Warranty service/repairs, proof of purchase is required.

## ECHO Consumer Product Support

If you require assistance or have questions concerning the application, operation, or maintenance of this product, call the ECHO Consumer Product Support Department at 1-800-432-ECHO (3246) from 8:00 am to 5:00 pm (Central Standard Time) Monday through Friday. Before calling, please know the model and serial number of your unit.

## Product Registration

Register your ECHO equipment online at [www.echo-usa.com](http://www.echo-usa.com) or by filling out the product registration sheet included in this manual. Registering your product confirms warranty coverage and provides a direct link to ECHO if we find it necessary to contact you.

## Additional Literature

In addition to finding information online, information is available from your Authorized ECHO Service Dealer, or by contacting ECHO Incorporated, 400 Oakwood Road, Lake Zurich, IL 60047, 1-800-432-ECHO (3246).

## SAFETY

### Manual Safety Symbols and Important Information

Throughout this manual and on the product itself, you will find safety alerts and helpful, informational messages preceded by symbols or key words. The following is an explanation of those symbols and key words and what they mean to you.

#### **DANGER**

*The safety alert symbol accompanied by the word “DANGER” calls attention to an act or condition which WILL lead to serious personal injury or death if not avoided.*

#### **WARNING**

*The safety alert symbol accompanied by the word “WARNING” calls attention to an act or condition which CAN lead to serious personal injury or death if not avoided.*

#### **CAUTION**

*The safety alert symbol accompanied by the word “CAUTION” calls attention to an act or condition which might lead to minor or moderate personal injury if not avoided.*

#### **NOTICE**

*The enclosed message provides information necessary for the protection of the unit.*

Note: This enclosed message provides tips for use, care and maintenance of the unit.








#### CIRCLE AND SLASH SYMBOL

This symbol means the specific action shown is prohibited. Ignoring these prohibitions can result in serious or fatal injury.

## International Symbols

Some of the following symbols may be used on this product. Please study them and learn their meaning. Proper interpretation of these symbols will allow you to operate the product better and safer.

Symbol	Description	Symbol	Description
V	Voltage		Safety / Alert
W	Power		RBRC
	Direct current		RBRC
	Read all safety warnings and all instructions.		

## Important Safety Warnings

 **WARNING**

**Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.**

- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the product. Carrying the product with your finger on the switch or energizing product that have the switch on invites accidents.
- Disconnect the battery pack from the product before making any adjustments, changing accessories, or storing product. Such preventive safety measures reduce the risk of starting the product accidentally.
- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when

used with another battery pack.

- Use products only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
- When the battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- Do not use a battery pack or product that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- **Do not expose a battery or tool to fire or excessive temperature.** Exposure to fire or temperature above 265°F(130 °C) may cause explosion.
- Follow all charging instructions and do not charge the battery pack or product outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
- Do not modify or attempt to repair the product or the battery pack (as applicable) except as indicated in the instructions for use and care.
- PLEASE READ & SAVE THESE INSTRUCTIONS: LBP-56V125/  
LBP-56V250/LBP-56V400.
- To reduce risk of injury, use only LC-56V2A/ LC-56V4A/ 56V5A2 or ECHO 56V series approved replacement chargers. Using other types of chargers may cause personal injury and damage.

### Battery Tool Use and Care

- **Recharge only with ECHO eFORCE® 56V battery series chargers.** A charger that is suitable for one type of battery may create a risk of fire when used with another battery.
- **Use only with ECHO eFORCE® 56V battery series.** Use of any other batteries may create a risk of injury and fire.
- **Do not open or destroy the battery.** Electrolytes contained within the battery are corrosive and may cause damage to eyes or skin if released. It may be toxic if swallowed.
- **Exercise care in handling batteries to avoid shorting the battery with conducting materials such as rings, bracelets, keys, etc.** The battery or conductor may overheat and cause burns if contact with said

materials is made.

- **Do not use a battery or tool that is damaged or modified.** *Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.*
- **Follow all charging instructions and do not charge the battery or tool outside the temperature range specified in the instructions.** *Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.*

## Service

- **Have your power tool serviced by a qualified repair person using only identical replacement parts.** *This will ensure that the safety of the power tool is maintained.*
- **Never service damaged batteries.** *Service of batteries should only be performed by the manufacturer or authorized service providers.*

## Recommended Ambient Temperatures:

	Charging		Usage/Discharging		Storage	
	Low	High	Low	High	Low	High
Product <sup>(1)</sup>	Not Applicable		32°F (0°C)	113°F (45°C)	32°F (0°C)	113°F (45°C)
Battery <sup>(2)(3)</sup>	39°F (4°C)	104°F (40°C)	-4°F (-20°C)	113°F (45°C)	-4°F (-20°C)	113°F (45°C)
Charger	39°F (4°C)	104°F (40°C)	Not Applicable		32°F (0°C)	113°F (45°C)

 
<sup>(1)</sup> Assumes the battery is just off the charger or stored at the temperature range noted for Charger Usage 39° F (4°C) - 104°F (40°C).

<sup>(2)</sup> Hot batteries in high ambient temperatures require longer charge times.

<sup>(3)</sup> To maximize life of batteries being stored more than 3 months, ECHO recommends batteries being stored at 3 green lights on the battery capacity indicator (BCI) and at room temperature.

Note: Long term storage of batteries in conditions or charge levels on the battery capacity indicator (BCI) other than noted above could degrade the performance and runtime of the battery.

## Environmentally Safe Battery Disposal

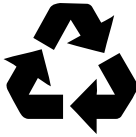

The toxic and corrosive material below is in the batteries used in this machine:  
Lithium-Ion.

Discard all toxic materials in a specified manner to prevent contamination of the environment. Before discarding damaged or worn out lithium-ion (Li-ion) battery, contact your local waste disposal agency, or the local Environmental Protection Agency for information and specific instructions. Take the batteries to a local recycling and/or disposal center, certified for lithium-ion disposal.

## WARNING

***If the battery cracks or breaks, with or without leaks, do not recharge it and do not use. Discard it and replace with a new battery. Do not try to repair it. To prevent injury and risk of fire, explosion, or electric shock, and to avoid damage to the environment:***

 
- ***Cover the terminals of the battery with heavy-duty adhesive tape.***
- ***Do not try to remove or destroy any of the battery components.***
- ***Do not try to open the battery.***
- ***If a leak develops, the released electrolytes are corrosive and toxic. Do not get the solution in the eyes or on skin, and do not swallow it.***
- ***Do not put these batteries in your regular household trash.***
- ***Do not incinerate.***
- ***Do not put them where they will become part of any waste landfill or municipal solid waste stream. Take them to a certified recycling or disposal center.***

**DESCRIPTION**

**LBP-56V125/  
LBP-56V250/LBP-56V400**

**DESCRIPTION**

Locate the safety label(s) on your unit. Make sure the label(s) is legible and that you understand and follow the instructions on it. If a label cannot be read, a new one can be ordered from your ECHO dealer. Safety label is for example only. Your label may appear slightly different.

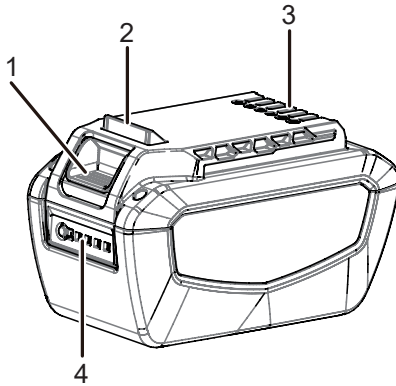

LBP-56V250 Shown

**ECHO** RECHARGEABLE LITHIUM-ION BATTERY  
BATTERIE RECHARGEABLE AU LITHIUM-ION  
BATERIA RECARGABLE DE IONES DE LITIO

56V MAX 3.0Ah 25Wh LBP-56V250

**WARNING:** To reduce the risk of injury, user must read the instruction manual. Do not throw into fire. For use only with ECHO eFORCE® 56V battery series chargers. See operator's manual for list of compatible model numbers. Store indoors, and do not expose to rain or water.

**AVERTISSEMENT:** Pour réduire le risque de blessures, l'utilisateur doit lire le manuel d'utilisation, avec les chargeurs de batteries 56 V de la série ECHO eFORCE®. Voir le manuel de l'opérateur pour la liste des numéros de modèle compatibles. Entreposer à l'intérieur.

**ADVERTENCIA:** Para reducir el riesgo de lesiones, el usuario debe leer y comprender el manual del operador. No arroje al fuego. Para usar sólo con los cargadores de baterías de la serie ECHO eFORCE® de 56V. Consulte el manual del operador para ver la lista de números de modelos compatibles. Guardar en el interior y no exponerlo a la lluvia ni al agua.

1-800-432-3246 QR ECHO Incorporated 400 Oakwood Road Lake Zurich, IL 60047 Made in China Fabriqué en Chine Hecho en China

ES23456 LISTED

**ECHO** RECHARGEABLE LITHIUM-ION BATTERY  
BATTERIE RECHARGEABLE AU LITHIUM-ION  
BATERIA RECARGABLE DE IONES DE LITIO

56V MAX 2.8Ah 19Wh LBP-56V125

**WARNING:** To reduce the risk of injury, user must read the instruction manual. Do not throw into fire. For use only with ECHO eFORCE® 56V battery series chargers. See operator's manual for list of compatible model numbers. Store indoors, and do not expose to rain or water.

**AVERTISSEMENT:** Pour réduire le risque de blessures, l'utilisateur doit lire le manuel d'utilisation, avec les chargeurs de batteries 56 V de la série ECHO eFORCE®. Voir le manuel de l'opérateur pour la liste des numéros de modèle compatibles. Entreposer à l'intérieur et protéger de la pluie ou de l'eau.

**ADVERTENCIA:** Para reducir el riesgo de lesiones, el usuario debe leer y comprender el manual del operador. No arroje al fuego. Para usar sólo con los cargadores de baterías de la serie ECHO eFORCE® de 56V. Consulte el manual del operador para ver la lista de números de modelos compatibles. Guardar en el interior y no exponerlo a la lluvia ni al agua.

1-800-432-3246 QR ECHO Incorporated 400 Oakwood Road Lake Zurich, IL 60047 Made in China Fabriqué en Chine Hecho en China

ES23456 LISTED

**ECHO** RECHARGEABLE LITHIUM-ION BATTERY  
BATTERIE RECHARGEABLE AU LITHIUM-ION  
BATERIA RECARGABLE DE IONES DE LITIO

50.4V 8.0Ah 403.2Wh 56V MAX LBP-56V400

**WARNING:** To reduce the risk of injury, user must read the instruction manual. Do not throw into fire. For use only with ECHO eFORCE® 56V battery series chargers. See operator's manual for list of compatible model numbers. Store indoors, and do not expose to rain or water.

**AVERTISSEMENT:** Pour réduire le risque de blessures, l'utilisateur doit lire le manuel d'utilisation. Ne jetez pas au feu. À utiliser uniquement avec les chargeurs de batteries 56 V de la série ECHO eFORCE®. Voir le manuel de l'opérateur pour la liste des numéros de modèle compatibles. Entreposer à l'intérieur et protéger de la pluie ou de l'eau.

**ADVERTENCIA:** Para reducir el riesgo de lesiones, el usuario debe leer y comprender el manual del operador. No arroje al fuego. Para usar sólo con los cargadores de baterías de la serie ECHO eFORCE® de 56V. Consulte el manual del operador para ver la lista de números de modelos compatibles. Guardar en el interior y no exponerlo a la lluvia ni al agua.

1-800-432-3246 QR ECHO Incorporated 400 Oakwood Road Lake Zurich, IL 60047 Assembled in Vietnam Manufactured in Vietnam

ES23456 LISTED



1. Latch
2. Engagement tab
3. Battery terminal ridges
4. Battery capacity indicator (BCI)

### **BATTERY TERMS**

- **LATCH** - Battery release button.
- **ENGAGEMENT TAB** - Battery lock button.
- **BATTERY TERMINALS** - Electrical connection between battery and charger
- **BATTERY CAPACITY INDICATOR**

### **CONTENTS**

---

The ECHO product you purchased has been factory pre-assembled for your convenience. Due to packaging restrictions, some assembly may be necessary.

 
 
After opening the carton, check for damage. Immediately notify your retailer or ECHO Dealer of damaged or missing parts. Use the contents list to check for missing parts.

- 1 Battery
- 1 Operator's Manual

## OPERATION

## Check Battery Charge

1. Press battery capacity indicator (BCI) button (1).
2. The lights (2) will illuminate according to the battery's charge level. See chart below:

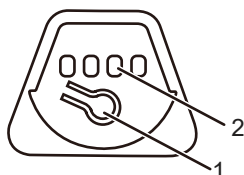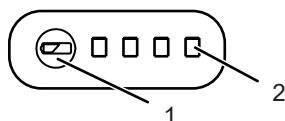

Green Lights	Charge
Four Green Lights	The battery is at 80-100% charge.
Three Green Lights	The battery is at 55-79% charge.
Two Green Lights	The battery is at 25-54% charge.
One Green Light	The battery is at 1-24% charge.
Zero	The battery is under 1% charge and requires charging immediately.

### **Battery Protection Features**

This lithium-ion battery is designed with features that protect the lithium-ion cells and maximize battery life. If the tool stops during use, release the trigger to reset and resume operation. If the tool still does not work, the battery needs to be recharged.

### **Cold Weather Operation**

Note: The lithium-ion battery can be used in temperatures down to 32°F (0°C).

Install the battery in any tool and operate the tool in a light duty application. In approximately one minute, the battery will warm up and begin operating normally.

### **Storage:**

Store battery according to ambient temperature chart.

## SPECIFICATIONS

MODEL	LBP-56V125
Battery	56V MAX $\approx$ 2.5Ah 126Wh Rechargeable Li-ion Battery Pack
Charge time	75 min. (using ECHO LC-56V2A Charger)
Weight	1 kg (2.2 lbs)
Dimension	18.4 x 8.8 x 6.6 cm (7.24 x 3.46 x 2.6 in)

MODEL	LBP-56V250
Battery	56V MAX $\approx$ 5.0Ah 252Wh Rechargeable Li-ion Battery Pack
Charge time	150 min. (using ECHO LC-56V2A Charger)
Weight	1.80 kg (3.97 lbs)
Dimension	18.4 x 8.8 x 10.1 cm (7.24 x 3.46 x 3.96 in)

MODEL	LBP-56V400	
Battery	56V MAX $\approx$ 8.0Ah 403.2Wh Rechargeable Li-ion Battery Pack	
Charge time	240 min. (using ECHO LC-56V2A Charger)	
	120 min. (using ECHO LC-56V4A Charger)	
	48 min. (1 battery)	(using ECHO LC-56V5A2 Charger)
	96 min. (2 batteries)	
Weight	2.54 kg (5.6 lbs)	
Dimension	22.3 x 8.8 x 10.5 cm (8.78 x 3.46 x 4.13 in)	

Note: See [www.echo-usa.com](http://www.echo-usa.com) for a list of compatible chargers.

**PRODUCT REGISTRATION**

---

**Thank you for choosing ECHO Power Equipment**

Please go to <http://www.echo-usa.com/Warranty/Register-Your-ECHO> to register your new product online. It's FAST and EASY! NOTE: your information will never be sold or misused by ECHO, Incorporated.

Registering your purchase enables us to contact you in the unlikely event of a service update or product recall, and verifies your ownership for warranty consideration.

If you do not have access to the Internet, you can complete the form below and mail to:

***ECHO Incorporated, Product Registration, PO Box 1139,  
Lake Zurich, IL 60047.***



PRODUCT REGISTRATION CARD : TARJETA DE REGISTRO : CARTE D'ENREGISTREMENT DU PRODUIT

**ONLINE OPTION:** Register online and save a stamp! You will be alerted of product updates and/or be sent new ECHO product information and special offers. Simply go to: [www.echo-usa.com](http://www.echo-usa.com)

**OPCION POR INTERNET:** Regístrese en la página web y ahorre una estampilla. Le alertarán sobre actualizaciones del producto y/o se le enviara información sobre los nuevos productos ECHO y las ofertas especiales. Simplemente visite: [www.echo-usa.com](http://www.echo-usa.com)

**OPTION EN LIGNE:** Enregistrez en ligne et épargner un timbre! Vous serez informé sur les nouveaux produits ECHO et les mises à jour de produit ainsi que les offres spéciales. Simplement visitez-le: [www.echo-usa.com](http://www.echo-usa.com)

Please Print : Por Favor Enscriba Con Letra De Molde : En Lettre Carré S.V.P.

Confidential: Information provided will not be shared or sold

Purchaser's Name : Nombre del Comprador : Nom de l'acheteur

Primary use of tool:  Professional  Homeowner  Rental Equip.  
 Uso primario de la herramienta:  Profesional  Dueño de casa  Alquiler  
 Usage principal:  Professionnel  Résidentiel  Location

Do you wish to receive periodic ECHO product information and special offers by e-mail?  Yes  No

¿Desea usted recibir información periódica y ofertas especiales por correo electrónico sobre el producto ECHO?  Yes  No

Souhaitez-vous recevoir périodiquement de l'information sur les produits ECHO et les offres spéciales par courrier électronique?  Oui  Non

Did you visit the ECHO website before purchasing your product?  Yes  No

Visitéz usted la página web ECHO antes de comprar su producto?  Si  No

Avez-vous visité le site d'ECHO avant de procurer votre produit?  Oui  Non

What factor(s) most influenced your purchase?  Price  Dealer

Performance  Quality  Reliability  Prior Experience

Friend/Family  Brand  Warranty

Funcionamiento  Precio  Distribuidor

Confabilidad  Experiencia Anterior  Calidad

Amigo/Familia  Marca  Garantía

Quel facteur (facteurs) vous a influencé le plus?  Performance  Expérience

Fiabilité  Marquage

Ami/Famille  Garantie

ECHO INC., 400 Oakwood Rd., Lake Zurich, IL 60047

1.800.432.ECHO [WWW.ECHO-USA.COM](http://WWW.ECHO-USA.COM)

X7572270206 02-2012

Address : Dirección : Adresse		City : Ciudadad : Ville		State : Estado : Province		Zip Code : Código Postal : Code Postal	
E-Mail Address : Dirección De Correo Electrónico : Courrier Électronique				Date of Purchase : Fecha de la Compra : Date de l'achat			
Phone Number : Número De Teléfono : Téléphone				Where Purchased : Nombre del Almacén donde fue Comprado : Lieu d'achat			
Model Number : Numero del Modelo : No. de modèle		Serial Number : Numero de Serie : No. de série					

Registering your purchase enables us to contact you in the unlikely event of a service update or product recall and verifies your ownership in the event of loss. El registrar su compra nos permite estar en contacto con usted en caso de cualquier evento como el aviso de tiempo de servicio o la revocación del producto y verificación de propiedad en caso de robo o pérdida. L'enregistrement de votre achat nous permettra de vous contacter dans le cas improbable de modifications des instructions d'utilisation ou de rappel du produit et vérifier que vous êtes le propriétaire en cas de vol ou de perte.



---

## WARRANTY

---

### Limited Warranty Statement for ECHO 56 Volt Handheld Products and Walk Behind Mowers sold in USA and Canada

ECHO Incorporated warrants to the original retail purchaser that this ECHO brand 56 Volt outdoor product is free from defects in material and workmanship and agrees to repair or replace, at ECHO Incorporated's discretion, any defective product free of charge within these time periods from the date of purchase:

- If the product is for homeowner use:
  - Units and Bare Tool – 5 Years
  - Battery or charger – 2 years
- If the product is for commercial use:
  - Units and Bare Tool – 2 years
  - Battery or charger – 2 years
- If the product is for rental use: 90 days for all units, batteries, and chargers.
- Cutting attachments such as, but not limited to, bars, chains, sprockets, blades, tines, belts, PowerBroom™ and nylon trimmer heads for homeowner or non-income producing use will be covered for failures due to defects in material or workmanship for a period of 60 days from original product purchase date and 30 days for commercial / rental use. Any misuse from contact with concrete, rocks, or other structures is not covered by this warranty.

This warranty extends to the original retail purchaser only and commences on the date of the original retail purchase.

Any part of this product found in the reasonable judgment of ECHO Incorporated, to be defective in material or workmanship will be repaired or replaced without charge for parts and labor by an authorized ECHO dealer. Units, repair parts and accessories replaced under this warranty are warranted only for the balance of the original warranty period.

The product, including any defective part, must be returned to an authorized ECHO dealer within the warranty period. The expense of delivering the product to the service center for warranty work and the expense of returning it back to the owner after repair or replacement will be paid by the owner. ECHO Incorporated's responsibility in respect to claims is limited to making the required repairs or replacements and no claim of breach of warranty shall be cause for cancellation or rescission of the contract of sale of any ECHO brand 56 Volt outdoor product. Proof of purchase will be required by the dealer to substantiate any warranty claim. All warranty work must be performed by an authorized ECHO dealer.

This warranty does not cover any units, battery or charger that has been subject to misuse, neglect, negligence, or accident, or that has been operated in any way contrary to the operating instructions as specified in the Operator's Manual.

This warranty does not cover normal deterioration due to the use or exposure, and any repairs made necessary by normal wear, improper maintenance, improper lubrication, improper storage, dirt, abrasives, impact, moisture, water, rain, snow, rust, corrosion, varnish, or other similar conditions.

This warranty does not cover damage to chargers or batteries by improper charging voltage and batteries that have been exposed to temperatures beyond those specified in the Operator's Manual, batteries that have not been properly charged or batteries that have reached their useful life. This warranty does not apply to any damage to the product that is the result of improper maintenance or to any product that has been altered or modified. The warranty does not extend to repairs made necessary by normal wear or by the use of parts or accessories which are either incompatible with the ECHO brand 56 Volt outdoor product or adversely affect its operation, performance, or durability. In addition, this warranty does not cover wear to normal items such as, but not limited to:

Wear items – Bump Knobs, Outer Spools, Cutting Lines, Inner Reels, Felt Washers, Hitch Pins, Mulching Blades, Blower Fans, Blower and Vacuum Tubes, Vacuum Bag and Straps, Guide Bars, Saw Chains, Grass Catch Bag, Hedge Trimmer Blades, and Wheels

ECHO Incorporated, reserves the right to change or improve the design of this product without assuming any obligation to modify any product previously manufactured.

All implied warranties are limited in duration to the stated warranty period. Accordingly, any such implied warranties including merchantability, fitness for a particular purpose, or otherwise, are disclaimed in their entirety after the expiration of the appropriate five-year, two-year, one-year, 90-day, 60-day, or 30-day warranty period. ECHO Incorporated's obligation under this warranty is strictly and exclusively limited to the repair or replacement of defective parts. ECHO Incorporated, does not assume or authorize anyone to assume for them any other obligation. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. ECHO Incorporated, assumes no responsibility for incidental, consequential, or other damages including, but not limited to, expense of returning the product to an authorized dealer for ECHO brand 56 Volt outdoor products and expense of delivering it back to the owner, mechanic's travel time, telephone charges, rental of a like product during the time warranty service is being performed, travel, loss or damage to personal property, loss of revenue, loss of use of the product, loss of time, or inconvenience. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

This warranty applies to all ECHO brand 56 Volt outdoor products manufactured by or for ECHO Incorporated, and sold in the United States and Canada.

To locate your nearest authorized ECHO dealer, visit [www.ECHO-usa.com](http://www.ECHO-usa.com) or dial 1-800-432-ECHO (3246).

NOTES

---



406BP0000001 - 406BP9999999

407BP0000001 - 407BP9999999

410BP0000001 - 410BP9999999

411BP0000001 - 411BP9999999

421BP0000001 - 421BP9999999

423BP0000001 - 423BP9999999



**ECHO INCORPORATED**

400 Oakwood Road

Lake Zurich, IL 60047

[www.echo-usa.com](http://www.echo-usa.com)