

Operator's Manual HC-155 Hedge Trimmer

WARNING

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.

WARNING



Read and understand all provided literature before use. Failure to do so could result in serious injury.

Note: This product complies with CAN ICES-2/NMB-2.

TABLE OF CONTENTS

	_
Introduction	
Servicing Information	
Parts and Serial Number	
Service	4
ECHO Consumer Product Support	4
Product Registration	
Additional Literature	
Safety	
Manual Safety Symbols and Important Information	5
International Symbols	
Personal Condition and Safety Equipment	8
Equipment	
Emission Control (Exhaust & Evaporative)	14
EPA Emissions Control Information	14
Description	15
Contents	16
Assembly	17
Operation	
Fuel	
Starting Cold Engine	21
Starting Warm Engine	
Stopping Engine	
Hedge Trimming	
Maintenance	
Skill Levels	
Maintenance Intervals	
Air Filter	
Fuel Filter	
Spark Plug	
Cooling System	
Exhaust System	
Carburetor Adjustment	
Lubrication	
Blades	
Troubleshooting	
Storage	
Long Term Storage (Over 30 Days)	
Specifications	40
Notes	
Product Registration	
1 TOUROU TROUBURE GREEN TOUR TOUR TOUR TOUR TOUR TROUBLE TROUB	74

INTRODUCTION

Specifications, descriptions, and illustrative material in this literature are as accurate as possible. Specifications are subject to change without notice. Illustrations might include optional equipment and accessories, and might not include all standard equipment. Your equipment might appear slightly different than pictured equipment.



Read and understand all provided literature. Literature contains specifications and information for safety, operation, maintenance, storage, and assembly specific to this product. Scan QR codes for more information.



For additional literature, including safety manuals where applicable, or questions regarding terms used in this manual, visit:

https://www.echo-usa.com/manuals



OR

https://www.shindaiwa-usa.com/manuals



SERVICING INFORMATION

Parts and Serial Number

Genuine ECHO parts and assemblies for your ECHO products are available only from an Authorized ECHO Dealer. When you do need to buy parts, always have the model number and serial number of the unit with vou. For future reference write them in the space provided below.



Model No	_ Serial No
----------	-------------

Service

Service of this product during the warranty period must be performed by an Authorized ECHO Service Dealer. For the name and address of the Authorized ECHO Service Dealer nearest you, ask your retailer or call: 1-800-432-ECHO (3246). Dealer information is also available on our Web Site www.echo-usa.com. When presenting your unit for Warranty service/ repairs, proof of purchase is required.

ECHO Consumer Product Support

If you require assistance or have questions concerning the application, operation, or maintenance of this product, call the ECHO Consumer Product Support Department at 1-800-432-ECHO (3246) from 8:00 a.m. to 5:00 p.m. (Central Standard Time) Monday through Friday. Before calling, please know the model and serial number of your unit.

Product Registration

Register your ECHO equipment online at www.echo-usa.com or by filling out the product registration sheet included in this manual. Registering your product confirms warranty coverage and provides a direct link to ECHO if we find it necessary to contact you.

Additional Literature

In addition to finding information online, information is available from your Authorized ECHO Service Dealer, or by contacting ECHO Incorporated, 400 Oakwood Road, Lake Zurich, IL 60047, 1-800-432-ECHO (3246).

HC-155 SAFETY

SAFETY

Manual Safety Symbols and Important Information

Throughout this manual and on the product itself, you will find safety alerts and helpful, informational messages preceded by symbols or key words. The following is an explanation of those symbols and key words and what they mean to you.

▲ DANGER

The safety alert symbol accompanied by the word "DANGER" calls attention to an act or condition which WILL lead to serious personal injury or death if not avoided.

WARNING

The safety alert symbol accompanied by the word "WARNING" calls attention to an act or condition which CAN lead to serious personal injury or death if not avoided.

A CAUTION

The safety alert symbol accompanied by the word "CAUTION" calls attention to an act or condition which might lead to minor or moderate personal injury if not avoided.

NOTICE

The enclosed message provides information necessary for the protection of the unit.

Note: This enclosed message provides tips for use, care and maintenance of the unit.



CIRCLE AND SLASH SYMBOL

This symbol means the specific action shown is prohibited. Ignoring these prohibitions can result in serious or fatal injury.

International Symbols

Symbol	Description	Symbol	Description
	Read and understand Owners Manual.	+0	Fuel and oil mixture
	Wear eye, ear and head protection.		Finger Severing
STOP	Emergency Stop	ALLITHICALITY.	Hot Surface
	Wear hand and foot protection. Use two-handed		DO NOT smoke near fuel.
	Choke Control "COLD START" Position (Choke Closed)	Ignition ON OFF	Ignition ON / OFF
	Choke Control "RUN" Position (Choke Open)		Do not operate without guards in place.
X	Do not operate closer than 15 M (50 ft.) from electrical hazard.	H	Carburetor Adjustment - High speed mixture
<u> </u>	Safety/Alert	T	Carburetor Adjustment - Idle speed

Symbol	Description	Symbol	Description
4	Avoid all power lines. This unit is not insulated against electrical current.		Carburetor Adjustment - Low speed mixture
**	Plan retreat path from falling objects.	•	Purge Bulb
	DO NOT allow flames or sparks near fuel.	**	Wear slip resistant footwear.
	551150		ers at least 4.5 meters ift.) away.

Note: Not all symbols will appear on your unit.



SAFETY HC-155

Personal Condition and Safety Equipment

WARNING

Cancer and Reproductive Harm www.P65Warnings.ca.gov

WARNING



The muffler or catalytic muffler and surrounding cover may become extremely hot. Always keep clear of exhaust and muffler area, otherwise serious personal injury might occur.

WARNING

Users of this product risk injury to themselves and others if the unit is used improperly and/or safety precautions are not followed. Proper clothing and safety gear must be worn when operating unit.

Physical Condition

Your judgment and physical dexterity may not be good:

- · If you are tired or sick
- If you are taking medication
- · If you have taken alcohol or drugs

Operate unit only if you are physically and mentally well.

Eye Protection

WARNING

- ◆ Eye protection that meets ANSI Z87.1 or CE requirements must be worn whenever you operate the unit.
- For additional safety, a full-face shield can be worn over safety glasses or goggles to provide protection from sharp branches or flying debris.

HC-155 SAFETY

Hand Protection

Wear sturdy, no-slip, rubber work gloves to improve your grip on the handles. Gloves also provide protection against cuts and scratches, cold environments, and reduce the transmission of machine vibration to your hands.

Hearing and Ear Protection

ECHO recommends wearing personal protective equipment whenever unit is used.

Breathing Protection

Operators who are sensitive to dust or other common airborne allergens may need to wear a dust mask to prevent inhaling these materials while operating unit. Dust masks can provide protection against dust, plant debris, and other plant matter such as pollen. Make sure the mask does not impair your vision, and replace the mask as needed to prevent air restrictions.

Proper Clothing

Wear snug-fitting, durable clothing:

- Pants should have long legs, shirts should have long sleeves.
- DO NOT WEAR SHORTS.
- DO NOT WEAR TIES, SCARVES, JEWELRY, or clothing with loose or hanging items that could become entangled in moving parts or surrounding growth.
- Keep clothing buttoned or zipped, and keep shirt tails tucked in.
- · Wear sturdy work shoes with nonskid rubber soles.
- DO NOT WEAR OPEN TOED SHOES.
- DO NOT OPERATE UNIT WITH BARE FEET.

Keep long hair away from engine and air intake. Retain hair with cap or net.

Heavy protective clothing can increase operator fatigue, which may lead to heat stroke. Schedule heavy work for early morning or late afternoon hours when temperatures are cooler.

WARNING

The components of this machine generate an electromagnetic field during operation, which can interfere with some pacemakers. To reduce the risk of serious or fatal injury. persons with pacemakers should consult with their physician and the pacemaker manufacturer before operating this machine. In the absence of such information, ECHO does not recommend the use of this machine by anyone who has a pacemaker.

Extended Operation and Extreme Conditions

CAUTION

Prolonged exposure to cold and/or vibration can result in injury. Read and follow all safety and operation instructions to minimize risk of injury. Failure to follow instructions can result in painful wrist/hand/arm injuries.

It is believed that a condition called Raynaud's Phenomenon, which affects the fingers of certain individuals, may be brought about by exposure to vibration and cold. Exposure to vibration and cold may cause tingling and burning sensations, followed by loss of color and numbness in the fingers. The following precautions are strongly recommended, because the minimum exposure, which might trigger the ailment, is unknown.

- Keep your body warm, especially the head, neck, feet, ankles, hands, and wrists.
- Maintain good blood circulation by performing vigorous arm exercises during frequent work breaks, and also by not smoking.
- · Limit the hours of operation. Try to fill each day with jobs where operating the unit or other hand-held power equipment is not required.
- · If you experience discomfort, redness, and swelling of the fingers followed by whitening and loss of feeling, consult your physician before further exposing yourself to cold and vibration.


HC-155 SAFETY

Repetitive Stress Injuries (RSI)

It is believed that overusing the muscles and tendons of the fingers, hands, arms, and shoulders may cause soreness, swelling, numbness, weakness, and extreme pain in those areas. Certain repetitive hand activities may put you at a high risk for developing a Repetitive Stress Injury (RSI). An extreme RSI condition is Carpal Tunnel Syndrome (CTS), which could occur when your wrist swells and squeezes a vital nerve that runs through the area. Some believe that prolonged exposure to vibration may contribute to CTS. CTS can cause severe pain for months or even years.

To reduce the risk of RSI/CTS, do the following

- · Avoid using your wrist in a bent, extended, or twisted position. Instead try to maintain a straight wrist position. Also, when grasping, use your whole hand, not just the thumb and index finger.
- Take periodic breaks to minimize repetition and rest your hands.
- · Reduce the speed and force with which you do the repetitive movement.
- · Do exercises to strengthen the hand and arm muscles.

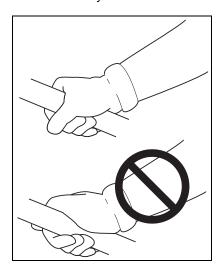

· Immediately stop using all power equipment and consult a doctor if you feel tingling, numbness, or pain in the fingers, hands, wrists, or arms. The sooner RSI/CTS is diagnosed, the more likely permanent nerve and muscle damage can be prevented.

All over head electrical conductors and communications wires can have electricity flow with high voltages. This unit is not insulated against electrical current. Never touch wires directly or indirectly, otherwise serious injury or death can result.

Do not operate this product indoors or in inadequately ventilated areas. Engine exhaust contains poisonous emissions and can cause serious injury or death.

SAFETY HC-155

Read the Manuals

· Provide all users of this equipment with the Operator's Manual for instructions on Safe Operation.

Clear the Work Area

 Spectators and fellow workers must be warned, and children and animals prevented from coming nearer than 15 m (50 ft.) while the unit is in use.

Keep a Firm Grip

 Always hold throttle handle and support handle with thumbs and fingers tightly encircling the handles.

Keep a Solid Stance

 Maintain footing and balance at all times. Do not stand on slippery. uneven or unstable surfaces. Do not work in odd positions or on ladders. Do not over reach.

Avoid Hot Surfaces

 Keep exhaust area clear of flammable debris. Avoid contact during and immediately after operation.





WARNING

Never perform blade maintenance procedures while engine is running.

HC-155 SAFETY

Equipment

WARNING

Use only approved attachments. Serious injury may result from the use of a non-approved attachment combination. ECHO Incorporated will not be responsible for the failure of cutting devices, attachments or accessories which have not been tested and approved by ECHO Incorporated. Read and comply with all safety instructions listed in this manual and safety manual.

- ♦ Check unit for loose or missing nuts, bolts, and screws. Tighten and/or replace as needed.
- ◆ Check that the cutting attachment is firmly attached and in safe operating condition. Dull, loose or damaged blades should not be used.

WARNING

Moving parts can amputate fingers or cause severe injuries. Keep hands, clothing and loose objects away from all openings.

- ◆ ALWAYS stop engine, disconnect spark plug, and make sure all moving parts have come to a complete stop before removing obstructions, clearing debris, or servicing unit.
- ◆ DO NOT start or operate unit unless all guards and protective covers are properly assembled to unit.
- ◆ NEVER reach into any opening while the engine is running. Moving parts may not be visible through openings.

WARNING

Periodically check fuel system (fuel lines, vent, grommet, fuel tank, and fuel cap) for leaks especially if the unit is dropped. If damage or leaks are found, do not use unit, otherwise serious personal injury or property damage may occur. Have unit repaired by an authorized servicing dealer before using.

EMISSION CONTROL (EXHAUST & EVAPORATIVE)

EPA Emissions Control Information

The emission control system for the engine is EM (engine modification) and, if the second to last character of the Engine Family on the Emission Control Information label (see example) is "B", "C", "K", or "T", the emission control system is EM and TWC (3-way catalyst). The fuel tank/fuel

EMISSION CONTROL INFORMATION

ENGINE FAMILY: XEHXS.0214KO DISPLACEMENT: 21.2 cc EMISSION COMPLIANCE PERIOD: 300 Hours THIS ENGINE MEETS U.S.EPA EXH/EVP EMISSION REGULATIONS FOR MODEL YEAR XXXX REFER TO OWNER'S MANUAL FOR MAINTENANCE SPECIFICATIONS AND ADJUSTMENTS.

YAMABIKO CORP.

line emission control system is EVAP (evaporative emissions).


An Emission Control Label is located on the engine. (This is an EXAMPLE ONLY, information on label varies by engine FAMILY).


Product Emission Durability (Emission Compliance Period)


The 50 or 300 hour emission compliance period is the time span selected by the manufacturer certifying the engine emissions output meets applicable emissions regulations, provided that approved maintenance procedures are followed as listed in the Maintenance Section of this manual.

DESCRIPTION

Locate the safety decal(s) or etching(s) on your unit. Make sure they are legible, and that you understand and follow the instructions. If any cannot be read, replacements can be ordered from your ECHO dealer. Images shown below are for example only. Those on your unit might appear slightly different.

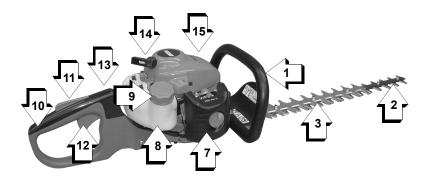

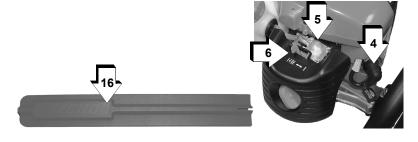

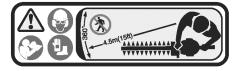







CONTENTS HC-155

- Support Handle For Right Hand
- 2. Blades
- Blade Guard
- Spark Plug
- 5. Purge Bulb
- 6. Choke
- 7. Air Cleaner
- 8. Fuel Tank
- 9. Fuel Tank Cap
- Throttle Handle For Left Hand 10.
- 11. Throttle Trigger Lockout
- 12. Throttle Trigger
- Stop Switch
- Recoil Starter Handle
- 15. Spark Arrester Muffler or Spark Arrester Muffler with Catalyst
- Blade Cover

CONTENTS

The ECHO product you purchased has been factory pre-assembled for your convenience. Due to packaging restrictions, some assembly may be necessary.

After opening the carton, check for damage. Immediately notify your retailer or ECHO Dealer of damaged or missing parts. Use the contents list to check for missing parts.

- 1 Hedge Trimmer Assembly
- 1 Operator's Manual
- 1 Warranty Statement
- 1 Blade Cover



ASSEMBLY

This model is factory assembled.

OPERATION

WARNING

Moving parts can amputate fingers or cause severe injuries. Keep hands, clothing and loose objects away from all openings. Always stop engine, disconnect spark plug, and make sure all moving parts have come to a complete stop before removing obstructions, clearing debris, or servicing unit.

WARNING

Engine exhaust IS HOT, and contains Carbon Monoxide (CO), a poison gas. Breathing CO can cause unconsciousness, serious injury, or death. Exhaust can cause serious burns. ALWAYS position unit so that exhaust is directed away from your face and body.

WARNING

Operation of this equipment may create sparks that can start fires around dry vegetation. This unit is equipped with a spark arrester to prevent discharge of hot particles from the engine. Metal cutters can also create sparks if the cutter strikes rocks. metal, or other hard objects. Contact local fire authorities for laws or regulations regarding fire prevention requirements.

OPERATION HC-155

Fuel

WARNING

Diesel fuels and alternative fuels, such as E-15 (15% ethanol), E-85 (85% ethanol) or any fuels not meeting ECHO requirements are NOT approved for use in ECHO 2-stroke gasoline engines. Use of diesel or alternative fuels can cause performance problems, loss of power, overheating, fuel vapor lock, and unintended machine operation, including, but not limited to, improper clutch engagement. Diesel or alternative fuels can also cause premature deterioration of fuel lines, gaskets, carburetors and other engine components.

Fuel Requirements

Gasoline - Use fresh (purchased within the last 30 days from the pump) 89 Octane [R+M/2] (mid grade or higher) gasoline known to be good quality. Gasoline may contain up to 10% Ethanol (grain alcohol) or 15% MTBE (methyl tertiary-butyl ether). Gasoline containing methanol (wood alcohol) is NOT approved. Use of ECHO branded fuel is recommended to extend engine life in all air-cooled 2-stroke and 2/4-stroke hybrid engines.

Two Stroke Oil - A two-stroke engine oil, such as ECHO branded 2-stroke oils, meeting ISO-L-EGD (ISO/CD 13738) and J.A.S.O. FD Standards must be used. ECHO branded 2-stroke oils meet these standards. Engine problems due to inadequate lubrication caused by failure to use an ISO-L-EGD (ISO/CD 13738) and J.A.S.O. M345-FD certified oil will void the twostroke engine warranty.

WARNING

2-Stroke engine oil contains petroleum distillates and other additives that may be harmful if swallowed. Heated oil can release vapors that can cause flash fire, or ignite with explosive force. Read and follow the oil manufacturer's instructions, and observe all safety warnings and precautions for handling flammable liquids. For more detailed safety and first aid information, visit www.echo-usa.com for a copy of the Material Safety Data Sheet.

- KEEP OUT OF REACH OF CHILDREN.
- ◆ If swallowed, do not induce vomiting. CALL PHYSICIAN OR A POISON CONTROL CENTER IMMEDIATELY.
- ◆ WEAR SAFETY GLASSES when mixing or handling.



- AVOID repeated or prolonged skin contact.
- AVOID inhaling oil mists or vapors.

ECHO branded 2-stroke oils may be mixed at 50:1 ratio for application in all ECHO engines sold in the past regardless of ratio specified in those manuals.

Handling Fuel

Fuel is VERY flammable. Use extreme care when mixing, storing or handling, or serious personal injury will result.

- ♦ Use an approved fuel container. Mark fuel containers as containing 2-stroke mixture fuel.
- DO NOT smoke near fuel.
- DO NOT allow flames or sparks near fuel.
- ◆ Fuel tanks/cans may be under pressure. Always loosen fuel caps slowly allowing pressure to equalize.
- NEVER refuel a unit when the engine is HOT or RUNNING!
- DO NOT fill fuel tanks indoors. ALWAYS fill fuel tanks outdoors over bare ground.
- ◆ DO NOT overfill fuel tank. Wipe up spills immediately.
- ◆ Securely tighten fuel tank cap and close fuel container after refueling.
- ◆ Inspect for fuel leakage. If fuel leakage is found, do not start or operate unit until leakage is repaired.
- ◆ Use caution when handling fuel. Mix and pour fuel outdoors where there are no sparks and flames. Slowly remove the fuel cap only after stopping the engine and allowing the unit to cool. Do not smoke while fueling or mixing fuel. Move the unit at least 10 feet (3 m) from the fueling point before starting the engine.

OPERATION HC-155

DANGER

Gasoline vapor is heavier than air, and can travel along the ground to nearby sources of ignition such as electrical motors, pilot lights, and hot or running engines. Vapors ignited by an ignition source can flash back to the fuel container, resulting in an explosion, fire, serious or fatal injuries, and extensive property damage.

Mixing Instructions

NOTICE

Stored fuel ages. Do not mix more fuel than you expect to use in 30 days, 90 days when a fuel stabilizer is added.

- Fill an approved fuel container with half of the required amount of gasoline.
- Add the proper amount of 2. 2-stroke oil to gasoline.
- 3. Close container and shake to mix oil with gasoline.
- 4. Add remaining gasoline, close fuel container, and remix.

Fuel to Oil Mix – 50:1 Ratio		Ratio	
US		Ме	tric
Gas	Oil	Gas	Oil
gal.	fl.oz.	L	СС
1	2.6	5	100
2	5.2	10	200
5	13	25	500

NOTICE

Spilled fuel is a leading cause of hydrocarbon emissions. Some locations may require the use of automatic fuel shut-off containers to reduce fuel spillage.

Storage - Fuel storage laws vary by locality. Contact your local government for the laws affecting your area. As a precaution, store fuel in an approved, airtight container. Store in a well-ventilated, unoccupied building, away from sparks and flames.

· Empty the fuel tank prior to storing the unit. Return unused fuel to an approved fuel storage container.

Stored two-stroke fuel can separate. ALWAYS shake fuel container thoroughly before each use.

NOTICE

Used oil and gasoline, and soiled towels are hazardous waste materials. Disposal laws vary by locality.

Starting Cold Engine


WARNING

Hedge Trimmer blades are very sharp. Touching them may lead to severe personal injury. Avoid touching blades whenever possible, and always wear gloves to protect hands.

Note: The blade cover is used for transportation and storage. Remove blade cover before using the unit.

1. Stop Switch

Move stop switch (A) away from the STOP position.

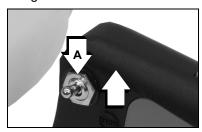


Choke

Move choke (B) to COLD START ((►) (closed) position.

3. Purge Bulb


Pump purge bulb (C) until fuel is visible and flows freely in the clear fuel tank return line. Pump bulb an additional 4 or 5 times.

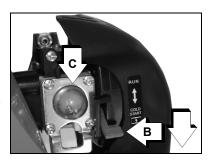

OPERATION HC-155

4. Recoil Starter


Lay the unit on a flat, clear area. Grip the support handle securely with one hand, and pull the recoil starter handle (D) until engine fires (or 5 pulls maximum).

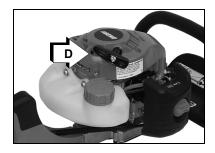

5. Choke

After engine fires (or 5 pulls), move choke (B) to the RUN (| | | (open) position. Restart engine if necessary and allow unit to warm up at idle for several minutes.

Note: If engine does not start with choke in "RUN" position after 5 pulls. repeat instructions 2 - 5.

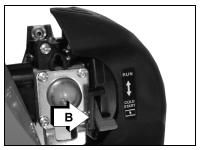


WARNING

The blades must not move at idle, otherwise serious personal injury may result. Periodic carburetor adjustment may be necessary to assure blades do not move at idle. If blades move, readjust carburetor according to "Carburetor Adjustment" instructions in this manual or see your ECHO Dealer.

6. Throttle Trigger

After engine warm-up, grip the throttle handle and support handle. Depress the throttle trigger lockout (E), and gradually depress throttle trigger (F) to increase engine RPM to operating speed.

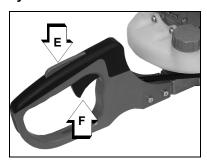

Starting Warm Engine


The starting procedure is the same as Cold Start except DO NOT close the choke.

WARNING

The blades must not move at idle, otherwise serious personal injury may result. Periodic carburetor adjustment may be necessary to assure blades do not move at idle. If blades move, readjust carburetor according to "Carburetor Adjustment" instructions in this manual or see your ECHO Dealer.


1. Stop Switch

Move stop switch (A) away from the STOP position.

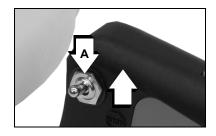

2. Purge Bulb


Pump purge bulb (C) until fuel is visible and flows freely in the clear fuel tank return line. Pump bulb an additional 4 or 5 times

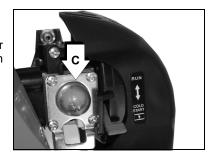

Recoil Starter 3.

Place the unit on a flat, clear area. Grip the support handle securely with one hand, and pull the recoil starter handle (D) until engine starts.

Note: If engine does not start after 5 pulls, use Cold Start Procedure.

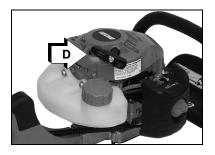


OPERATION HC-155


Stopping Engine

Throttle 1.

> Release throttle trigger (F) and allow engine to return to idle before shutting off engine.

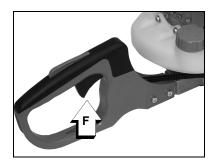

2. Stop Switch Move stop switch (A) to STOP position.

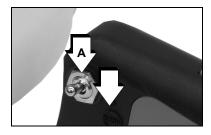

WARNING

If engine does not stop when stop switch is moved to STOP position, close choke - COLD START position - to stall engine. Have your ECHO dealer repair stop switch before using unit again.

Hedge Trimming


WARNING

Hedge Trimmer blades are very sharp. Touching them may lead to severe personal injury. Avoid touching blades whenever possible, and always wear gloves to protect hands.

WARNING

Always check hedges and bushes for foreign objects before trimming.

- Always grip support handle with right hand, and throttle handle with left hand.
- Hold trimmer firmly and squeeze throttle trigger to accelerate engine.
- 3. Tilt trimmer so cutting teeth are angled slightly toward the hedge or shrub and proceed to cut.

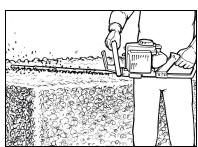

WARNING

Never remove hands from unit when blades are moving.

WARNING

The engine continues running even when the blades have stopped due to an obstruction. If this occurs, stop the engine, disconnect ignition cable and remove the obstruction.

MAINTENANCE

WARNING

Moving parts can amputate fingers or cause severe injuries. Keep hands, clothing and loose objects away from all openings. Always stop engine, disconnect spark plug, and make sure all moving parts have come to a complete stop before removing obstructions, clearing debris, or servicing unit. Allow the unit to cool before performing maintenance or adjustments. Wear gloves to protect hands from sharp edges and hot surfaces.

WARNING

Operating a poorly maintained unit can result in serious injuries to operator or bystanders. Always follow all maintenance instructions as written, otherwise serious personal injury can result.

Your unit is designed to provide many hours of trouble free service. Regular scheduled maintenance will help your unit achieve that goal. If you are unsure or are not equipped with the necessary tools, we recommend that you take your unit to a Servicing Dealer for maintenance. To help you decide whether you want to DO-IT-YOURSELF or have the Dealer do it, each maintenance task has been graded. If the task is not listed, see your Dealer for repairs.

NOTICE

The use of emission control components other than those specifically designed for this unit is a violation of federal law.

Skill Levels

Level 1 = Easy to do. Common tools may be required.

Level 2 = Moderate difficulty. Some specialized tools may be required.

Level 3 = See your dealer.

Click HERE or go to http://www.echo-usa.com/products/maintenance-kit

or

HERE https://www.shindaiwa-usa.com/you-can.aspx

Maintenance Intervals

COMPONENT/SYSTEM	MAINTENANCE PROCEDURE	REQUIRED SKILL LEVEL
Daily or Before Use		
Air Filter	Inspect/Clean *	
Choke Shutter	- Inspect/Clean	1
Fuel System	Inspect ³	
Cooling System	Inspect/Clean	2
Recoil Starter Rope	Inspect/Clean *	
Screws/Nuts/Bolts	Inspect/Tighten/Replace *	1
Blades	Inspect/Clean ²	
Every Refuel		
Fuel System	Inspect ³	1
Three Months		
Air Filter	Replace *	
Fuel Filter	-Inspect *	1
Fuel Cap Gasket	- Inspect	
Spark Plug	Inspect/Clean/Replace *	1
Muffler Spark Arrester	- IIIspect/Clean/Neplace	
Cylinder Exhaust Port	Inspect/Clean/De-carbon	2
Gear Housing	Grease ¹	
Yearly	•	
Fuel Filter	Inspect/Replace *	1
Fuel Cap Gasket	Replace *	ı

IMPORTANT NOTE - Time intervals shown are maximum. Actual use and your experience will determine the frequency of required maintenance.

MAINTENANCE PROCEDURE NOTES:

¹ Apply lithium based grease every 25 hours of use.

² Inspect blade, and clean and sharpen as needed. Lubricate blades periodically during use.

³ Low evaporative fuel tanks DO NOT require regular maintenance to maintain emission integrity.


^{*} Replacement is recommended based on the finding of damage or wear during inspection.

Air Filter


Level 1.

Parts Required: Tune-Up Kit

Close choke (B) (COLD START [] position). This prevents dirt from entering the carburetor throat when the air filter is removed. Brush accumulated dirt from air cleaner area.

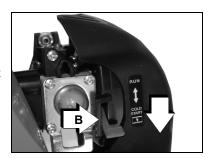

- 2. Remove air filter cover. Brush dirt from inside cover.
- 3. Replace filter if it is damaged, fuel soaked, very dirty, or the rubber sealing edges are deformed.
 - · Lightly brush debris from filter.
 - · Soak heavily soiled filters in water/detergent solution to loosen dirt, then brush lightly.
 - · Rinse with clean water and allow to dry completely before reuse.
- 4. Install air filter in air filter case.
- 5. Install air filter cover.

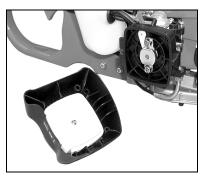

Fuel Filter

Level 1.

Parts Required: Tune-Up Kit

DANGER

Fuel is VERY flammable. Use extreme care when mixing, storing or handling, or serious personal injury may result.

- Use a clean rag to remove loose dirt from around fuel cap and empty fuel tank.
- 2. Pull the fuel line and filter from the tank.



NOTICE

Do not damage fuel line while removing fuel filter from tank.

Remove the filter from the line and install the new filter.

Note: Federal EPA regulations require all model year 2012 and later gasoline powered engines produced for sale in the United States to be equipped with a special low permeation fuel supply hose between the carburetor and fuel tank. When servicing model year 2012 and later equipment, only fuel supply hoses certified by EPA can be used to replace the original equipment supply hose. Fines up to \$37,500 may be enforced for using an un-certified replacement part.

Spark Plug


Level 2.

Parts Required: Tune-Up Kit

NOTICE

Use only NGK BPMR8Y spark plug otherwise severe engine damage may occur.

- Remove spark plug and check for fouling, worn and rounded center electrode.
- 2. Clean the plug or replace with a new one. DO NOT sand blast to clean. Remaining sand will damage engine.
- Adjust spark plug gap by 3. bending outer electrode.

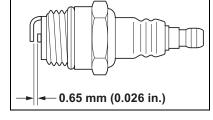

Tighten spark plug to 150-170 kgf • cm (130-150 lbf • in). 4.

Cooling System

Level 2.

NOTICE

To maintain proper engine operating temperatures, cooling air must pass freely through the cylinder fin area. This flow of air carries combustion heat away from the engine.

Overheating and engine seizure can occur when:

- · Air intakes are blocked, preventing cooling air from reaching the cylinder.
- Dust and grass build up on the outside of the cylinder. This build up insulates the engine and prevents the heat from leaving.

Removal of cooling passage blockages or cleaning of cooling fins is considered "Normal Maintenance." Any failure attributed to lack of maintenance is not warranted.

- Remove spark plug lead. 1.
- 2. Remove muffler cover.
- 3. Remove starter cover.
- 4. Use brush (not included) to remove dirt from the cylinder fins.



OTICE

DO NOT use a metal scraper to remove dirt from the cylinder fins.

Assemble components in reverse order.

Exhaust System

Spark Arrester Screen

Level 2.


Parts Required: Spark Arrester Screen, Gasket

- 1. Remove spark plug lead.
- 2. Remove muffler cover.
- 3. Place piston at Top Dead Center (TDC) to prevent carbon/dirt from entering cylinder.



- Remove exhaust guide (A), gasket (B), and screen (C) from muffler body.
- Clean carbon deposits from muffler components.

Note: When cleaning carbon deposits, be careful not to damage the catalytic element inside muffler.

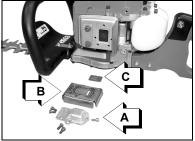


- 6. Replace screen if it is cracked, plugged, or has holes burned through.
- 7. Assemble components in reverse order.

Exhaust Port Cleaning

Level 2.

Parts Required: As needed: Heat Shield

- Remove spark plug lead from spark plug, and remove muffler cover.
- 2. Place piston at top dead center. Remove muffler (A), heat shield (B), and eye plate (C).

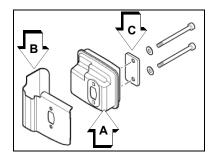

NOTICE

Never use a metal tool to scrape carbon from the exhaust port. Do not scratch the cylinder or piston when cleaning the exhaust port. Do not allow carbon particles to enter the cylinder.

- Use a wood or plastic scraping 3. tool (not included) to clean deposits from cylinder exhaust port.
- 4. Inspect heat shield, and replace if damaged.
- 5. Install heat shield, muffler, and eve plate.
- Tighten muffler mounting bolts 6. (or nuts) to 90-110 kgf•cm (80-95 lbf•in).



- 7. Install muffler cover and attach spark plug lead.
- 8. Start engine, and warm to operating temperature.
- 9. Stop engine, and re-tighten mounting bolts (or nuts) to specifications.

Carburetor Adjustment

WARNING

The blades must not move at idle, otherwise serious personal injury may result. Periodic carburetor adjustment may be necessary to assure blades do not move at idle. If blades move, readjust carburetor according to these instructions, or see your ECHO Dealer.

Engine Break-In

New engines must be operated a minimum duration of two tanks of fuel break-in before carburetor adjustments can be made. During the break-in period your engine performance will increase and exhaust emissions will stabilize. Idle speed can be adjusted as required.

High Altitude Operation

This engine has been factory adjusted to maintain satisfactory starting, emission, and durability performance up to 1,100 feet above sea level (ASL) (96.0 kPa). To maintain proper engine operation above 1,100 feet ASL the carburetor may need to be adjusted by an authorized ECHO service dealer.


If the engine is adjusted for operation above 1,100 feet ASL, the carburetor must be re-adjusted when operating the engine below 1,100 feet ASL, otherwise severe engine damage may result.

Level 2.

Parts Required: None

Note: Every unit is run at the factory and the carburetor is set in compliance with emission regulations. Carburetor adjustments, other than idle speed, must be performed by an authorized ECHO dealer.

Check idle speed and reset if necessary. If a tachometer is available, idle speed screw (A) should be set to the specifications found on "Specifications" page of this manual. Turn idle screw (A) clockwise to increase idle speed: counter clockwise to decrease idle speed.

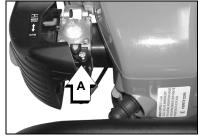

WARNING

When carburetor adjustment is completed, the cutting attachment should not move at idle, otherwise serious personal injury may result.

Lubrication

Blades

Level 1.

Parts required: ECHO RedArmor™ Blade Cleaner & Lubricant, or 20W Engine Oil (for blade lubrication), 50-50 mixture of kerosene and 20W oil (for blade cleaning).

WARNING

Hedge Trimmer blades are very sharp. Touching them may lead to severe personal injury. Avoid touching blades whenever possible, and always wear gloves to protect hands.

- Move stop switch to stop position.
- 2. Disconnect spark plug wire from spark plug.
- 3. Brush loose debris from blade and coat both sides of blade with the 50-50 cleaning mixture.




- 4. Allow cleaning mixture to soften the remaining gummy residue then wipe it from the blade.
- Apply clean oil to the entire length of the blade. Be certain the blade 5. bolts are lubricated.
- 6. Wipe excess oil from the blade before putting the unit back in service.

Gear Box

Level 1.

Parts required: Lithium-based Grease.

- Clean dirt from the grease fitting (A).
- Apply 1-2 pumps of grease into fitting, DO NOT over fill. Leave room for the grease to expand during operation
- Wipe excess grease from around 3. grease fitting.

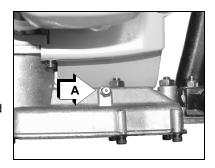

Blades

WARNING

Hedge trimmer blades are very sharp, touching them may lead to severe personal injury. Use long hex wrenches and sockets with extensions when tightening blade screws and blade lock nuts to keep hands at a safe distance from sharp blades.

Blades should only be removed and reinstalled by an authorized servicing dealer, otherwise premature wear or internal damage may occur.


Sharpening

Level 2.

NOTICE

If a power grinder is used DO NOT allow blade to over heat.

- Move stop switch to STOP 1. position.
- 2. Disconnect spark plug wire.
- 3. Remove blade quard.
- 4 Slide blades to allow file clearance using slots (A) on bottom of blade. Do not pry against cutting edges.

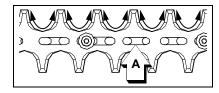

- 5. File each edge carefully. Follow the original shape of the blade.
- 6. Install blade quard.

NOTICE

Use new lock nuts each time blade guard is installed. See dealer for correct nuts.

- 7. Lubricate blades (see "Lubrication").
- 8. Connect spark plug wire.


Adjustment

Level 2.

NOTICE

Locking ability of hedge trimmer blade lock nuts will diminish each time they are removed. Replace if turning resistance is not felt when installing lock nuts.

- 1. Tighten blade screws securely.
- 2. Hold blade screws (A) to prevent turning, and tighten lock nuts (B).

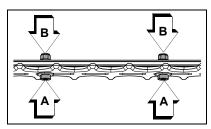

TROUBLESHOOTING

	ENGINE PRO	BLEM TROU	BLESHOOTING (CHART
Problem	Check	Status	Cause	Remedy
	Fuel at carburetor	No fuel at carburetor	Fuel strainer or fuel line obstructed	Clean or replace See your dealer
		No fuel at cylinder	Carburetor	See your dealer
				OPEN choke
Engine starts hard	Fuel at cylinder	Muffler wet with fuel	Fuel mixture too	Clean or replace air filter
or		Williue	HOH	Adjust carburetor
For add a				See your dealer
Engine does not start	Spark at end of plug		STOP switch OFF - Electrical problem -	Turn switch to ON
	wire		Interlock switch	See your dealer
	Spark at	No spark	Incorrect gap - Covered with carbon - Fouled with fuel - Plug	Adjust to 0.65 mm (0.026 in.)
	plug		defective	Clean or replace plug
Engine	Air filter	Air filter dirty	Normal wear	Clean or replace
runs, but dies	Fuel filter	Fuel filter dirty	Contaminants or residue in fuel	Replace filter or replace fuel
or				
Engine does not accelerate properly	Fuel vent	Fuel vent plugged	Contaminated fuel	Clean or replace

STORAGE HC-155

	ENGINE PRO	BLEM TROU	BLESHOOTING (CHART
Problem	Check	Status	Cause	Remedy
Engine	Spark plug	Plug dirty or worn	Normal wear	Clean and adjust or replace
runs, but dies	Carburetor	Improper adjustment	Vibration	Adjust
or Engine	Cooling system	Cooling system dirty or plugged	Extended operation in dirty or dusty locations	Clean
does not accelerate properly	Spark arrester screen	Spark arrester screen plugged	Normal wear	Replace
Engine does not crank	N	I/A	Internal engine problem	See your dealer

DANGER

Fuel vapors are extremely flammable and can cause fire and/or explosion. Never test for ignition spark by grounding spark plug near cylinder plug hole, otherwise serious personal injury can result.

STORAGE

WARNING

The muffler and surrounding cover become hot during operation. Always keep exhaust area clear of flammable debris during transportation or when storing, otherwise serious property damage or personal injury may result.

WARNING

Hedge Trimmer blades are very sharp. Touching them may lead to severe personal injury. Avoid touching blades whenever possible, and always wear gloves to protect hands.

HC-155 STORAGE

A DANGER

Do not store in enclosure where fuel fumes may accumulate or reach an open flame or spark, otherwise serious personal injury may result.

NOTICE

Always store and transport hedge trimmers in a stable, horizontal position. Support gear case and cutting blades to prevent excessive flexing, which may cause damage to these components. Always install scabbard when transporting or storing unit.

Long Term Storage (Over 30 Days)

Do not store your unit for a prolonged period of time (30 days or longer) without performing protective storage maintenance which includes the following:

- 1. Store unit in a dry, dust free place, out of the reach of children.
- 2. Place the stop switch in the "STOP" position.
- Remove accumulation of grease, oil, dirt and debris from exterior of unit.
- 4. Perform all periodic lubrication and services that are required.
- Apply clean oil to the entire length of the blade. Be certain the blade bolts are lubricated.
- Install scabbard on blades.
- 7. Tighten all the screws and nuts.
- 8. Drain fuel tank completely. Press purge bulb six to seven times to remove remaining fuel from carburetor then drain the tank again. Close choke, start and run the engine until it stops due to lack of fuel.
- 9. Allow engine to cool. Remove the spark plug lead from the spark plug. Remove the spark plug. Pour 7 cc (0.25 oz.) of fresh, clean, two-stroke engine oil into the cylinder through the spark plug hole.
 - a. Place a clean cloth over the spark plug hole.
 - Pull the recoil starter handle two to three times to distribute the oil inside the engine.
 - c. Observe the piston location through the spark plug hole. Pull the recoil handle slowly until the piston reaches the top of its travel and leave it there.
- 10. Install the spark plug. Connect the spark plug lead to the spark plug.

SPECIFICATIONS

MODEL	HC-155
Length	1154 mm (45.4 in.)
Width	272 mm (10.7 in.)
Height	201 mm (7.9 in.)
Weight (dry)	5.1 kg (11.3 lb.)
Engine Type	Air-cooled, two-stroke, single cylinder gasoline engine
Bore	32.2 mm (1.27 in.)
Stroke	26.0 mm (1.02 in.)
Displacement	21.2 cc (1.29 cu. in.)
Exhaust	Spark arrester muffler or spark arrester muffler with catalyst
Carburetor	Diaphragm with purge pump
Ignition System	Flywheel magneto, capacitor discharge ignition type
Spark Plug	NGK BPMR8Y (Gap 0.65 mm (0.026 in.)
Fuel	Mixed (Gasoline and Two-stroke Oil)
Fuel/Oil Ratio	50 : 1
Gasoline	Use 89 Octane unleaded. Do not use fuel containing methyl alcohol, more than 10% ethyl alcohol or 15% MTBE. Do not use alternative fuels such as E-15 or E-85.
Oil	ISO-L-EGD (ISO/CD 13738) and J.A.S.O. M345- <u>FD</u> , two-stroke, air-cooled engine oil.
Fuel Tank Capacity	0.5 lit. (16.9 US fl. oz.)
Starter System	Automatic Recoil Starter
Clutch	Centrifugal Type
Gear Case Ratio	5.88:1
Cutter	Double Reciprocating Blade, Double Edge
Length	621mm (24.4 in.)
Pitch	35 mm (1.38 in.)
Height	20.4mm (0.80 in.)
Maximum Diameter Cut:	
Soft Material	25.4 mm (1 in.)
Woody Material	13 mm (1/2 in.)
Idle Speed	3,300 RPM
Clutch Engagement Speed	
Wide Open Throttle Speed	11,250 RPM

HC-155 NOTES

NOTES

PRODUCT REGISTRATION

Thank you for choosing ECHO Power Equipment

Please go to http://www.echo-usa.com/Warranty/Register-Your-ECHO to register your new product on-line. It's FAST and EASY! NOTE: your information will never be sold or misused by ECHO, Incorporated. Registering your purchase enables us to contact you in the unlikely event of a service update or product recall, and verifies your ownership for warranty consideration.

If you do not have access to the Internet, you can complete the form below and mail to:

ECHO Incorporated, Product Registration, PO Box 1139, Lake Zurich, IL 60047.

$/\!\!\!/\!\!\!/$ PRODUCT REGISTRATION CARD:TARJETA DE REGISTRO:CARTE D'ENREGISTREMENT DU PRODUIT

be alerted of product updates and/or be sent new ECHO product information and special offers. Simply no to:
₹

lease Print : Por Favor Enscriba Con Letra De Molde : En Lettre Carré S.V.P.

OR INTERNET: Registrese en la pagina web y estampilat. La eficitaria sobre actualizaciones del se enviara información sobre los nuevos proteción y las ofertas especiales. Simplemente visite. www echo-usa com Confidential: Information provided will not be shared or sold

OPTION EN LIGNE: Enregistrer en ligne et épargner un finnnel Vous serez informé sur les nouveaux produits ECHO et les mises à jour de produit ainsi que les offres spéciales. Simplement visitez le: www.echo-usa.com

Purchaser's Name : Nombre del Comprador : Nom de l'acheteur	rr : Nom de l'ach	steur		Primary use of foot. Drofessional I Homowiner Lental Equip. Use of tool: Let herranienta: Drofessional Dueno de casa DAquiler Usage principal: Drofessionnel Dresidential Location	p. uiler
				Do you wish to receive periodic ECHO product information and special offers	offers
Address : Dirección : Adresse				by e-mail? ☐ Yes ☐ No	
				¿Desea usted recibir información periódica y ofertas especiales por correo electronico sobre el producto ECHO? ☐ Yes ☐ No	-00
				Souhaitez-vous recevoir périodiquement de l'information sur les produits	
City : Ciudad : Ville	State : Estado :	Zip Code : Códig	Zip Code : Código Postal : Code Postal	ECHO et les offres spéciales par courrier électronique ? Oui Non	on
1	Province			Did you visit the ECHO website before purchasing your product? ☐ Yes ☐ No	
E-Mail Address : Dirección De Correo Electrónico : Courrier Électronique	ctrónico : Courri	er Électronique		Visitó usted la pagina web ECHO antes de comprar su producto?	
				Avez-vous visité le site d'ECHO avant de procurer votre produit?	
Phone Number : Número De Teléfono : Téléphone	Н	ate of Purchase :	Date of Purchase : Fecha de la Compra :	What factor(s) most influenced your purchase?	
	_	Date de l'achat		ice Price	
				☐ Reliability ☐ Prior Experience ☐ Quality ☐ Friend/Family ☐ Brand ☐ Warranty	
Where Purchased : Nombre del Almacén donde fue Comprado : Lieu d'achat	onde fue Compra	ido : Lieu d'achat		influenció más en su compri	
				ito Precio	
				☐ Contrabilidad ☐ Experiencia Anterior ☐ Calidad ☐ Amigo/Familia ☐ Marca ☐ Garantía	
Model Number : Numero del Modelo : No. de modéle Serial Number : Numero de Serie : No. de série	le modéle Seria	Number : Nume	ro de Serie : No. de série	Quel facteur (facteurs) vous a influencé le plus?	
				ance Prix	
				☐ Expérience	
egistering your purchase enables us to contact you in the unlikely event of a service update or product recall and verifies your important or the event of less of a cristian surent or less o	in the unlikely event	of a service update or	product recall and verifies your	☐ Ami/Famille ☐ Marque ☐ Garantie	
omo el áxiso de tiempo de servicio ó la revocación del producto y verificación, de propiedad en caso de robo o bérdida. en registrement de votre achat house permitante e unos contacter desirs e can impodable de modificacions des instructions en entretien ou de rappe du produit et verifier que vous étes le proprietine en cas de vol ou de perfie.	lel producto y verification of the contacter dans les etes le propriétaire	cas improbable de m en cas de vol ou de p	odifications des instructions erte.	ECHO Incorporated 400 Oakwood Rd., Lake Zurich, IL 60047 1,800.432.ECHO WWW.ECHO-USA.COM X75722705	X7572270206 02-2012

Regisfering your purchase anothers is no cared you in the unitary even for severice unded ever produ movestrip the event of less. Ell gogston au company has permite estern to calcate on the severice and some a faire de largne case severice of executación del productulo y verificación de propiedad en resso como el alive de largne de severice de severice de la calcada de la calcada de productulo terregisterament de vortre achai nous germetra de vous sontaced dans les cas improbable de modificar d'entretien ou de rappel du produit et vérifier que vous êtes le proprietaire en cas de vol ou de penti.

43

U81612001001 - U81612999999 U81713001001 - U81713999999



400 Oakwood Road Lake Zurich, IL 60047 www.echo-usa.com