



Operator's Manual PB-580H/T Power Blower

WARNING

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.

WARNING



Read and understand all provided literature before use. Failure to do so could result in serious injury.

Note: This product complies with CAN ICES-2/NMB-2.

TABLE OF CONTENTS

Introduction..... 3

Servicing Information..... 4

 Parts and Serial Number..... 4

 Service..... 4

 ECHO Consumer Product Support..... 4

 Product Registration..... 4

 Additional Literature..... 4

Safety..... 5

 Manual Safety Symbols and Important Information..... 5

 International Symbols..... 6

 Personal Condition and Safety Equipment..... 8

 Equipment..... 13

Emission Control..... 14

 CARB and EPA Emission Control Information..... 14

Description..... 15

Contents..... 17

Assembly..... 18

 PB-580H - Install Blower Pipes and Stick Handle..... 18

 PB-580T - Install Blower Pipes and Throttle Handle..... 19

Operation..... 21

 Fuel..... 22

 Starting Cold Engine..... 25

 Starting Warm Engine..... 26

 Stopping Engine..... 26

Maintenance..... 28

 Skill Levels..... 29

 Maintenance Intervals..... 29

 Air Filter..... 30

 Fuel Filter..... 31

 Spark Plug..... 32

 Cooling System..... 32

 Exhaust System..... 34

 Carburetor Adjustment..... 36

 Throttle Cable Adjustment (T-Model only)..... 37

Troubleshooting..... 38

Storage..... 40

 Transportation..... 40

 Short-Term Storage..... 40

 Long-Term Storage (Over 30 Days)..... 40

Specifications..... 42

Product Registration..... 44

Notes..... 46

INTRODUCTION

Specifications, descriptions, and illustrative material in this literature are as accurate as possible. Specifications are subject to change without notice. Illustrations might include optional equipment and accessories, and might not include all standard equipment. Your equipment might appear slightly different than pictured equipment.



Read and understand all provided literature. Literature contains specifications and information for safety, operation, maintenance, storage, and assembly specific to this product. Scan QR codes for more information.



For additional literature, including safety manuals where applicable, or questions regarding terms used in this manual, visit:

<https://www.echo-usa.com/technical-documentation>



OR


<https://www.shindaiwa-usa.com/technical-documentation>



SERVICING INFORMATION

Parts and Serial Number

Genuine ECHO parts and assemblies for your ECHO products are available only from an Authorized Service Dealer. When you do need to buy parts, always have the model number and serial number of the unit with you. Image shows serial number location. For future reference write them in the space provided below.

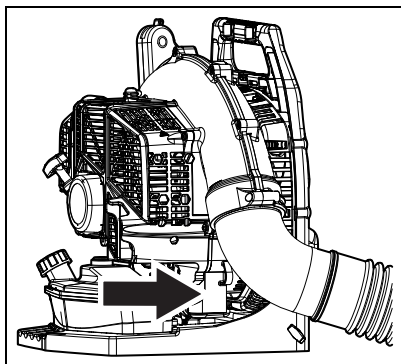

Model No. _____ Serial No. _____

Service

Service of this product during the warranty period must be performed by an Authorized Service Dealer. For the name and address of the Authorized Service Dealer nearest you, ask your retailer or call 1-800-432-ECHO (3246). Authorized Service Dealer information is also available on our website <https://www.echo-usa.com>. When presenting your unit for warranty service/repairs, proof of purchase is required.

ECHO Consumer Product Support

If you require assistance or have questions concerning the application, operation, or maintenance of this product, call the ECHO Consumer Product Support Department at 1-800-432-ECHO (3246) from 8:00 a.m. to 5:00 p.m. (Central Standard Time) Monday through Friday. Before calling, please know the model and serial number of your unit.

Product Registration

Register your ECHO equipment online at <https://www.echo-usa.com> or by filling out the product registration sheet included in this manual. Registering your product confirms warranty coverage and provides a direct link to ECHO if we find it necessary to contact you.

Additional Literature

In addition to finding information online, information is available from your Authorized Service Dealer, or by contacting ECHO Incorporated, 400 Oakwood Road, Lake Zurich, IL 60047, 1-800-432-ECHO (3246).

SAFETY

Manual Safety Symbols and Important Information

Throughout this manual and on the product itself, you will find safety alerts and helpful informational messages preceded by symbols or key words. The following is an explanation of those symbols and key words and what they mean to you.

DANGER

The safety alert symbol accompanied by the word “DANGER” calls attention to an act or condition which WILL lead to serious personal injury or death if not avoided.

WARNING

The safety alert symbol accompanied by the word “WARNING” calls attention to an act or condition which COULD lead to serious personal injury or death if not avoided.

CAUTION

The safety alert symbol accompanied by the word “CAUTION” calls attention to an act or condition which might lead to minor or moderate personal injury if not avoided.

NOTICE

The enclosed message provides information necessary for the protection of the unit.

Note: This enclosed message provides tips for use, care and maintenance of the unit.







CIRCLE AND SLASH SYMBOL


This symbol means the specific action shown is prohibited. Ignoring these prohibitions can result in serious or fatal injury.

International Symbols

Symbol	Description	Symbol	Description
	Read and understand the operator's manual.	H	Carburetor adjustment (high speed)
	Wear eye, ear and head protection.	T	Carburetor adjustment (idle speed)
	Wear hand protection.	L	Carburetor adjustment (low speed)
	Safety/alert		Stop switch
	Hot surface		Fuel and oil mixture
	Idle speed		Fast speed
	Finger severing		Purge bulb
	Do not allow flames or sparks near fuel.		Ignition on / off
	Do not smoke near fuel.		Choke control cold start position (choke closed)

Symbol	Description	Symbol	Description
	Choke control run position (choke open)		Wear slip resistant footwear.
		Beware of thrown objects.	
		Keep bystanders and helpers away 15 m (50 ft.).	

Note: Not all symbols will appear on your unit.



LOOK BEFORE YOU PUMP!
Ethanol Percentage
0% - 10% 15% - 30% - 50% - 85%

USE E10 OR LESS FUEL

Do not use any fuel containing greater than 10 percent ethanol (E10) in this equipment. It may cause damage or failure and is prohibited by Federal Law. For Details, see the "Fuel" Section of your Operators Manual

Personal Condition and Safety Equipment

WARNING

Cancer and Reproductive Harm
<https://www.P65Warnings.ca.gov>

WARNING

The muffler or catalytic muffler and surrounding cover may become extremely hot. If unit is equipped with muffler, always keep clear of exhaust and muffler area, otherwise serious personal injury might occur.

WARNING

Users of this product risk injury to themselves and others if the unit is used improperly and/or safety precautions are not followed. Proper clothing and safety gear must be worn when operating unit.

Physical Condition

Your judgment and physical dexterity may not be good:

- If you are tired or sick
- If you are taking medication
- If you have taken alcohol or drugs

Operate unit only if you are physically and mentally well.

Eye Protection

WARNING

- **Eye protection that meets ANSI Z87.1 or CE requirements must be worn whenever you operate the unit.**
- **For additional safety, a full-face shield (not included) can be worn over safety glasses or goggles to provide protection from sharp branches or flying debris.**

Hand Protection

Wear sturdy, no-slip, rubber work gloves to improve your grip on the handles. Gloves also provide protection against cuts and scratches, cold environments, and reduce the transmission of machine vibration to your hands.

Hearing and Ear Protection

ECHO recommends wearing personal protective equipment whenever unit is used.

Breathing Protection

Operators who are sensitive to dust or other common airborne allergens may need to wear a dust mask to prevent inhaling these materials while operating unit. Dust masks can provide protection against dust, plant debris, and other plant matter such as pollen. Make sure the mask does not impair your vision. Replace the mask as needed to prevent air restrictions.

Proper Clothing

Wear snug-fitting, durable clothing:

- Pants should have long legs, shirts should have long sleeves.
- Do not wear shorts.
- Do not wear ties, scarves, jewelry, or clothing with loose or hanging items that could become entangled in moving parts or surrounding growth.
- Keep clothing buttoned or zipped, and keep shirt tails tucked in.
- Wear sturdy work shoes with nonskid rubber soles.
- Do not wear open toed shoes.
- Do not operate unit with bare feet.
- Keep long hair away from engine and air intake. Retain hair with cap or net.

Heavy protective clothing can increase operator fatigue, which may lead to heat stroke. Schedule heavy work for early morning or late afternoon hours when temperatures are cooler.

 **WARNING**

The components of this machine generate an electromagnetic field during operation, which can interfere with some pacemakers. To reduce the risk of serious or fatal injury, persons with pacemakers should consult with their physician and the pacemaker manufacturer before operating this machine. In the absence of such information, ECHO does not recommend the use of this machine by anyone who has a pacemaker.

Extended Operation and Extreme Conditions **CAUTION**

Prolonged exposure to cold and/or vibration can result in injury. Read and follow all safety and operation instructions to minimize risk of injury. Failure to follow instructions can result in painful wrist/hand/arm injuries.

It is believed that a condition called Raynaud's Phenomenon, which affects the fingers of certain individuals, may be brought about by exposure to vibration and cold. Exposure to vibration and cold may cause tingling and burning sensations, followed by loss of color and numbness in the fingers. The following precautions are strongly recommended, because the minimum exposure which might trigger the ailment is unknown.


- Keep your body warm, especially the head, neck, feet, ankles, hands, and wrists.
- Maintain good blood circulation by performing vigorous arm exercises during frequent work breaks, and also by not smoking.
- Limit the hours of operation. Try to fill each day with jobs where operating the unit or other hand-held power equipment is not required.
- If you experience discomfort, redness, and swelling of the fingers followed by whitening and loss of feeling, consult your physician before further exposing yourself to cold and vibration.

Repetitive Stress Injuries (RSI)

It is believed that overusing the muscles and tendons of the fingers, hands, arms, and shoulders may cause soreness, swelling, numbness, weakness, and extreme pain in those areas. Certain repetitive hand activities may put you at a high risk for developing a Repetitive Stress Injury (RSI). An extreme RSI condition is Carpal Tunnel Syndrome (CTS), which could occur when your wrist swells and squeezes a vital nerve that runs through the area. Some believe that prolonged exposure to vibration may contribute to CTS. CTS can cause severe pain for months or even years.

To reduce the risk of RSI/CTS, do the following:

- Avoid using your wrist in a bent, extended, or twisted position. Instead try to maintain a straight wrist position. Also, when grasping, use your whole hand, not just the thumb and index finger.
- Take periodic breaks to minimize repetition and rest your hands.
- Reduce the speed and force with which you do the repetitive movement.
- Do exercises to strengthen the hand and arm muscles.
- Immediately stop using all power equipment and consult a doctor if you feel tingling, numbness, or pain in the fingers, hands, wrists, or arms. The sooner RSI/CTS is diagnosed, the more likely permanent nerve and muscle damage can be prevented.

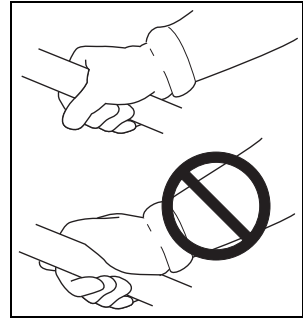

⚠ DANGER

All overhead electrical conductors and communications wires can have electricity flow with high voltages. This unit is not insulated against electrical current. Never touch wires directly or indirectly, otherwise serious injury or death can result.

⚠ DANGER

Do not operate gas-powered products indoors or in inadequately ventilated areas. Engine exhaust contains poisonous emissions and can cause serious injury or death.

Read the Manual

- Provide all users of this equipment with literature for instructions on safe operation.

Clear the Work Area

- Clear the area of children, bystanders, and pets. At a minimum, keep all children, bystanders, and pets outside a 15 m (50 ft.) radius; outside the 15 m (50 ft.) zone, there is still a risk of injury from thrown objects. Bystanders should be encouraged to wear eye protection (not included). If you are approached, stop the engine.
- Avoid blowing debris towards people, pets, open windows, or vehicles when using unit.
- Review area to be cleared. Look for potential hazards such as stones or metal objects.

Keep a Firm Grip

- To prevent from dropping the unit, hold the handle in one hand, with thumb and fingers encircling the handle.

Keep a Solid Stance

- Maintain footing and balance at all times. Do not stand on slippery, uneven or unstable surfaces. Do not work in odd positions or on ladders. Do not over reach.

Avoid Hot Surfaces

- Keep exhaust area clear of flammable debris. Avoid contact during and immediately after operation.



Equipment

WARNING

Use only approved attachments. Serious injury can result from the use of a non-approved attachment combination. ECHO Incorporated will not be responsible for the failure of cutting devices, attachments or accessories which have not been tested and approved by ECHO. Read and comply with all safety instructions listed in this manual.

- **Do not attempt to modify this product. Serious injury can result from the use of any modified product.**
- **Check unit for loose/missing nuts, bolts, and screws. Tighten and/or replace as needed.**
- **Do not use blower if any part is missing or damaged.**
- **Have repairs done only by an authorized service dealer.**

WARNING

Moving parts can amputate fingers or cause severe injuries. Keep hands, clothing and loose objects away from all openings.

- ***Always stop engine, disconnect spark plug, and make sure all moving parts have come to a complete stop before removing obstructions, clearing debris, or servicing unit.***
- ***Do not start or operate unit unless all guards and protective covers are properly assembled to unit.***
- ***Never reach into any opening while the engine is running. Moving parts might not be visible through openings.***

WARNING

Periodically check fuel system (fuel lines, vent, grommet, fuel tank, and fuel cap) for leaks especially if the unit is dropped. If damage or leaks are found, do not use unit, otherwise serious personal injury or property damage may occur. Have unit repaired by an authorized servicing dealer before using.

EMISSION CONTROL

CARB and EPA Emission Control Information

The emission control system for the engine is EM (engine modification) and, if the second to last character of the Engine Family on the Emission Control

Information label (sample below) is "B", "C", "K", or "T", the emission control system is EM and TWC (3-way catalyst). The fuel tank/fuel

line emission control system is EVAP (evaporative emissions). Evaporative emissions for California models are only applicable to fuel tanks and fuel feed lines.

An **Emission Control Label** is located on the engine. (This is an **EXAMPLE ONLY**, information on label varies by engine FAMILY).





Product Emission Durability (Emission Compliance Period)

The 50 or 300 hour emission compliance period is the time span selected by the manufacturer certifying the engine emissions output meets applicable emissions regulations, provided that approved maintenance procedures are followed as listed in the Maintenance Section of this manual.

DESCRIPTION

Locate the safety decal(s) or etching(s) on your unit. Make sure they are legible, and that you understand and follow the instructions. If any cannot be read, replacements can be ordered from your Authorized Service Dealer. Images shown below are for example only. Those on your unit might appear slightly different.

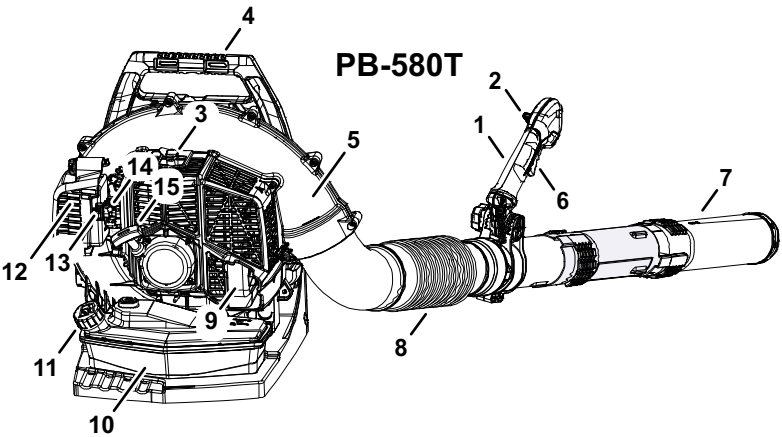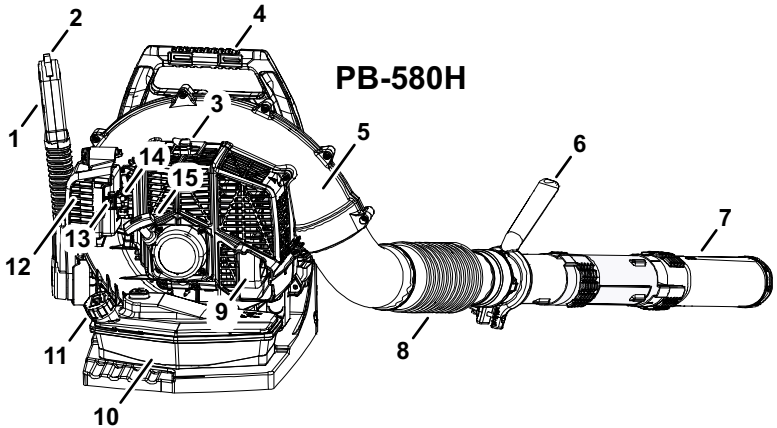

PB-580H/T

1. Throttle handle
2. Throttle position lever/stop switch
3. Spark plug
4. Shoulder harness
5. Safety decal
6. Stick handle - PB-580H
Throttle trigger - PB-580T
7. Blower pipes
8. Flexible pipe
9. Spark arrester muffler (with or without catalyst)
10. Fuel tank
11. Fuel tank cap
12. Air filter
13. Choke lever
14. Purge bulb
15. Recoil starter handle

CONTENTS

The ECHO product you purchased has been factory pre-assembled for your convenience. Due to packaging restrictions, some assembly may be necessary.

After opening the carton, check for damage. Immediately notify your retailer or Authorized Service Dealer of damaged or missing parts. Use the contents list to check for missing parts.

PB-580H

- 1 Power Head
- 1 Flex Pipe
- 1 Pipe with Swivel
- 1 Straight Pipe
- 1 Straight Pipe with Decal
- 1 Quick Start Guide
- 1 Warranty Statement
- 2 Clamps with Screws
- 1 Stick Handle
- 1 Bolt 6 x 45 mm
- 1 Washer 6 mm
- 1 Wing Nut

PB-580T

- 1 Power Head
- 1 Flex Pipe
- 1 Pipe with Swivel
- 1 Straight Pipe
- 1 Straight Pipe with Decal
- 1 Quick Start Guide
- 1 Warranty Statement
- 2 Clamps with Screws


ASSEMBLY


WARNING


Never perform maintenance or assembly procedures with engine running or serious personal injury may result.

PB-580H - Install Blower Pipes and Stick Handle


1. Assemble clamps (A) to ends of flexible pipe (B).

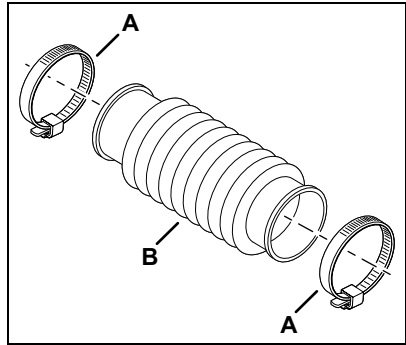


2. Assemble straight pipe with swivel (C) into flexible pipe (B).
3. Assemble flexible pipe (B) to elbow (D) on blower and tighten clamps (A).

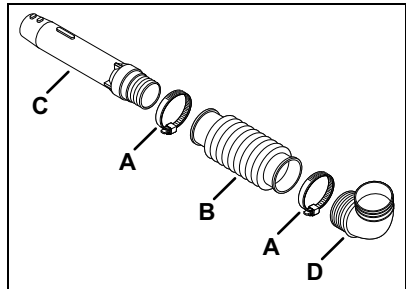

4. Loosen wing nut (E) and expand stick handle clamp (F). Align notches (G) in stick handle clamp with tabs (H).
5. Slide the stick handle onto swivel pipe (C). Angle the stick handle away from the operator.
6. Position the stick handle for comfortable operation. Tighten wing nut (E).

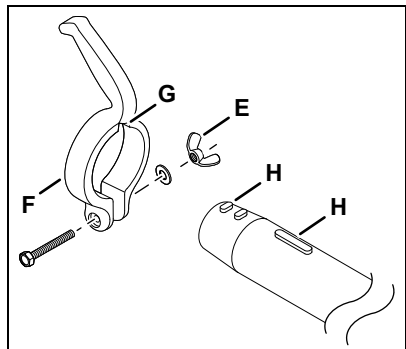


7. Install straight pipe (J) onto swivel pipe (C). Turn straight pipe (J) clockwise to engage the positive locking channels.
8. Install straight pipe with decal (K) to straight pipe (J). Turn straight pipe (K) clockwise to engage the positive locking channels.

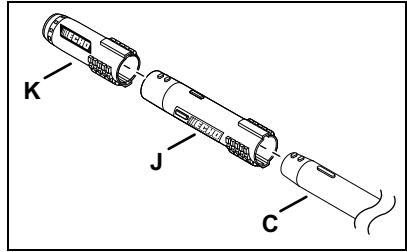


PB-580T - Install Blower Pipes and Throttle Handle


1. Assemble clamp with cable guide (A) onto the end of flexible pipe (B) that connects to the blower.
2. Assemble clamp (C) to other end of flexible pipe (B).

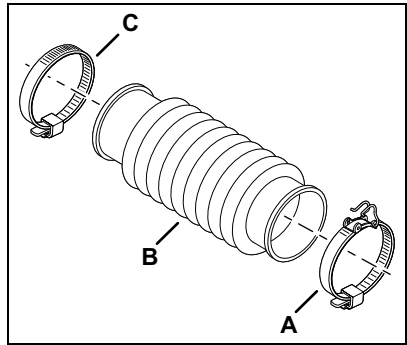


3. Route anti-static wire (D) through blower elbow (E) and flexible pipe (B).
4. Install flexible pipe (B) to elbow (E) on blower and tighten clamp with cable guide (A).

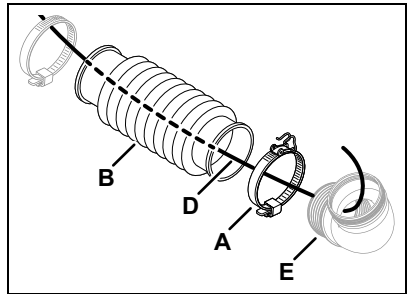


5. Loosen knob (F) on handle (G). Align notches in handle with tabs (H) and install onto swivel pipe (I).
6. Insert anti-static wire (D) through the swivel pipe (I).

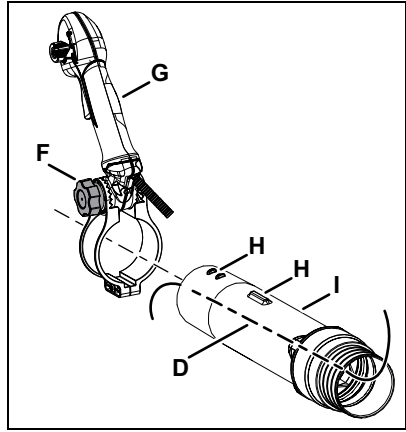

7. Assemble swivel pipe (I) into flexible pipe (B) and tighten clamp (A).
8. Clip the throttle cable into the cable guide loop.
9. Move handle (G) to desired position and tighten knob (F).

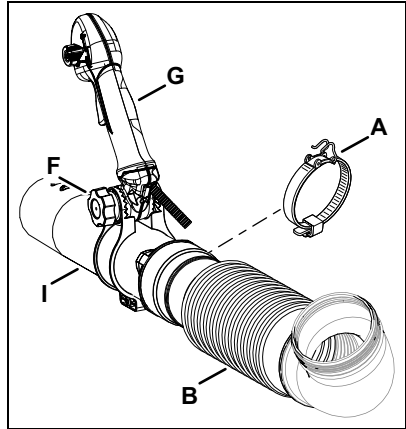

10. Install straight pipe (J) onto swivel pipe (I). Turn straight pipe (J) clockwise to engage the positive locking channels.
11. Assemble straight pipe with decal (K) to straight pipe (J). Turn straight pipe (K) clockwise to engage the positive locking channels.

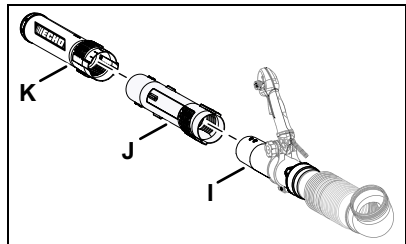

OPERATION

 WARNING

Moving parts can amputate fingers or cause severe injuries. Keep hands, clothing and loose objects away from all openings. Always stop engine, disconnect spark plug, and make sure all moving parts have come to a complete stop before removing obstructions, clearing debris, or servicing unit. Blower housing might contain shredder blades and other sharp edges that can cause serious injuries if touched, even if engine is off and blades are not moving. Wear gloves to protect hands from sharp edges and hot surfaces.

 WARNING

Operation of this equipment might create sparks that can start fires around dry vegetation. This unit is equipped with a spark arrester to prevent discharge of hot particles from the engine. Contact local fire authorities for laws or regulations regarding fire prevention requirements.

 WARNING

Engine exhaust is hot, and contains Carbon Monoxide (CO), a poison gas. Breathing CO can cause unconsciousness, serious injury, or death. Exhaust can cause serious burns. Always position unit so that exhaust is directed away from your face and body.

 WARNING

- This blower should be used for clearing leaves, grass, debris, and dust in yards, gardens, driveways, and parking lots only.
- Always maintain a direct, clear line of site to the unit and the work being performed.
- Always be alert for changes in operation of unit.
- Always shut engine off before transporting unit to new location.
- Always secure the unit during transportation to prevent turnover, fuel spillage, and damage to the unit.

Fuel

 **WARNING**

Diesel fuels and alternative fuels, such as E15 (15% ethanol), E85 (85% ethanol) or any fuels not meeting ECHO requirements are not approved for use in ECHO two-stroke or hybrid four-stroke gasoline engines. Use of diesel or alternative fuels may cause performance problems, loss of power, overheating, fuel vapor lock, and unintended machine operation, including, but not limited to, improper clutch engagement. Diesel or alternative fuels may also cause premature deterioration of fuel lines, gaskets, carburetors and other engine components.

Fuel Requirements

Gasoline - Use fresh (purchased within the last 30 days from the pump) 89 octane [R+M/2] (mid grade or higher) gasoline known to be good quality. Gasoline may contain up to 10% Ethanol (grain alcohol) or 15% MTBE (methyl tertiary-butyl ether). Gasoline containing methanol (wood alcohol) is not approved. Use of ECHO branded fuel is recommended to extend engine life in all air-cooled two-stroke and two or four-stroke hybrid engines.

Two-Stroke Oil - A two-stroke engine oil, such as ECHO branded two-stroke oils, meeting ISO-L-EGD (ISO/CD 13738) and J.A.S.O. FD Standards must be used. ECHO branded two-stroke oils meet these standards. Engine problems due to inadequate lubrication caused by failure to use an ISO-L-EGD (ISO/CD 13738) and J.A.S.O. M345-FD certified oil will void the two-stroke engine warranty.

 **WARNING**

Two-stroke engine oil contains petroleum distillates and other additives that may be harmful if swallowed. Heated oil can release vapors that can cause flash fire, or ignite with explosive force. Read and follow the oil manufacturer's instructions, and observe all safety warnings and precautions for handling flammable liquids. For more detailed safety and first aid information, visit <https://www.echo-usa.com> for a copy of the Material Safety Data Sheet.

- ***Keep out of reach of children.***
- ***If swallowed, do not induce vomiting. Call physician or a poison control center immediately.***
- ***Wear safety glasses when mixing or handling.***

- *Avoid repeated or prolonged skin contact.*
- *Avoid inhaling oil mists or vapors.*

NOTICE

ECHO branded two-stroke oils may be mixed at 50:1 ratio for application in all ECHO engines sold in the past, regardless of ratio specified in those manuals.

Handling Fuel

DANGER

Fuel is flammable. Use extreme care when mixing, storing or handling, or serious personal injury may result.

- *Use an approved fuel container.*
- *Do not smoke near fuel.*
- *Do not allow flames or sparks near fuel.*
- *Fuel tanks/cans may be under pressure. Always loosen fuel caps slowly allowing pressure to equalize.*
- *Never refuel a unit when the engine is hot or running.*
- *Do not fill fuel tanks indoors. Always fill fuel tanks outdoors over bare ground.*
- *Do not overfill fuel tank. Wipe up spills immediately.*
- *Securely tighten fuel tank cap and close fuel container after refueling.*
- *Inspect for fuel leakage. If fuel leakage is found, do not start or operate unit until leakage is repaired.*
- *Use caution when handling fuel. Mix and pour fuel outdoors where there are no sparks and flames. Slowly remove the fuel cap only after stopping the engine and allowing the unit to cool. Do not smoke while fueling or mixing fuel. Move the unit at least 3 m (10 ft.) from the fueling point before starting the engine.*

DANGER

Gasoline vapor is heavier than air, and can travel along the ground to nearby sources of ignition such as electrical motors, pilot lights, and hot or running engines. Vapors ignited by an ignition source can flash back to the fuel container, resulting in an explosion, fire, serious or fatal injuries, and extensive property damage.

Mixing Instructions

1. Fill an approved fuel container with half of the required amount of gasoline.
2. Add the proper amount of engine oil to gasoline.
3. Close container and shake to mix oil with gasoline.
4. Add remaining gasoline, close fuel container, and remix.

FUEL TO OIL MIX – 50:1 RATIO			
US		Metric	
Gas	Oil	Gas	Oil
gal.	fl. oz.	L	cc
1	2.6	5	100
2	5.2	10	200
5	13	25	500

NOTICE

Spilled fuel is a leading cause of hydrocarbon emissions. Some states may require the use of automatic fuel shut-off containers to reduce fuel spillage.

After use - Empty the fuel tank prior to storing the unit. Return unused fuel to an approved fuel storage container.

Storage - Fuel storage laws vary by locality. Contact your local government for the laws affecting your area. As a precaution, store fuel in an approved, airtight container. Store in a well-ventilated, unoccupied building, away from sparks and flames.

NOTICE

Stored fuel ages. Do not mix more fuel than you expect to use in thirty days or ninety days when a fuel stabilizer is added.

NOTICE


Stored two-stroke fuel may separate. Always shake fuel container thoroughly before each use.

NOTICE


Used oil and gasoline, and soiled towels are hazardous waste materials. Disposal laws vary by locality.

Starting Cold Engine


1. Move throttle lever (A) to IDLE position.

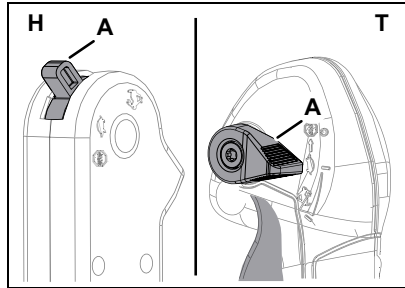

2. Move choke (B) to COLD START position.
3. Pump purge bulb (C) until fuel is visible, the pump an additional four or five times.
4. Hold the unit firmly. Pull recoil starter handle (D) until engine starts, or a maximum of five pulls. Use short pulls - only 1/2-2/3 of rope length for starting.

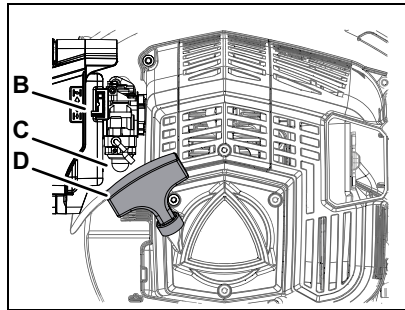

5. When engine starts and remains running:
PB-5810H: Advance throttle lever (A) to automatically return choke to RUN position.

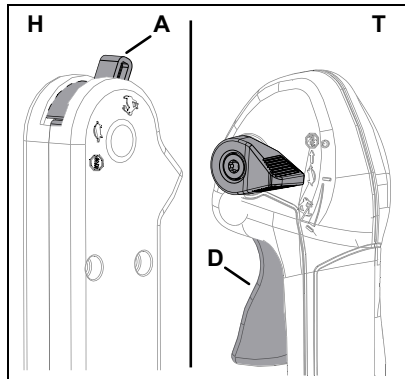


- PB-5810T:** Pull throttle trigger (D) to automatically return choke to RUN position.
6. After engine starts (or five pulls), move choke lever back to RUN position, then pull starter handle/rope until engine starts and runs. Allow engine to warm up at idle for several minutes.

Note: If engine does not start with choke in RUN position after five pulls, move choke to COLD START position, and repeat steps 3-6.

7. After engine warm-up, move throttle lever gradually to increase engine RPM to desired operating speed.


Starting Warm Engine

1. Move throttle lever (A) to IDLE position.

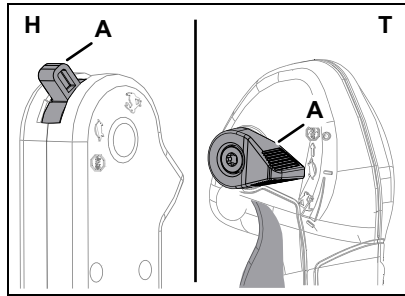

2. Pump purge bulb (C) until fuel is visible. Pump bulb an additional four or five times.
3. Pull recoil starter handle (D) and engine should start. Do not use choke (B).

Note: If engine does not start after five pulls, use Cold Start procedure.

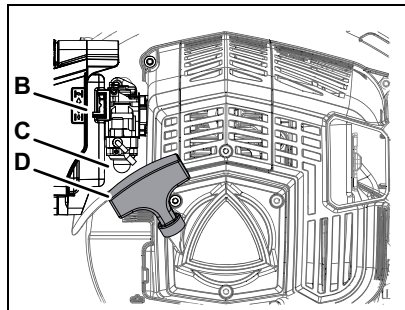


Stopping Engine

! WARNING

If engine does not stop when stop switch is moved to STOP position, close choke - COLD START position - to stall engine. Have your Authorized Service Dealer repair stop switch before using unit again.

1. Move throttle lever (A) to IDLE position to return engine to idle. Then move throttle lever (A) to STOP position to stop engine.

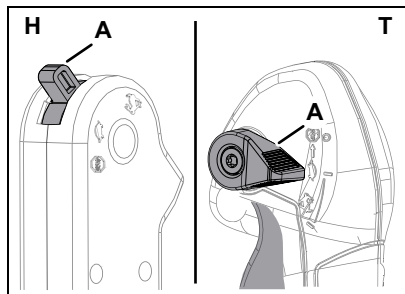

 **WARNING**

Moving parts can amputate fingers or cause severe injuries. Keep hands, clothing and loose objects away from all openings. Always stop engine, disconnect spark plug, and make sure all moving parts have come to a complete stop before removing obstructions, clearing debris, or servicing unit. Blower housing might contain shredder blades and other sharp edges that can cause serious injuries if touched, even if engine is off and blades are not moving. Wear gloves to protect hands from sharp edges and hot surfaces.

 **WARNING**

Operation of this equipment might create sparks that can start fires around dry vegetation. This unit is equipped with a spark arrester to prevent discharge of hot particles from the engine. Contact local fire authorities for laws or regulations regarding fire prevention requirements.

 **WARNING**

Engine exhaust is hot, and contains Carbon Monoxide (CO), a poison gas. Breathing CO can cause unconsciousness, serious injury, or death. Exhaust can cause serious burns. Always position unit so that exhaust is directed away from your face and body.

 **WARNING**

- This blower should be used for clearing leaves, grass, debris, and dust in yards, gardens, driveways, and parking lots only.
- Always maintain a direct, clear line of site to the unit and the work being performed.
- Always be alert for changes in operation of unit.
- Always shut engine off before transporting unit to new location.
- Always secure the unit during transportation to prevent turnover, fuel spillage, and damage to the unit.

MAINTENANCE

To reduce the risk of injury associated with contacting rotating parts, stop the engine before installing or removing attachments. Do not operate without guards in place. Always disconnect the spark plug before performing maintenance or accessing movable parts.

WARNING

Moving parts can amputate fingers or cause severe injuries. Keep hands, clothing and loose objects away from all openings. Always stop unit, disconnect spark plug or remove battery, and make sure all moving parts have come to a complete stop before removing obstructions, clearing debris, or servicing unit. Allow the unit to cool before performing maintenance or adjustments. Wear gloves to protect hands from sharp edges and hot surfaces.

WARNING

Operating a poorly maintained unit can result in serious injuries to operator or bystanders. Always follow all maintenance instructions as written, otherwise serious personal injury can result.

Your unit is designed to provide years of trouble-free service. Perform regular scheduled maintenance. If you are unsure about the task, or are not equipped with the necessary tools, we recommend that you take your unit to an Authorized Service Dealer for maintenance. To help you decide whether you want to do it yourself or have the Authorized Service Dealer do it, each maintenance task has been graded. If a task is not listed, see your Authorized Service Dealer for repairs.

NOTICE

The use of emission control components other than those specifically designed for this unit is a violation of federal law.

Skill Levels

Level 1 = Easy to do. Common tools may be required.

Level 2 = Moderate difficulty. Some specialized tools may be required.

Level 3 = See your Authorized Service Dealer.

Click [HERE](#) or go to <https://www.echo-usa.com/products/maintenance-kit>

or

<https://www.shindaiwa-usa.com/you-can.aspx>

Maintenance Intervals

COMPONENT/SYSTEM	MAINTENANCE PROCEDURE	SKILL LEVEL
Daily or Before Use		
Air Filter	Inspect/Clean ¹	1
Choke Shutter		
Fuel System		
Cooling System	Inspect/Clean	2
Recoil Starter Rope	Inspect/Clean ¹	1
Screws/Nuts/Bolts	Inspect/Tighten/Replace ¹	
Every Refuel		
Fuel System	Inspect ²	1
Cooling System	Inspect/Clean	2
3 Months		
Air Filter	Replace ¹	1
Fuel Filter	Inspect ¹	
Fuel Cap Gasket		
Spark Plug	Inspect/Clean/Replace ¹	2
Muffler Spark Arrester		
Cylinder Exhaust Port		
Yearly		

COMPONENT/SYSTEM	MAINTENANCE PROCEDURE	SKILL LEVEL
Fuel Filter	Inspect/Replace ¹	1
Fuel Cap Gasket	Replace ¹	

Note: Time intervals shown are maximum. Actual use and your experience will determine the frequency of required maintenance.

¹ Replacement is recommended based on the finding of damage or wear during inspection.


² Low evaporative fuel tanks do not require regular maintenance to maintain emission integrity.

Air Filter

Level 1.

Parts required: Tune Up Kit.

1. Close the choke (COLD START position).
2. Brush accumulated dirt from air cleaner area.
3. Remove air filter cover (A) and brush dirt from inside cover.
4. Remove air filter (B). Gently brush debris from filter. Replace filter if it is damaged, fuel-soaked, dirty, or the rubber sealing edges are deformed.
5. Install air filter (B).
6. Install air filter cover (A).

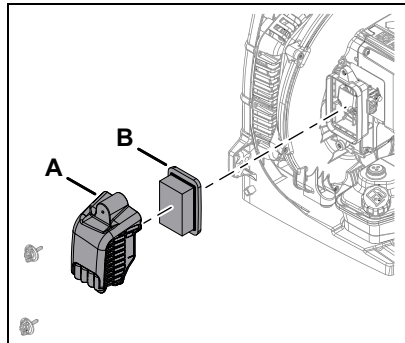

Fuel Filter


Level 1.

Parts required: Tune Up Kit.

DANGER

Fuel is flammable. Use extreme care when mixing, storing or handling, or serious personal injury may result.

1. Use a clean cloth to remove loose dirt from around the fuel cap.
2. Empty the fuel tank.
3. Pull the fuel line and filter assembly from the tank.
4. Remove the filter from the line and install the new filter.

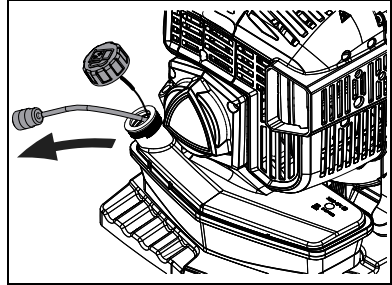

Note: Federal EPA regulations require all model year 2012 and later gasoline powered engines produced for sale in the United States to be equipped with a special low permeation fuel supply hose between the carburetor and fuel tank. When servicing model year 2012 and later equipment, only fuel supply hoses certified by EPA can be used to replace the original equipment supply hose. Fines up to \$37,500 may be enforced for using an un-certified replacement part.

Spark Plug


Level 2.

Parts required: Tune Up Kit.

NOTICE

Use only NGK BPM8Y spark plug (BPMP8Y in Canada) otherwise severe engine damage may occur.

1. Remove spark plug and check for fouling, worn and rounded center electrode.
2. Clean the plug or replace with a new one. Do not sand blast to clean. Remaining sand will damage engine.
3. Adjust spark plug gap by bending outer electrode.
4. Tighten spark plug to 150-170 kgf•cm (130-150 lbf•in).

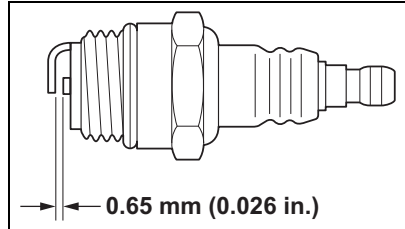

Cooling System


Level 2.

NOTICE

To maintain proper engine operating temperatures, cooling air must pass freely through engine cover (A) otherwise severe engine damage may occur.

Overheating and engine seizure can occur when:


- Air intakes are blocked, preventing cooling air from reaching the cylinder.
- Dust and grass build up on the outside of the cylinder. This build up insulates the engine and prevents the heat from leaving.

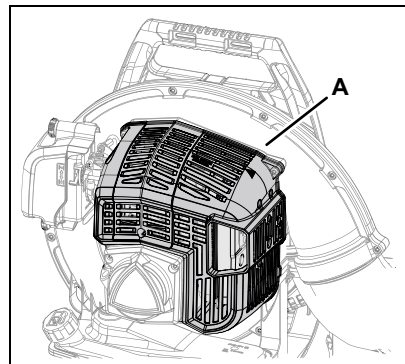

Removal of cooling passage blockages or cleaning of cooling fins is considered normal maintenance. Any failure attributed to lack of maintenance is not warranted.


Clean the Engine Cover

1. Brush accumulated debris from engine cover (A).

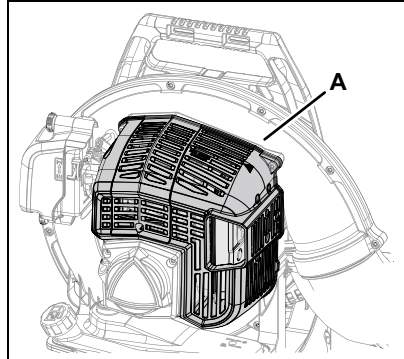

Clean the Cylinder Fins

1. Remove spark plug.
2. Remove starter
3. Remove engine cover.
4. Clean cylinder fins (A) to allow cooling air to pass freely
5. Assemble components in reverse order.

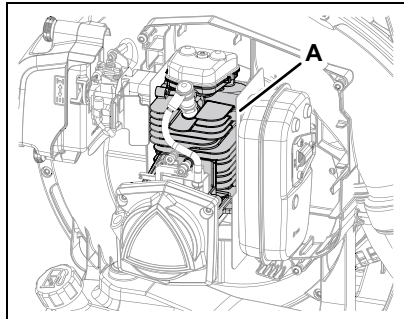

Exhaust System

Spark Arrester Screen

Level 2.


Parts required: Spark arrester screen, gasket.

NOTICE

Carbon deposits in muffler will cause a drop in engine output and overheating. Spark arrester screen must be checked periodically.

1. Remove spark plug.
2. Remove starter.
3. Remove engine cover.
4. Place piston at Top Dead Center (TDC).
5. Remove spark arrester cover (A), gasket (B) and screen (C) from muffler.

Note: When cleaning carbon deposits, do not to damage the catalytic element inside muffler.

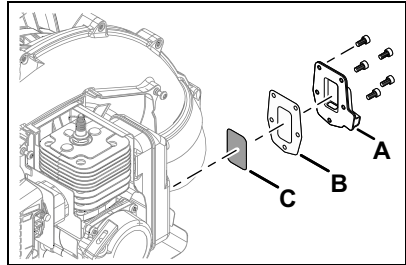

6. Clean carbon deposits from muffler components.
7. Replace screen if it is cracked, plugged, or has holes burned through.
8. Replace gasket.
9. Assemble components in reverse order.

Exhaust Port Cleaning


NOTICE

Never use a metal tool to scrape carbon from the exhaust port. Do not scratch the cylinder or piston when cleaning the exhaust port. Do not allow carbon particles to enter the cylinder.


Level 2.

Parts required: Heat shield.

1. Remove spark plug.
2. Remove starter.
3. Remove engine cover.
4. Place piston at top dead center.
5. Remove muffler (A) and heat shield (B).

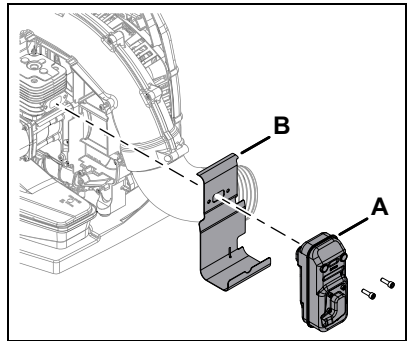

6. Use a wood or plastic scraping tool to clean deposits from cylinder exhaust port (C).
7. Replace heat shield.
8. Install muffler and tighten muffler mounting bolts to 90-110 kgf•cm (80-95 lbf•in).

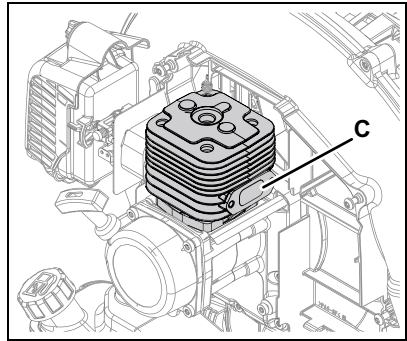

Carburetor Adjustment

Engine Break-In

New engines must be operated a minimum duration of two tanks of fuel break-in before carburetor adjustments can be made. During the break-in period your engine performance will increase and exhaust emissions will stabilize. Idle speed can be adjusted as required.

High Altitude Operation

NOTICE

If the engine is adjusted for operation above 335 m (1,100 ft.) ASL, the carburetor must be re-adjusted when operating the engine below 335 m (1,100 ft.) ASL, otherwise severe engine damage may result.

This engine has been factory adjusted to maintain satisfactory starting, emission, and durability performance up to 335 m (1,100 ft.) above sea level (ASL). To maintain proper engine operation and emission compliance above 335 m (1,100 ft.) ASL the carburetor may need to be adjusted by an Authorized Service Dealer

Note: Every unit is run at the factory and the carburetor is set in compliance with emission regulations. Carburetor adjustments, other than idle speed, must be performed by an Authorized Service Dealer

Idle Adjustment


Before adjustment, confirm the following:

- air filter is clean and installed
 - spark arrester screen and muffler are free of carbon
 - blower pipes are installed
1. Start engine, run at idle for one minute.
 2. Increase speed to full throttle and run engine for five minutes, operating choke twice to clear air from carburetor chambers.

PB-580H/T

3. Reduce speed to idle. Verify idle speed is 2,700 RPM.

Turn idle screw (A) clockwise to increase idle speed or counterclockwise to decrease idle speed.

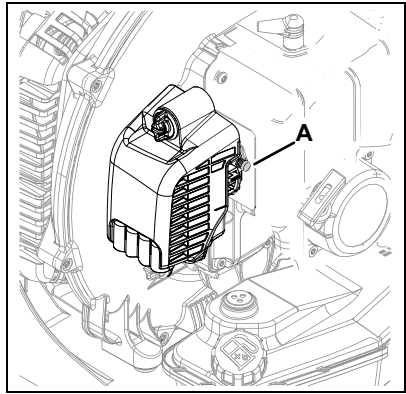


Throttle Cable Adjustment (T-Model only)


Level 1

If engine idle speed changes when blower pipe is moved, or engine will not reach full wide open throttle speed, adjust throttle cable.

1. Loosen handle adjustment knob (A) and tilt tube throttle handle forward to expose adjustment screw (B).

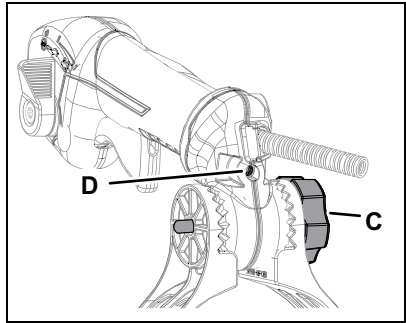

2. Turn adjustment screw until throttle trigger free play is 4 - 6 mm (3/16-1/4 in.).
3. After adjustment, squeeze and release throttle trigger several times to verify carburetor throttle shaft has full range of movement from idle to wide open throttle positions.

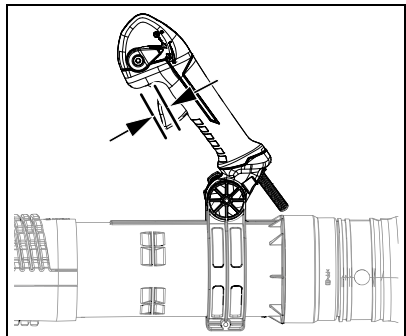

TROUBLESHOOTING

DANGER

Fuel vapors are extremely flammable and may cause fire and/or explosion. Never test for ignition spark by grounding spark plug near cylinder plug hole, otherwise serious personal injury may result.

ENGINE PROBLEM TROUBLESHOOTING CHART

Problem	Check	Status	Cause	Remedy
Engine starts hard or engine does not start.	Fuel at carburetor.	No fuel at carburetor.	Fuel strainer or fuel line obstructed.	Clean or replace. See your Authorized Service Dealer.
	Fuel at cylinder.	No fuel at cylinder.	Carburetor	See your Authorized Service Dealer.
		Muffler wet with fuel.	Fuel mixture too rich.	Open choke. Clean or replace air filter. Adjust carburetor. See your Authorized Service Dealer.
	Spark at end of plug wire.	No spark.	Ignition at STOP position. Electrical problem. Interlock switch.	Move ignition away from STOP position. See your Authorized Service Dealer.
	Spark at plug.		Incorrect gap. Covered with carbon. Fouled with fuel. Plug defective.	Adjust to 0.65 mm (0.026 in.) Clean or replace plug.

ENGINE PROBLEM TROUBLESHOOTING CHART				
Problem	Check	Status	Cause	Remedy
Engine runs, but dies or engine does not accelerate properly.	Air filter	Air filter dirty.	Normal wear.	Clean or replace.
	Fuel filter	Fuel filter dirty.	Contaminants or residue in fuel.	Replace filter or replace fuel.
	Fuel vent	Fuel vent plugged.	Contaminated fuel.	Clean or replace.
	Spark plug	Plug dirty or worn.	Normal wear.	Clean and adjust or replace.
	Carburetor	Improper adjustment.	Vibration	Adjust
	Cooling system	Cooling system dirty or plugged.	Extended operation in dirty or dusty locations.	Clean
	Spark arrester screen	Spark arrester screen plugged.	Normal wear.	Replace
Engine does not crank.			Internal engine problem.	See your Authorized Service Dealer.

STORAGE

Transportation

- Shut engine off before transporting.
- Secure unit to prevent fuel spillage and damage.

Short-Term Storage

- Shut engine off.
- Store unit in a dry, dust-free place, out of the reach of children.

Long-Term Storage (Over 30 Days)

DANGER

Explosion hazard. Fuel fumes can accumulate and explode if exposed to an open flame or spark. Store in a well ventilated area.

Do not store your unit for a prolonged period of time (30 days or longer) without performing protective storage maintenance.

1. Move stop switch to STOP position.
2. Allow engine to cool.
3. Clean exterior of unit.
4. Perform required maintenance.
5. Tighten all fasteners.

DANGER

Fire hazard. Fuel is flammable. Burning fuel will cause bodily injury or death. Wear protective equipment. Use care when mixing, storing or handling.

WARNING

Burn hazard. During operation the muffler or catalytic muffler and surrounding cover become hot. Always keep exhaust area clear of flammable debris during transportation or when storing, otherwise serious property damage or personal injury may result.

6. Drain fuel tank completely.
7. Press purge bulb six to seven times to remove remaining fuel from carburetor then drain tank again.

8. Close choke, start and run the engine until it stops due to lack of fuel.
9. Allow engine to cool.
10. Remove spark plug lead from spark plug.
11. Remove spark plug from cylinder.
12. Pour 7 mL (0.25 fl. oz.) of two-stroke engine oil into cylinder through spark plug hole.
13. Pull recoil starter handle two to three times to distribute oil inside engine.
14. Observe piston location through the spark plug hole. Pull the recoil handle slowly until the piston reaches the top of its travel and leave it there.
15. Install spark plug.
16. Connect spark plug lead to spark plug.
17. Store unit in a dry, dust-free place, out of the reach of children.

Hedge Trimmers Only

WARNING

Hedge trimmer blades are sharp. Avoid touching blades whenever possible, and always wear gloves to protect hands. Touching blades could lead to severe personal injury.

NOTICE

Always store and transport hedge trimmers in a stable, horizontal position. Support gear case and cutting blades to prevent excessive flexing, which may cause damage to these components. Always install blade cover when transporting or storing unit.

1. Apply clean oil to the entire length of the blade. Be certain the blade bolts are lubricated.
2. Install blade guard on blades.

Power Pruners[®] Only

NOTICE

Some tree sap and resins are corrosive and can damage guide bars, saw chains and sprockets.

1. Wash the guide bar and sprocket areas after each use, then coat metal parts with oil.

SPECIFICATIONS

MODEL	PB-580H	PB-580T
Length (without pipes)	379 mm (14.92 in.)	379 mm (14.92 in.)
Width (without pipes)	537 mm (21.14 in.)	478 mm (18.82 in.)
Height (without pipes)	459 mm (18.07 in.)	
Weight - dry (without pipes)	9.4 kg (20.7 lb.)	9.3 kg (20.5 lb.)
Engine Type	Air cooled, two-stroke, single cylinder gasoline engine	
Bore	46.0 mm (1.81 in.)	
Stroke	35.0 mm (1.38 in.)	
Displacement	58.2 cc (3.55 in. ³)	
Exhaust	Spark arrester muffler or spark arrester muffler with catalyst	
Carburetor	Diaphragm with purge pump	
Ignition System	Flywheel magneto, capacitor discharge ignition type	
Spark Plug	NGK BPM8Y (NGK BPMR8Y in Canada) Gap 0.65 mm (0.026 in.)	
Fuel	Mixed (gasoline and two-stroke oil)	
Gasoline/Oil Ratio	50:1	
Gasoline	Use 89 Octane unleaded. Do not use fuel containing methyl alcohol, more than 10% ethyl alcohol or 15% MTBE. Do not use alternative fuels such as E-15 or E-85.	
Oil	ISO-L-EGD (ISO/CD 13738) and J.A.S.O. M345- FD, two-stroke, air-cooled engine oil	
Fuel Tank Capacity	1.83 L (62 US fl. oz.)	
Starter System	Automatic recoil starter, centrifugal type	
Idle Speed	2,700 RPM	
Wide Open Throttle Speed (WOT)	6,550 RPM	

MODEL	PB-580H	PB-580T
Maximum Air Speed with Pipes	96.4 m/sec (216 mph)	
Air Volume	14.7 m ³ /min. (517 ft. ³ /min.)	
Sound Level at 50 ft. dB(A) scale per ANSI B175.2	70 dB(A)	

PRODUCT REGISTRATION

Thank you for choosing ECHO Power Equipment

Please go to <http://www.echo-usa.com/Warranty/Register-Your-ECHO> to register your new product on-line. It's **FAST** and **EASY!**

NOTE: Your information will never be sold or misused by ECHO Incorporated. Registering your purchase enables us to contact you in the unlikely event of a service update or product recall, and verifies your ownership for warranty consideration.

If you do not have access to the Internet, you can complete the form below and mail to:

***ECHO Incorporated, Product Registration, PO Box 1139,
Lake Zurich, IL 60047.***

NOTES

P63815001001 - P63815999999
P63915001001 - P63915999999
P64013001001 - P64013999999
P64113001001 - P64113999999
P64213001001 - P64212999999
P64313001001 - P64312999999



ECHO INCORPORATED

400 Oakwood Road
Lake Zurich, IL 60047

www.echo-usa.com