

Operator's Manual PB-580H/T Power Blower

WARNING

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.

A WARNING



Read and understand all provided literature before use. Failure to do so could result in serious injury.

Note: This product complies with CAN ICES-2/NMB-2.

TABLE OF CONTENTS

Introduction	3
Servicing Information	
Parts and Serial Number	
Service	
ECHO Consumer Product Support	. 4
Product Registration	. 4
Additional Literature	. 4
Safety	
Manual Safety Symbols and Important Information	
International Symbols	6
Personal Condition and Safety Equipment	. 8
Equipment	13
Emission Control	
CARB and EPA Emission Control Information	14
Description	15
Contents	17
Assembly	18
PB-580H - Install Blower Pipes and Stick Handle	18
PB-580T - Install Blower Pipes and Throttle Handle	
Operation	21
Fuel	22
Starting Cold Engine	25
Starting Warm Engine	26
Stopping Engine	27
Maintenance	28
Skill Levels	29
Maintenance Intervals	29
Air Filter	30
Fuel Filter	31
Spark Plug	31
Cooling System	
Exhaust System	
Carburetor Adjustment	35
Throttle Cable Adjustment (T-Model only)	36
Troubleshooting	
Storage	
Long-Term Storage (Over 30 Days)	
Specifications	
Product Registration	

INTRODUCTION

Specifications, descriptions, and illustrative material in this literature are as accurate as possible. Specifications are subject to change without notice. Illustrations might include optional equipment and accessories, and might not include all standard equipment. Your equipment might appear slightly different than pictured equipment.



Read and understand all provided literature. Literature contains specifications and information for safety, operation, maintenance, storage, and assembly specific to this product. Scan QR codes for more information.



For additional literature, including safety manuals where applicable, or questions regarding terms used in this manual, visit:

https://www.echo-usa.com/manuals



OR


https://www.shindaiwa-usa.com/manuals



SERVICING INFORMATION

Parts and Serial Number

Genuine ECHO parts and assemblies for your ECHO products are available only from an Authorized Service Dealer. When you do need to buy parts, always have the model number and serial number of the unit with you. Image shows serial number location. For future reference write them in the space provided below.

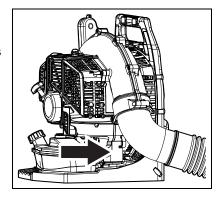

Model No.	Serial No.

Service

Service of this product during the warranty period must be performed by an Authorized Service Dealer. For the name and address of the Authorized Service Dealer nearest you, ask your retailer or call:1-800-432-ECHO

(3246). Dealer information is also available on our website www.echousa.com. When presenting your unit for warranty service/repairs, proof of purchase is required.

ECHO Consumer Product Support

If you require assistance or have questions concerning the application, operation, or maintenance of this product, call the ECHO Consumer Product Support Department at 1-800-432-ECHO (3246) from 8:00 a.m. to 5:00 p.m. (Central Standard Time) Monday through Friday. Before calling, please know the model and serial number of your unit.

Product Registration

Register your ECHO equipment online at www.echo-usa.com or by filling out the product registration sheet included in this manual. Registering your product confirms warranty coverage and provides a direct link to ECHO if we find it necessary to contact you.

Additional Literature

4

In addition to finding information online, information is available from your Authorized Service Dealer, or by contacting ECHO Incorporated, 400 Oakwood Road, Lake Zurich, IL 60047, 1-800-432-ECHO (3246).

PB-580H/T SAFETY

SAFETY

Manual Safety Symbols and Important Information

Throughout this manual and on the product itself, you will find safety alerts and helpful, informational messages preceded by symbols or key words. The following is an explanation of those symbols and key words and what they mean to you.

▲ DANGER

The safety alert symbol accompanied by the word "DANGER" calls attention to an act or condition which WILL lead to serious personal injury or death if not avoided.

WARNING

The safety alert symbol accompanied by the word "WARNING" calls attention to an act or condition which CAN lead to serious personal injury or death if not avoided.

A CAUTION

The safety alert symbol accompanied by the word "CAUTION" calls attention to an act or condition which might lead to minor or moderate personal injury if not avoided.

NOTICE

The enclosed message provides information necessary for the protection of the unit.

Note: This enclosed message provides tips for use, care and maintenance of the unit.



CIRCLE AND SLASH SYMBOL

This symbol means the specific action shown is prohibited. Ignoring these prohibitions can result in serious or fatal injury.

International Symbols

Symbol	Description	Symbol	Description
	Read and Understand the Operator's Manual	H	Carburetor Adjustment - High Speed Mixture
	Wear Eye, Ear and Head Protection	T	Carburetor Adjustment - Idle Speed
	Wear Hand Protection	L	Carburetor Adjustment - Low Speed Mixture
\triangle	Safety/Alert	STOP	Stop Switch
at Himbin.	Hot Surface	+6	Fuel and Oil Mixture
-	Idle speed	*	Fast speed
	Finger severing	•	Purge Bulb
	Do not Allow Flames or Sparks Near Fuel	Ignition ON OFF O	Ignition ON / OFF
3	Do not Smoke Near Fuel		Choke Control COLD START Position (choke closed)

Symbol	Description	Symbol	Description
+	Choke Control RUN Position (choke O\open)	4	Wear Slip Resistant Footwear
		Beware of thrown objects	
.098 15m (50ft)		Keep Bystander Away 15 m (50	rs and Helpers ft.).

Note: Not all symbols will appear on your unit.



7

SAFETY PB-580H/T

Personal Condition and Safety Equipment

WARNING

Cancer and Reproductive Harm www.P65Warnings.ca.gov

WARNING



The muffler or catalytic muffler and surrounding cover may become extremely hot. If unit is equipped with muffler, always keep clear of exhaust and muffler area, otherwise serious personal injury might occur.

WARNING

Users of this product risk injury to themselves and others if the unit is used improperly and/or safety precautions are not followed. Proper clothing and safety gear must be worn when operating unit.

Physical Condition

Your judgment and physical dexterity may not be good:

- · If you are tired or sick
- If you are taking medication
- · If you have taken alcohol or drugs

Operate unit only if you are physically and mentally well.

Eye Protection

WARNING

- ◆ Eye protection that meets ANSI Z87.1 or CE requirements must be worn whenever you operate the unit.
- For additional safety, a full-face shield can be worn over safety glasses or goggles to provide protection from sharp branches or flying debris.

PB-580H/T SAFETY

Hand Protection

Wear sturdy, no-slip, rubber work gloves to improve your grip on the handles. Gloves also provide protection against cuts and scratches, cold environments, and reduce the transmission of machine vibration to your hands.

Hearing and Ear Protection

ECHO recommends wearing personal protective equipment whenever unit is used.

Breathing Protection

Operators who are sensitive to dust or other common airborne allergens may need to wear a dust mask to prevent inhaling these materials while operating unit. Dust masks can provide protection against dust, plant debris, and other plant matter such as pollen. Make sure the mask does not impair your vision, and replace the mask as needed to prevent air restrictions.

Proper Clothing

Wear snug-fitting, durable clothing:

- Pants should have long legs, shirts should have long sleeves.
- DO NOT WEAR SHORTS.
- DO NOT WEAR TIES, SCARVES, JEWELRY, or clothing with loose or hanging items that could become entangled in moving parts or surrounding growth.
- Keep clothing buttoned or zipped, and keep shirt tails tucked in.
- Wear sturdy work shoes with nonskid rubber soles.
- DO NOT WEAR OPEN TOED SHOES.
- DO NOT OPERATE UNIT WITH BARE FEET.

Keep long hair away from engine and air intake. Retain hair with cap or net.

Heavy protective clothing can increase operator fatigue, which may lead to heat stroke. Schedule heavy work for early morning or late afternoon hours when temperatures are cooler.

WARNING

The components of this machine generate an electromagnetic field during operation, which can interfere with some pacemakers. To reduce the risk of serious or fatal injury, persons with pacemakers should consult with their physician and the pacemaker manufacturer before operating this machine. In the absence of such information, ECHO does not recommend the use of this machine by anyone who has a pacemaker.

Extended Operation and Extreme Conditions

A CAUTION

Prolonged exposure to cold and/or vibration can result in injury. Read and follow all safety and operation instructions to minimize risk of injury. Failure to follow instructions can result in painful wrist/hand/arm injuries.

It is believed that a condition called Raynaud's Phenomenon, which affects the fingers of certain individuals, may be brought about by exposure to vibration and cold. Exposure to vibration and cold may cause tingling and burning sensations, followed by loss of color and numbness in the fingers. The following precautions are strongly recommended, because the minimum exposure, which might trigger the ailment, is unknown.

- Keep your body warm, especially the head, neck, feet, ankles, hands, and wrists.
- Maintain good blood circulation by performing vigorous arm exercises during frequent work breaks, and also by not smoking.
- Limit the hours of operation. Try to fill each day with jobs where operating the unit or other hand-held power equipment is not required.
- If you experience discomfort, redness, and swelling of the fingers followed by whitening and loss of feeling, consult your physician before further exposing yourself to cold and vibration.


PB-580H/T SAFETY

Repetitive Stress Injuries (RSI)

It is believed that overusing the muscles and tendons of the fingers, hands, arms, and shoulders may cause soreness, swelling, numbness, weakness, and extreme pain in those areas. Certain repetitive hand activities may put you at a high risk for developing a Repetitive Stress Injury (RSI). An extreme RSI condition is Carpal Tunnel Syndrome (CTS), which could occur when your wrist swells and squeezes a vital nerve that runs through the area. Some believe that prolonged exposure to vibration may contribute to CTS. CTS can cause severe pain for months or even years.

To reduce the risk of RSI/CTS, do the following:

- Avoid using your wrist in a bent, extended, or twisted position. Instead try to maintain a straight wrist position. Also, when grasping, use your whole hand, not just the thumb and index finger.
- Take periodic breaks to minimize repetition and rest your hands.
- Reduce the speed and force with which you do the repetitive movement.

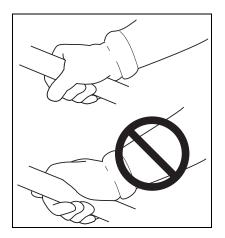

11

- Do exercises to strengthen the hand and arm muscles.
- Immediately stop using all power equipment and consult a doctor if you feel tingling, numbness, or pain in the fingers, hands, wrists, or arms. The sooner RSI/CTS is diagnosed, the more likely permanent nerve and muscle damage can be prevented.

▲ DANGER

All overhead electrical conductors and communications wires can have electricity flow with high voltages. This unit is not insulated against electrical current. Never touch wires directly or indirectly, otherwise serious injury or death can result.

DANGER

Do not operate gas-powered products indoors or in inadequately ventilated areas. Engine exhaust contains poisonous emissions and can cause serious injury or death.

SAFETY PB-580H/T

Read the Manual

 Provide all users of this equipment with literature for instructions on safe operation.

Clear the Work Area

- Clear the area of children, bystanders, and pets. At a minimum, keep all children, bystanders, and pets outside a 15 m (50 ft.) radius; outside the 15 m (50 ft.) zone, there is still a risk of injury from thrown objects. Bystanders should be encouraged to wear eye protection. If you are approached, stop the engine.
- Avoid blowing debris towards people, pets, open windows, or vehicles when using unit.
- Review area to be cleared. Look for potential hazards such as stones or metal objects.

Keep a Firm Grip

• To prevent from dropping the unit, hold the handle in one hand, with thumb and fingers encircling the handle.

Keep a Solid Stance

 Maintain footing and balance at all times. Do not stand on slippery, uneven or unstable surfaces. Do not work in odd positions or on ladders. Do not over reach.

Avoid Hot Surfaces

Keep exhaust area clear of flammable debris.
 Avoid contact during and immediately after operation.





PB-580H/T SAFETY

Equipment

WARNING

Use only approved attachments. Serious injury can result from the use of a non-approved attachment combination. ECHO Incorporated will not be responsible for the failure of cutting devices, attachments or accessories which have not been tested and approved by ECHO. Read and comply with all safety instructions listed in this manual.

- ◆ Do not attempt to modify this product. Serious injury can result from the use of any modified product.
- ◆ Check unit for loose/missing nuts, bolts, and screws. Tighten and/or replace as needed.
- ◆ Do not use blower if any part is missing or damaged.
- ◆ Have repairs done only by an Authorized Service Dealer.

WARNING

Moving parts can amputate fingers or cause severe injuries. Keep hands, clothing and loose objects away from all openings.

- ♦ Always stop engine, disconnect spark plug, and make sure all moving parts have come to a complete stop before removing obstructions, clearing debris, or servicing unit.
- ♦ Do not start or operate unit unless all guards and protective covers are properly assembled to unit.
- ◆ Never reach into any opening while the engine is running. Moving parts might not be visible through openings.

WARNING

Periodically check fuel system (fuel lines, vent, grommet, fuel tank, and fuel cap) for leaks especially if the unit is dropped. If damage or leaks are found, do not use unit, otherwise serious personal injury or property damage may occur. Have unit repaired by an Authorized Service Dealer before using.

EMISSION CONTROL

CARB and EPA Emission Control Information

The emission control system for the engine is EM (engine modification) and, if the second to last character of the Engine Family on the Emission Control Information label (sample below) is "B", "C", "K", or "T", the emission control system is EM and TWC (3-way catalyst). The fuel tank/fuel

EMISSION CONTROL INFORMATION ENGINE FAMILY: (E) EHXS.0214EQ DISPLACEMENT: 21.2cc EMISSION COMPLIANCE PERIOD: 50Hours THIS ENGINE MEETS 2013 U.S.EPA EXH/EVP & CALIFORNIA EXH/EVP EMISSION REGULATIONS FOR S.O.R.E. REFER TO CHNER'S MANUAL FOR MAINTENANCE SPECIFICATIONS AND ADJUSTMENTS.

YAMABIKO CORP. MMM/YYYY

 


line emission control system is EVAP (evaporative emissions). Evaporative emissions for California models are only applicable to fuel tanks and fuel feed lines.

An Emission Control Label is located on the engine. (This is an EXAMPLE ONLY, information on label varies by engine FAMILY).

EMISSION CONTROL INFORMATION

ENGINE FAMILY: CEHXS.0214KL DISPLACEMENT: 21.2cc EMISSION COMPLIANCE PERIOD: 300Hours THIS ENGINE MEETS 2012 U.S. EPA EXHVEVP & CALIFORNIA EXH/EVP EMISSION REGULATIONS FOR S.O.R.E. REFER TO OWNER'S MANUAL FOR MAINTENANCE SPECIFICATIONS AND ADJUSTMENTS. YAMABIKO CORP. MMM/YYYY E




The 50 or 300 hour emission compliance period is the time span selected by the manufacturer certifying the engine emissions output meets applicable emissions regulations, provided that approved maintenance procedures are followed as listed in the Maintenance Section of this manual.



DESCRIPTION

Locate the safety decal(s) or etching(s) on your unit. Make sure they are legible, and that you understand and follow the instructions. If any cannot be read, replacements can be ordered from your Authorized Service Dealer. Images shown below are for example only. Those on your unit might appear slightly different.

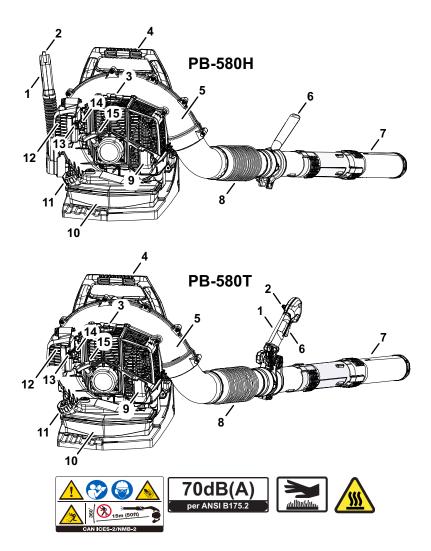

PB-580H/T

- 1. Throttle handle
- 2. Throttle position lever/stop switch
- 3. Spark plug
- 4. Shoulder harness
- 5. Safety decal
- Stick handle PB-580H Throttle trigger - PB-580T
- 7. Blower pipes
- 8. Flexible pipe
- 9. Spark arrester muffler (with or without catalyst)
- 10. Fuel tank
- 11. Fuel tank cap
- 12. Air filter
- 13. Choke lever
- 14. Purge bulb
- 15. Recoil starter handle

CONTENTS

The ECHO product you purchased has been factory pre-assembled for your convenience. Due to packaging restrictions, some assembly may be necessary.

After opening the carton, check for damage. Immediately notify your retailer or Authorized Service Dealer of damaged or missing parts. Use the contents list to check for missing parts.

	PB-580H		PB-580T
1	Power Head	1	Power Head
1	Flex Pipe	1	Flex Pipe
1	Pipe with Swivel	1	Pipe with Swivel
1	Straight Pipe	1	Straight Pipe
1	Straight Pipe with Decal	1	Straight Pipe with Decal
1	Quick Start Guide	1	Quick Start Guide
1	Warranty Statement	1	Warranty Statement
2	Clamps with Screws	2	Clamps with Screws
1	Stick Handle		
1	Bolt 6 x 45 mm		
1	Washer 6 mm		
1	Wing Nut		

ASSEMBLY PB-580H/T


ASSEMBLY

WARNING


Never perform maintenance or assembly procedures with engine running or serious personal injury may result.

PB-580H - Install Blower Pipes and Stick Handle


 Assemble clamps (A) to ends of flexible pipe (B).

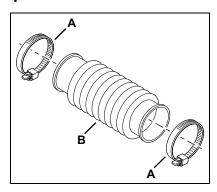

- 2. Assemble straight pipe with swivel (C) into flexible pipe (B).
- Assemble flexible pipe (B) to elbow (D) on blower and tighten clamps (A).

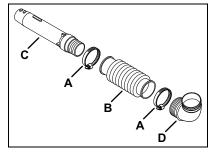


- Loosen wing nut (E) and expand stick handle clamp (F). Align notches (G) in stick handle clamp with tabs (H).
- Slide the stick handle onto swivel pipe (C). Angle the stick handle away from the operator.
- 6. Position the stick handle for comfortable operation. Tighten wing nut (E).

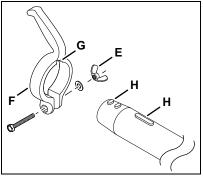

PB-580H/T **ASSEMBLY**


7. Install straight pipe (J) onto swivel pipe (C). Turn straight pipe (J) clockwise to engage the positive locking channels.

Install straight pipe with decal 8. (K) to straight pipe (J). Turn straight pipe (K) clockwise to engage the positive locking channels.

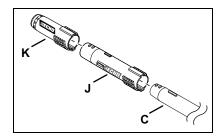


PB-580T - Install Blower Pipes and Throttle Handle

- Assemble clamp with cable guide (A) onto the end of flexible pipe (B) that connects to the blower.
- 2. Assemble clamp (C) to other end of flexible pipe (B).

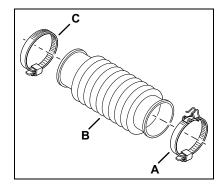


- 3. Route anti-static wire (D) through blower elbow (E) and flexible pipe (B).
- Install flexible pipe (B) to elbow 4. (E) on blower and tighten clamp with cable guide (A).

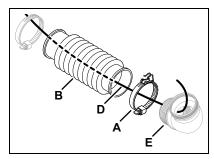


ASSEMBLY PB-580H/T

 Loosen knob (F) on handle (G). Align notches in handle with tabs (H) and install onto swivel pipe (I).


6. Insert anti-static wire (D) through the swivel pipe (I).

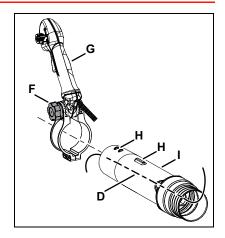

- Assemble swivel pipe (I) into flexible pipe (B) and tighten clamp (A).
- 8. Clip the throttle cable into the cable guide loop.
- Move handle (G) to desired position and tighten knob (F).

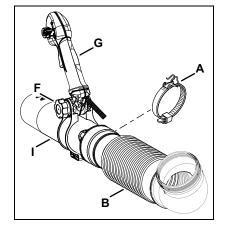

- Install straight pipe (J) onto swivel pipe (I). Turn straight pipe (J) clockwise to engage the positive locking channels.
- Assemble straight pipe with decal (K) to straight pipe (J). Turn straight pipe (K) clockwise to engage the positive locking channels

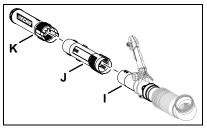

OPERATION

WARNING

Moving parts can amputate fingers or cause severe injuries. Keep hands, clothing and loose objects away from all openings. Always stop engine, disconnect spark plug, and make sure all moving parts have come to a complete stop before removing obstructions, clearing debris, or servicing unit. Blower housing might contain shredder blades and other sharp edges that can cause serious injuries if touched, even if engine is off and blades are not moving. Wear gloves to protect hands from sharp edges and hot surfaces.

WARNING

Operation of this equipment might create sparks that can start fires around dry vegetation. This unit is equipped with a spark arrester to prevent discharge of hot particles from the engine. Contact local fire authorities for laws or regulations regarding fire prevention requirements.

WARNING

Engine exhaust is hot, and contains Carbon Monoxide (CO), a poison gas. Breathing CO can cause unconsciousness, serious injury, or death. Exhaust can cause serious burns. Always position unit so that exhaust is directed away from your face and body.

WARNING

- ◆ This blower should be used for clearing leaves, grass, debris, and dust in yards, gardens, driveways, and parking lots only.
- Always maintain a direct, clear line of site to the unit and the work being performed.
- ◆ Always be alert for changes in operation of unit.
- ♦ Always shut engine off before transporting unit to new location.
- Always secure the unit during transportation to prevent turnover, fuel spillage, and damage to the unit.

OPERATION PB-580H/T

Fuel

WARNING

Diesel fuels and alternative fuels, such as E-15 (15% ethanol), E-85 (85% ethanol) or any fuels not meeting ECHO requirements are not approved for use in ECHO two-stroke gasoline engines. Use of diesel or alternative fuels can cause performance problems, loss of power, overheating, fuel vapor lock, and unintended machine operation, including, but not limited to, improper clutch engagement. Diesel or alternative fuels can also cause premature deterioration of fuel lines, gaskets, carburetors and other engine components.

Fuel Requirements

Gasoline - Use fresh (purchased within the last 30 days from the pump) 89 Octane [R+M/2] (mid grade or higher) gasoline known to be good quality. Gasoline may contain up to 10% Ethanol (grain alcohol) or 15% MTBE (methyl tertiary-butyl ether). Gasoline containing methanol (wood alcohol) is **NOT** approved. Use of ECHO branded fuel is recommended to extend engine life in all air-cooled two-stroke and two/four stroke hybrid engines.

Two-Stroke Oil - A two-stroke engine oil, such as ECHO branded two-stroke oils, meeting ISO-L-EGD (ISO/CD 13738) and J.A.S.O. FD Standards must be used. ECHO branded two-stroke oils meet these standards. Engine problems due to inadequate lubrication caused by failure to use an ISO-L-EGD (ISO/CD 13738) and J.A.S.O. M345-FD certified oil will void the two-stroke engine warranty.

WARNING

Two-stroke engine oil contains petroleum distillates and other additives that may be harmful if swallowed. Heated oil can release vapors that can cause flash fire, or ignite with explosive force. Read and follow the oil manufacturer's instructions, and observe all safety warnings and precautions for handling flammable liquids. For more detailed safety and first aid information, visit www.echo-usa.com for a copy of the Material Safety Data Sheet.

- ◆ Keep out of reach of children.
- If swallowed, do not induce vomiting. Call physician or a poison control center immediately.
- Wear safety glasses when mixing or handling.



- Avoid repeated or prolonged skin contact.
- Avoid inhaling oil mists or vapors.

ECHO branded two-stroke oils may be mixed at 50:1 ratio for application in all ECHO engines sold in the past regardless of ratio specified in those manuals.

Handling Fuel

Fuel is flammable. Use extreme care when mixing, storing or handling, or serious personal injury will result.

- ♦ Use an approved fuel container. Mark fuel containers as containing two-stroke mixture fuel.
- Do not smoke near fuel.
- Do not allow flames or sparks near fuel.
- ◆ Fuel tanks/cans may be under pressure. Always loosen fuel caps slowly allowing pressure to equalize.
- ◆ Never refuel a unit when the engine is hot or running!
- ◆ Do not fill fuel tanks indoors. Always fill fuel tanks outdoors over bare ground.
- Do not overfill fuel tank. Wipe up spills immediately.
- Securely tighten fuel tank cap and close fuel container after refueling.
- Inspect for fuel leakage. If fuel leakage is found, do not start or operate unit until leakage is repaired.
- Use caution when handling fuel. Mix and pour fuel outdoors where there are no sparks and flames. Slowly remove the fuel cap only after stopping the engine and allowing the unit to cool. Do not smoke while fueling or mixing fuel. Move the unit at least 3 m (10 ft.) from the fueling point before starting the engine.

OPERATION PB-580H/T

▲ DANGER

Gasoline vapor is heavier than air, and can travel along the ground to nearby sources of ignition such as electrical motors, pilot lights, and hot or running engines. Vapors ignited by an ignition source can flash back to the fuel container, resulting in an explosion, fire, serious or fatal injuries, and extensive property damage.

Mixing Instructions

NOTICE

Stored fuel ages. Do not mix more fuel than you expect to use in 30 days or 90 days when a fuel stabilizer is added.

- Fill an approved fuel container with half of the required amount of gasoline.
- 2. Add the proper amount of two-stroke oil to gasoline.
- 3. Close container and shake to mix oil with gasoline.
- 4. Add remaining gasoline, close fuel container, and remix.

Fuel to Oil Mix – 50:1 Ratio				
US			tric	
Gas	Oil	Gas	Oil	
gal.	fl.oz.	L	СС	
1	2.6	5	100	
2	5.2	10	200	
5	13	25	500	

NOTICE

Spilled fuel is a leading cause of hydrocarbon emissions. Some locations may require the use of automatic fuel shut-off containers to reduce fuel spillage.

Storage - Fuel storage laws vary by locality. Contact your local government for the laws affecting your area. As a precaution, store fuel in an approved, airtight container. Store in a well-ventilated, unoccupied building, away from sparks and flames.

 Empty the fuel tank prior to storing the unit. Return unused fuel to an approved fuel storage container.

NOTICE

Stored two-stroke fuel can separate. Always shake fuel container thoroughly before each use.


X7505201800
© 05/25 ECHO Incorporated

NOTICE

Used oil and gasoline, and soiled towels are hazardous waste materials. Disposal laws vary by locality.

Starting Cold Engine


1. Move throttle lever (A) to IDLE position.

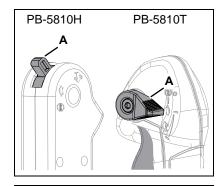


- 2. Move choke (B) to COLD START position.
- Pump purge bulb (C) until fuel is visible, then pump an additional four or five times.
- Hold the unit firmly. Pull recoil starter handle (D) until engine starts, or a maximum of five pulls. Use short pulls - only 1/2-2/3 of rope length for starting.
- 5. When engine starts and remains running:

PB-580H: Advance throttle lever (A) to automatically return choke to RUN position.

PB-580T: Pull throttle trigger (D) to automatically return choke to RUN position.

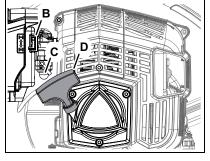

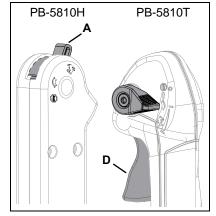


After engine starts (or five pulls), move choke lever back to RUN
position, then pull starter handle/rope until engine starts and runs. Allow
engine to warm up at idle for several minutes.

Note: If engine does not start with choke in RUN position after five pulls, move choke to COLD START position, and repeat steps 3-6.

 After engine warm-up, move throttle lever gradually to increase engine RPM to desired operating speed.


Starting Warm Engine

1. Move throttle lever (A) to IDLE position.

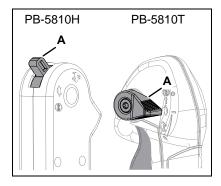

- Pump purge bulb (C) until fuel is visible. Pump bulb an additional four or five times.
- 3. Pull recoil starter handle (D) and engine should start. Do not use choke (B).

Note: If engine does not start after five pulls, use Cold Start procedure.

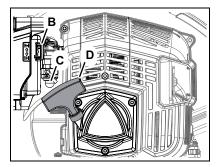


Stopping Engine

WARNING

If engine does not stop when stop switch is moved to STOP position, close choke - COLD START position - to stall engine. Have your Authorized Service Dealer repair stop switch before using unit again.

Move throttle lever (A) to IDLE position to return engine to idle. Then move throttle lever (A) to STOP position to stop engine.

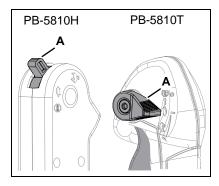

WARNING

Moving parts can amputate fingers or cause severe injuries. Keep hands, clothing and loose objects away from all openings. Always stop engine, disconnect spark plug, and make sure all moving parts have come to a complete stop before removing obstructions, clearing debris, or servicing unit. Blower housing might contain shredder blades and other sharp edges that can cause serious injuries if touched, even if engine is off and blades are not moving. Wear gloves to protect hands from sharp edges and hot surfaces.

WARNING

Operation of this equipment might create sparks that can start fires around dry vegetation. This unit is equipped with a spark arrester to prevent discharge of hot particles from the engine. Contact local fire authorities for laws or regulations regarding fire prevention requirements.

WARNING

Engine exhaust is hot, and contains Carbon Monoxide (CO), a poison gas. Breathing CO can cause unconsciousness, serious injury, or death. Exhaust can cause serious burns. Always position unit so that exhaust is directed away from your face and body.

WARNING

- ◆ This blower should be used for clearing leaves, grass, debris, and dust in yards, gardens, driveways, and parking lots only.
- ◆ Always maintain a direct, clear line of site to the unit and the work being performed.
- ◆ Always be alert for changes in operation of unit.
- ◆ Always shut engine off before transporting unit to new location.
- Always secure the unit during transportation to prevent turnover, fuel spillage, and damage to the unit.

MAINTENANCE

WARNING

Moving parts can amputate fingers or cause severe injuries. Keep hands, clothing and loose objects away from all openings. Always stop unit, disconnect spark plug or remove battery, and make sure all moving parts have come to a complete stop before removing obstructions, clearing debris, or servicing unit. Allow the unit to cool before performing maintenance or adjustments. Wear gloves to protect hands from sharp edges and hot surfaces.

WARNING

Operating a poorly maintained unit can result in serious injuries to operator or bystanders. Always follow all maintenance instructions as written, otherwise serious personal injury can result.

Your unit is designed to provide many hours of trouble-free service. Regular scheduled maintenance will help your unit achieve that goal. If you are unsure or are not equipped with the necessary tools, we recommend that you take your unit to a Authorized Service Dealer for maintenance. To help you decide whether you want to do it yourself or have the dealer do it, each maintenance task has been graded. If the task is not listed, see your Authorized Service Dealer for repairs.

NOTICE

The use of emission control components other than those specifically designed for this unit is a violation of federal law.

Skill Levels

Level 1 = Easy to do. Common tools may be required.

Level 2 = Moderate difficulty. Some specialized tools may be required.

Level 3 = See your Authorized Service Dealer.

Click HERE or go to http://www.echo-usa.com/products/maintenance-kit

or

https://www.shindaiwa-usa.com/you-can.aspx

Maintenance Intervals

COMPONENT/SYSTEM	MAINTENANCE PROCEDURE	SKILL LEVEL	
Daily or Before Use			
Air Filter	Inspect/Clean ¹		
Choke Shutter	-inspect/olean	1	
Fuel System	Inspect		
Cooling System	Inspect/Clean	2	
Recoil Starter Rope	Inspect/Clean ¹	1	
Screws/Nuts/Bolts	Inspect/Tighten/Replace ¹	•	
Every Refuel			
Fuel System	Inspect ¹	1	
Cooling System	Inspect/Clean	2	

COMPONENT/SYSTEM	MAINTENANCE PROCEDURE	SKILL LEVEL
3 Months		
Air Filter	Replace ¹	
Fuel Filter	Inspect ¹	1
Fuel Cap Gasket	- inspect	
Spark Plug	Inspect/Clean/Replace 1	2
Muffler Spark Arrester	- Ilispect/Clean/Replace	
Cylinder Exhaust Port	Inspect/Clean/De-carbon	
Yearly	•	•
Fuel Filter	Inspect/Replace ¹	1
Fuel Cap Gasket	Replace ¹	'


Note: Time intervals shown are maximum. Actual use and your experience will determine the frequency of required maintenance.

Air Filter

Level 1.

Parts required: Tune Up Kit.

- 1. Close the choke (COLD START position).
- Brush accumulated dirt from air cleaner area.
- Remove air filter cover (A) and brush dirt from inside cover.
- Remove air filter (B). Gently brush debris from filter. Replace filter if it is damaged, fuelsoaked, dirty, or the rubber sealing edges are deformed.
- Install air filter (B).
- 6. Install air filter cover (A).

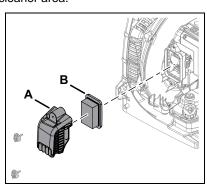

Replacement is recommended based on the finding of damage or wear during inspection.

Fuel Filter

Level 1.


Parts required: Tune Up Kit.

DANGER

Fuel is flammable. Use extreme care when mixing, storing or handling, or serious personal injury may result.

- Use a clean cloth to remove loose dirt from around the fuel cap.
- Empty the fuel tank. 2.
- 3 Pull the fuel line and filter assembly from the tank.
- 4. Remove the filter from the line and install the new filter.

Note: Federal EPA regulations require all model year 2012 and later

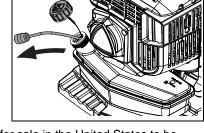

gasoline powered engines produced for sale in the United States to be equipped with a special low permeation fuel supply hose between the carburetor and fuel tank. When servicing model year 2012 and later equipment, only fuel supply hoses certified by EPA can be used to replace the original equipment supply hose. Fines up to \$37,500 may be enforced for using an un-certified replacement part.

Spark Pluq


Level 2.

Parts required: Tune Up Kit.

NOTICE

Use only NGK BPM8Y spark plug (BPMR8Y in Canada) otherwise severe engine damage may occur.

- Remove spark plug and check for fouling, worn and rounded center electrode.
- Clean the plug or replace with a new one. Do not sand blast to clean. Remaining sand will damage engine.

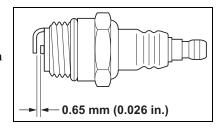

- 3. Adjust spark plug gap by bending outer electrode.
- 4. Tighten spark plug to 150-170 kgf•cm (130-150 lbf•in).

Cooling System


Level 2.

NOTICE

To maintain proper engine operating temperatures, cooling air must pass freely through engine cover (A) otherwise severe engine damage may occur..

Overheating and engine seizure can occur when:

 Air intakes are blocked, preventing cooling air from reaching the cylinder.

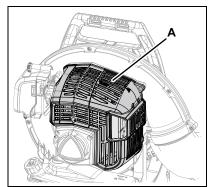


• Dust and grass build up on the outside of the cylinder. This build up insulates the engine and prevents the heat from leaving.

Removal of cooling passage blockages or cleaning of cooling fins is considered normal maintenance. Any failure attributed to lack of maintenance is not warranted.


Clean the Engine Cover

 Brush accumulated debris from engine cover (A).

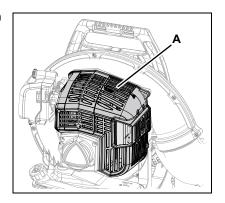

Clean the Cylinder Fins

- 1. Remove spark plug.
- 2. Remove starter.
- 3. Remove engine cover.
- Clean cylinder fins (A) to allow 4. cooling air to pass freely.
- 5. Assemble components in reverse order.

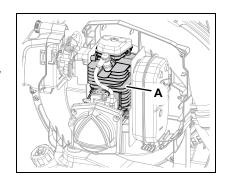

Exhaust System

Spark Arrester Screen

Level 2.


Parts required: Spark arrester screen, gasket.

Carbon deposits in muffler will cause a drop in engine output and overheating. Spark arrester screen must be checked periodically.

- 1. Remove spark plug.
- 2. Remove starter.
- 3. Remove engine cover.
- 4. Place piston at Top Dead Center (TDC).
- 5. Remove spark arrester cover (A), gasket (B) and screen (C) from muffler.

Note: When cleaning carbon deposits, do not to damage the catalytic element inside muffler.

- Clean carbon deposits from muffler components.
- 7. Replace screen if it is cracked, plugged, or has holes burned through.
- 8. Replace gasket.
- 9. Assemble components in reverse order.

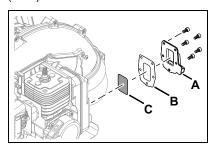

Exhaust Port Cleaning


NOTICE

Never use a metal tool to scrape carbon from the exhaust port. Do not scratch the cylinder or piston when cleaning the exhaust port. Do not allow carbon particles to enter the cylinder.


Level 2.

Parts required: Heat shield.

- 1. Remove spark plug.
- 2. Remove starter.
- 3. Remove engine cover.
- 4. Place piston at top dead center.
- 5. Remove muffler (A) and heat shield (B).

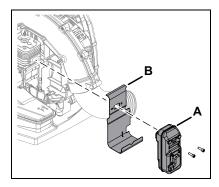

- Use a wood or plastic scraping tool to clean deposits from cylinder exhaust port (C).
- 7. Replace heat shield.
- Install muffler and tighten muffler mounting bolts to 90-110 kgf•cm (80-95 lbf•in).

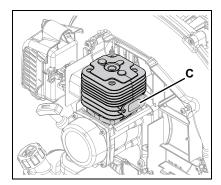

Carburetor Adjustment

Engine Break-In

New engines must be operated a minimum duration of two tanks of fuel break-in before carburetor adjustments can be made. During the break-in period your engine performance will increase and exhaust emissions will stabilize. Idle speed can be adjusted as required.

High Altitude Operation

NOTICE

If the engine is adjusted for operation above 335 m (1,100 ft.) ASL. the carburetor must be re-adjusted when operating the engine below 335 m (1,100 ft.) ASL, otherwise severe engine damage may result.

This engine has been factory adjusted to maintain satisfactory starting, emission, and durability performance up to 335 m (1,100 ft.) above sea level (ASL). To maintain proper engine operation and emission compliance above 335 m (1,100 ft.) ASL the carburetor may need to be adjusted by an Authorized Service Dealer

Note: Every unit is run at the factory and the carburetor is set in compliance with emission regulations. Carburetor adjustments, other than idle speed, must be performed by an Authorized Service Dealer


Idle Adjustment

Before adjustment, confirm the following:

- air filter is clean and installed
- spark arrester screen and muffler are free of carbon
- blower pipes are installed
- 1. Start engine, run at idle for one minute.
- 2. Increase speed to full throttle and run engine for five minutes, operating choke twice to clear air from carburetor chambers.

3. Reduce speed to idle. Verify idle speed is 2,700 RPM.

Turn idle screw (A) clockwise to increase idle speed or counterclockwise to decrease idle speed.

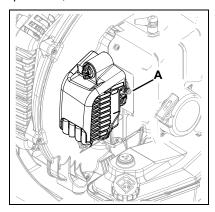


Throttle Cable Adjustment (T-Model only)


Level 1

If engine idle speed changes when blower pipe is moved, or engine will not reach full wide open throttle speed, adjust throttle cable.

 Loosen handle adjustment knob (A) and tilt tube throttle handle forward to expose adjustment screw (B).

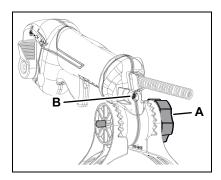

- Turn adjustment screw until throttle trigger free play is 4 - 6 mm (3/16-1/4 in.).
- After adjustment, squeeze and release throttle trigger several times to verify carburetor throttle shaft has full range of movement from idle to wide open throttle positions.

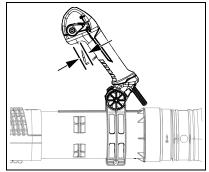

X7505201800

TROUBLESHOOTING

DANGER

Fuel vapors are extremely flammable and may cause fire and/or explosion. Never test for ignition spark by grounding spark plug near cylinder plug hole, otherwise serious personal injury may result.

ı	ENGINE PROBLEM TROUBLESHOOTING CHART			
Problem	Check	Status	Cause	Remedy
	Fuel at carburetor.	No fuel at carburetor.	Fuel strainer or fuel line obstructed.	Clean or replace. See your Authorized Service Dealer.
		No fuel at cylinder.	Carburetor	See your Authorized Service Dealer.
Engine starts hard or engine does not start.	Fuel at cylinder.	Muffler wet with fuel.	Fuel mixture too rich.	OPEN choke. Clean or replace air filter. Adjust carburetor. See your Authorized Service Dealer.
	Spark at end of plug wire.	No spark.	Ignition at STOP position. Electrical problem. Interlock switch.	Move ignition away from STOP position. See your Authorized Service Dealer.

37

ı	ENGINE PROBLEM TROUBLESHOOTING CHART			
Problem	Check	Status	Cause	Remedy
Engine starts hard or engine does not start.	Spark at plug.	No spark.	Incorrect gap. Covered with carbon. Fouled with fuel. Plug defective.	Adjust to 0.65 mm (0.026 in.) Clean or replace plug.
	Air filter	Air filter dirty.	Normal wear.	Clean or replace.
	Fuel filter	Fuel filter dirty.	Contami- nants or residue in fuel.	Replace filter or replace fuel.
Engine	Fuel vent	Fuel vent plugged.	Contami- nated fuel.	Clean or replace.
runs, but dies or engine does not	Spark plug	Plug dirty or worn.	Normal wear.	Clean and adjust or replace.
acceler- ate	Carburetor	Improper adjustment.	Vibration	Adjust
properly.	Cooling system	Cooling system dirty or plugged.	Extended operation in dirty or dusty locations.	Clean
	Spark arrester screen	Spark arrester screen plugged.	Normal wear.	Replace
Engine does not crank.		I/A	Internal engine problem.	See your Authorized Service Dealer.

PB-580H/T STORAGE

STORAGE

Long-Term Storage (Over 30 Days)

DANGER

Do not store in enclosure where fuel fumes may accumulate or reach an open flame or spark.

Do not store your unit for a prolonged period of time (30 days or longer) without performing protective storage maintenance which includes the following:

- 1. Store unit in a dry, dust-free place, out of the reach of children.
- 2. Place the stop switch in the OFF position.
- 3. Remove accumulation of grease, oil, dirt and debris from exterior of
- 4. Perform all periodic lubrication and services that are required.
- 5. Tighten all the screws and nuts.

WARNING

During operation the muffler or catalytic muffler and surrounding cover become hot. Always keep exhaust area clear of flammable debris during transportation or when storing, otherwise serious property damage or personal injury may result.

Fuel is flammable. Use extreme care when mixing, storing or handling, or serious personal injury will result.

- 6. Drain fuel tank completely.
- 7. Press purge bulb six to seven times to remove remaining fuel from carburetor then drain the tank again.
- 8. Close choke, start and run the engine until it stops due to lack of fuel.
- Allow engine to cool. Remove the spark plug lead from the spark plug. 9.
- 10. Remove the spark plug.
- 11. Pour 7 cc (0.25 fl. oz.) of fresh, clean, two-stroke engine oil into the cylinder through the spark plug hole.
- 12. Pull the recoil starter handle two to three times to distribute the oil inside the engine.

© 05/25 ECHO Incorporated X7505201800 39

- 13. Observe the piston location through the spark plug hole. Pull the recoil handle slowly until the piston reaches the top of its travel and leave it there.
- 14. Install the spark plug.
- 15. Connect the spark plug lead to the spark plug.

SPECIFICATIONS

MODEL	PB-580H	PB-580T	
Length (without pipes)	379 mm (14.92 in.)	379 mm (14.92 in.)	
Width (without pipes)	537 mm (21.14 in.)	478 mm (18.82 in.)	
Height (without pipes)	459 mm (18	.07 in.)	
Weight - dry (without pipes)	9.4 kg (20.7 lb.)	9.3 kg (20.5 lb.)	
Engine Type	Air cooled, two-stroke, sine engine	gle cylinder gasoline	
Bore	46.0 mm (1.	81 in.)	
Stroke	35.0 mm (1.	.38 in.)	
Displacement	58.2 cc (3.5	55 in. ³)	
Exhaust	Spark arrester muffler or spark arrester muffler with catalyst		
Carburetor	Diaphragm with purge pump		
Ignition System	Flywheel magneto, capacitor discharge ignition type		
Spark Plug	NGK BPM8Y (NGK BPMR8Y in Canada) Gap 0.65 mm (0.026 in.)		
Fuel	Mixed (gasoline and two-stroke oil)		
Gasoline/Oil Ratio	50:1		
Gasoline	Use 89 Octane unleaded. Do not use fuel containing methyl alcohol, more than 10% ethyl alcohol or 15% MTBE. Do not use alternative fuels such as E-15 or E-85.		
Oil	ISO-L-EGD (ISO/CD 13738) and J.A.S.O. M345- FD, two-stroke, air-cooled engine oil		
Fuel Tank Capacity	1.83 L (62 US fl. oz.)		

SPECIFICATIONS

MODEL	PB-580H	PB-580T
Starter System	Automatic recoil starter, centrifugal type	
Idle Speed	2,700 RI	PM
Wide Open Throttle Speed	6,550 RPM	
Maximum Air Speed with Pipes	96.4 m/sec (216 mph)	
Air Volume	14.7 m ³ /min. (517 ft. ³ /min.)	
Sound Level at 50 ft. dB(A) scale per ANSI B175.2	70 dB(A)	

PRODUCT REGISTRATION

Thank you for choosing ECHO Power Equipment

Please go to http://www.echo-usa.com/Warranty/Register-Your-ECHO to register your new product on-line. It's **FAST** and **EASY!** NOTE: Your information will never be sold or misused by ECHO Incorporated. Registering your purchase enables us to contact you in the unlikely event of a service update or product recall, and verifies your ownership for warranty consideration.

If you do not have access to the Internet, you can complete the form below and mail to:

ECHO Incorporated, Product Registration, PO Box 1139, Lake Zurich, IL 60047.

$/\!\!/\!\!/$ Product registration card : Tarjeta de registro : carte d'enregistrement du produit

ONLINE OPTION: Register online and save a stamp! You will be alerted of product updates and/or be sent new ECHO product information and special offers. Simply go to: www.ecflo-usa.com

lease Print : Por Favor Enscriba Con Letra De Molde : En Lettre Carré S.V.P.

Purchaser's Name : Nombre del Comprador : Nom de l'acheteur

Address : Dirección : Adresse

ahorre una estampilla! Le alertaran sobre actualizaciones del producto y/o se le enviara información sobre los nuevos productos ECHO y las ofertas especiales. Simplemente visite: Registrese en la pagina web www echo-usa com OPCIÓN POR INTERNET:

OPTION EN LIGNE: Enregistrer en ligne et épargner un finnnel Vous serez informé sur les nouveaux produits ECHO et les mises à jour de produit ainsi que les offres spéciales. Simplement visitez le: www.echo-usa.com

	Confidential: Information provided will not be shared or sold
	Primary use of tool: ☐Professional ☐ Homeowner ☐ Rental Equip. Uso primario de la herramienta:☐Profesional ☐ Dueño de casa ☐ Alquiler Usage principal: ☐ Professionnel ☐ Residential ☐ Location
	Do you wish to receive periodic ECHO product information and special offers by e-mail? ☐ Yes ☐ No
	¿Desea usted recibir información periódica y ofertas especiales por correo electronico sobre el producto ECHO? ☐ Yes ☐ No
	Souhaitez-vous recevoir périodiquement de l'information sur les produits
ode Postal	ECHO et les offres spéciales par courrier électronique ? LOui L Non
	Did you visit the ECHO website before purchasing your product? ☐ Yes ☐ No
	Visitó usted la pagina web ECHO antes de comprar su producto? □ Si □ No

City : Ciudad : Ville	9	State : Estado : Province	Zip Code : Código Postal : Code Postal
E-Mail Address :	E-Mail Address : Dirección De Correo Electrónico : Courrier Électroniqu	Electrónico : Courrie	er Électronique

MECHO

Date of Purchase : Fecha Date de l'achat
Téléphone
o De Teléfono :
ıe Number : Número De Teléfono : Téléphone
96

Avez-vous visité le site d'ECHO avant de procurer votre produit?

What factor(s) most influenced your purchase?

e N

ino I

de la Compra

rnone number: numero De telerono: Teleprone Date de Tachat. Where Purchased: Nombre del Almacén donde fue Comprado: Lieu d'achat.	Date de l'achat	orado : Lieu d'achat
	Рлопе Number : Numero De Telenono : Теlepnone	Where Purchased : Nombre del Almacén donde fue Com

_	 _	-	_
Model Number : Numero del Modelo : No. de modéle Serial Number : Numero de Serie : No. de série	Registering your purchase enables us to contact you in the unlikely event of a service update or product recall and verifies your	ownership in the event of 193s. : El registrar su compra nos permite estar en contacto con ústed en caso de cualquier evento como el aviso de tiempo de servicio o la revocación del producto y verificación, de propiedad en caso de robo o pérdida. :	L'enregistrement de votre achat nous permettra de vous contacter dans le cas improbable de modifications des instructions d'entretien ou de rappel du produit et vérifier que vous étes le propriétaire en cas de vol ou de perte.
ero de Se	or product re	en caso de r	modifications perte.
ber : Num	vice update	e propiedad	probable de de vol ou de
erial Num	event of a ser	erificación d	ans le cas im étaire en cas
de modéle S	in the unlikely e	del producto y v	ous contacter da us étes le proprie
Modelo: No.	is to contact you	egistrar su comp o la revocación	s permettra de v t vérifier que vou
Numero del	hase enables u	nt of loss. El re	otre achat nous oel du produit el
del Number :	listering your purc	iersnip in the eve no el aviso de tien	registrement de › itretien ou de rap
M	Reg	8 6	d-e

X7572270206 02-2012 :CHO INC., 400 Oakwood Rd., Lake Zurich, IL 60047 WWW ECHO-USA COM

Marchand

Quel facteur (facteurs) vous a influencé le plus?

Performance

☐ Amigo/Familia

☐ Confiabilidad

☐ Ami/Famille

Fiabilité

800,432,ECHO

Qualité

□ Expérience ☐ Marque

Garantie

☐ Distribuidor ☐ Warranty

¿Qué factor(es) influenció más en su compra?

Brand ☐ Precio ☐ Marca Ρij

☐ Friend/Family ☐ Funcionamientó

□ Performance

☐ Reliability

☐ Dealer Ouality

☐ Prior Experience

Calidad Garantía

Experiencia Anterior

P63815001001 - P63815999999 P63915001001 - P63915999999 P64013001001 - P64013999999 P64113001001 - P64113999999 P64213001001 - P64212999999 P64313001001 - P64312999999



400 Oakwood Road Lake Zurich, IL 60047 www.echo-usa.com