

# Operator's Manual PE-2620/S Power Edger

# **WARNING**

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.

# WARNING



Read and understand all provided literature before use. Failure to do so could result in serious injury.

Note: This product complies with CAN ICES-2/NMB-2.

# **TABLE OF CONTENTS**

Introduction	3
Servicing Information	4
Parts and Serial Number	4
Service	4
ECHO Consumer Product Support	4
Product Registration	4
Additional Literature	4
Safety	5
International Symbols	5
Personal Condition and Safety Equipment	7
Equipment	12
Emission Control	
CARB and EPA Emission Control Information	13
Description	14
Contents	
Operation	16
Fuel	17
Starting Cold Engine	20
Starting Warm Engine	
Stopping Engine	
Edger Operation Techniques	
Maintenance	25
Skill Levels	25
Maintenance Intervals	26
Air Filter	27
Fuel Filter	28
Spark Plug	29
Cooling System	30
Exhaust System	31
Carburetor Adjustment	33
Lubrication	
Edger Blade Replacement	35
Troubleshooting	36
Storage	38
Long-Term Storage (Over 30 Days)	38
Specifications	
Product Registration	40

# INTRODUCTION

Specifications, descriptions, and illustrative material in this literature are as accurate as possible. Specifications are subject to change without notice. Illustrations might include optional equipment and accessories, and might not include all standard equipment. Your equipment might appear slightly different than pictured equipment.



Read and understand all provided literature. Literature contains specifications and information for safety, operation, maintenance, storage, and assembly specific to this product. Scan QR codes for more information.



For additional literature, including safety manuals where applicable, or questions regarding terms used in this manual, visit:

https://www.echo-usa.com/manuals



OR


https://www.shindaiwa-usa.com/manuals



### SERVICING INFORMATION

### **Parts and Serial Number**

Genuine ECHO parts and assemblies for your ECHO products are available only from an Authorized Service Dealer. When you do need to buy parts, always have the model number and serial number of the unit with you. Image shows serial number location. For future reference write them in the space provided below.

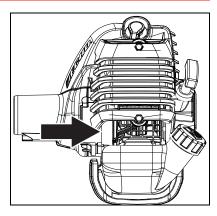

Model No.	Serial No.

### Service

Service of this product during the warranty period must be performed by an Authorized Service Dealer. For the name and address of the Authorized Service Dealer nearest you, ask your retailer or call:1-800-432-ECHO (3246). Dealer information is also available on our website www.echo-usa.com. When presenting your unit for warranty service/repairs, proof of purchase is required.

## **ECHO Consumer Product Support**

If you require assistance or have questions concerning the application, operation, or maintenance of this product, call the ECHO Consumer Product Support Department at 1-800-432-ECHO (3246) from 8:00 a.m. to 5:00 p.m. (Central Standard Time) Monday through Friday. Before calling, please know the model and serial number of your unit.

### **Product Registration**

Register your ECHO equipment online at www.echo-usa.com or by filling out the product registration sheet included in this manual. Registering your product confirms warranty coverage and provides a direct link to ECHO if we find it necessary to contact you.

## **Additional Literature**

4

In addition to finding information online, information is available from your Authorized Service Dealer, or by contacting ECHO Incorporated, 400 Oakwood Road, Lake Zurich, IL 60047, 1-800-432-ECHO (3246).

# **SAFETY**

# **International Symbols**

Symbol	Description	Symbol	Description
	Warning, See Operator's Manual	H	Carburetor Adjustment - High Speed Mixture
	Wear Eye, Ear and Head Protection	T	Carburetor Adjustment - Idle Speed
	Wear Hand and Foot Protection		Carburetor Adjustment - Low Speed Mixture
<u>^</u>	Safety/Alert	STOP	STOP Switch
atillitikhtis.	Hot Surface	+6	Fuel and Oil Mixture
	Do not Allow Flames or Sparks Near Fuel	Ignition ON OFF O	Ignition ON / OFF
	Do not Smoke Near Fuel	Ð	Purge Bulb
	Choke Control RUN Position (choke open)		Choke Control COLD START Position (choke closed)

SAFETY PE-2620/S

Symbol	Description	Symbol	Description
	Keep Feet Away From Blade		Rotating Cutting Attachment
	Thrown Objects		Direction of Blade
	Do not use line heads - Blades only		Do not use blades - Line heads only
I Sample of the		Keep Bystande Away 15 m (50	ft.)
		AVOID KICKOUT Keep Bystanders At Least 15 m (50 ft.) Away	
		Beware Throwr Protection	n Objects Wear Eye

Note: Not all symbols will appear on your unit.



PE-2620/S SAFETY

# Personal Condition and Safety Equipment

# WARNING

Cancer and Reproductive Harm www.P65Warnings.ca.gov

# **WARNING**



The muffler or catalytic muffler and surrounding cover may become extremely hot. If unit is equipped with muffler, always keep clear of exhaust and muffler area. otherwise serious personal injury might occur.

# WARNING

Users of this product risk injury to themselves and others if the unit is used improperly and/or safety precautions are not followed. Proper clothing and safety gear must be worn when operating unit.

### Physical Condition

Your judgment and physical dexterity may not be good:

- · If you are tired or sick
- If you are taking medication
- If you have taken alcohol or drugs

Operate unit only if you are physically and mentally well.

### **Eye Protection**

# WARNING

- ◆ Eye protection that meets ANSI Z87.1 or CE requirements must be worn whenever you operate the unit.
- For additional safety, a full-face shield can be worn over safety glasses or goggles to provide protection from sharp branches or flying debris.

SAFETY PE-2620/S

### **Hand Protection**

Wear sturdy, no-slip, rubber work gloves to improve your grip on the handles. Gloves also provide protection against cuts and scratches, cold environments, and reduce the transmission of machine vibration to your hands.

### **Hearing and Ear Protection**

ECHO recommends wearing personal protective equipment whenever unit is used.

### **Breathing Protection**

Operators who are sensitive to dust or other common airborne allergens may need to wear a dust mask to prevent inhaling these materials while operating unit. Dust masks can provide protection against dust, plant debris, and other plant matter such as pollen. Make sure the mask does not impair your vision, and replace the mask as needed to prevent air restrictions.

### **Proper Clothing**

Wear snug-fitting, durable clothing:

- · Pants should have long legs, shirts should have long sleeves.
- · DO NOT WEAR SHORTS.
- DO NOT WEAR TIES, SCARVES, JEWELRY, or clothing with loose or hanging items that could become entangled in moving parts or surrounding growth.
- Keep clothing buttoned or zipped, and keep shirt tails tucked in.
- · Wear sturdy work shoes with nonskid rubber soles.
- DO NOT WEAR OPEN TOED SHOES.
- DO NOT OPERATE UNIT WITH BARE FEET.

Keep long hair away from engine and air intake. Retain hair with cap or net.

Heavy protective clothing can increase operator fatigue, which may lead to heat stroke. Schedule heavy work for early morning or late afternoon hours when temperatures are cooler.

# WARNING

The components of this machine generate an electromagnetic field during operation, which can interfere with some pacemakers. To reduce the risk of serious or fatal injury. persons with pacemakers should consult with their physician and the pacemaker manufacturer before operating this machine. In the absence of such information, ECHO does not recommend the use of this machine by anyone who has a pacemaker.

**Extended Operation and Extreme Conditions** 

# CAUTION

Prolonged exposure to cold and/or vibration can result in injury. Read and follow all safety and operation instructions to minimize risk of injury. Failure to follow instructions can result in painful wrist/hand/arm injuries.

It is believed that a condition called Raynaud's Phenomenon, which affects the fingers of certain individuals, may be brought about by exposure to vibration and cold. Exposure to vibration and cold may cause tingling and burning sensations, followed by loss of color and numbness in the fingers. The following precautions are strongly recommended, because the minimum exposure, which might trigger the ailment, is unknown.

- Keep your body warm, especially the head, neck, feet, ankles, hands, and wrists.
- Maintain good blood circulation by performing vigorous arm exercises during frequent work breaks, and also by not smoking.
- · Limit the hours of operation. Try to fill each day with jobs where operating the unit or other hand-held power equipment is not required.
- · If you experience discomfort, redness, and swelling of the fingers followed by whitening and loss of feeling, consult your physician before further exposing yourself to cold and vibration.


SAFETY PE-2620/S

### Repetitive Stress Injuries (RSI)

It is believed that overusing the muscles and tendons of the fingers, hands, arms, and shoulders may cause soreness, swelling, numbness, weakness, and extreme pain in those areas. Certain repetitive hand activities may put you at a high risk for developing a Repetitive Stress Injury (RSI). An extreme RSI condition is Carpal Tunnel Syndrome (CTS), which could occur when your wrist swells and squeezes a vital nerve that runs through the area. Some believe that prolonged exposure to vibration may contribute to CTS. CTS can cause severe pain for months or even years.

To reduce the risk of RSI/CTS, do the following:

- Avoid using your wrist in a bent, extended, or twisted position. Instead try to maintain a straight wrist position. Also, when grasping, use your whole hand, not just the thumb and index finger.
- Take periodic breaks to minimize repetition and rest your hands.
- Reduce the speed and force with which you do the repetitive movement

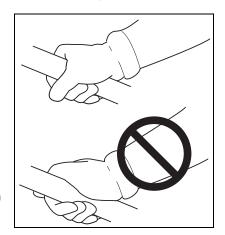

- · Do exercises to strengthen the hand and arm muscles.
- Immediately stop using all power equipment and consult a doctor if you feel tingling, numbness, or pain in the fingers, hands, wrists, or arms. The sooner RSI/CTS is diagnosed, the more likely permanent nerve and muscle damage can be prevented.

# **▲** DANGER

All overhead electrical conductors and communications wires can have electricity flow with high voltages. This unit is not insulated against electrical current. Never touch wires directly or indirectly, otherwise serious injury or death can result.

# A DANGER

Do not operate gas-powered products indoors or in inadequately ventilated areas. Engine exhaust contains poisonous emissions and can cause serious injury or death.



### Read Manuals

 Provide all users of this equipment with literature for instructions on safe operation.

### Clear the Work Area

- · Always clear the work area of foreign objects such as rocks, broken glass, nails, wire, or string, and check for any hidden hazards. Spectators and fellow workers must be warned, and children and animals prevented from coming nearer than 15 m (50 ft.) while the unit is in use.
- Outside the 15 m (50 ft.) zone, there is still a risk of injury from thrown objects.
- · Bystanders should be encouraged to wear eye protection.
- If you are approached, stop the engine and cutting attachment.
- When a bladed unit is used, there is the added risk of injury to bystanders being struck with the moving blade in the event of a blade thrust or other unexpected reaction of the blade.

### Keep a Firm Grip

· Always hold throttle handle and support handle with thumbs and fingers tightly encircling the handles.

### Keep a Solid Stance

- Maintain footing and balance at all times. Do not stand on slippery, uneven or unstable surfaces. Do not work in odd positions or on ladders. Do not overreach
- · Keep cutting attachment below waist.
- · Keep all body parts away from rotating cutting attachment.

### **Avoid Hot Surfaces**

 If unit is equipped with muffler, keep exhaust area clear of flammable debris. Avoid contact during and immediately after operation.





SAFETY PE-2620/S

# Equipment

# WARNING

Use only ECHO attachments. Serious injury may result from the use of a non-approved attachment combination. ECHO Incorporated will not be responsible for the failure of cutting devices, attachments or accessories which have not been tested and approved by ECHO. Read and comply with all safety instructions listed in this manual and safety manual.

- ◆ Check unit for loose or missing nuts, bolts, and screws. Tighten or replace as needed.
- ◆ Inspect shield for damage and that shield is securely in place. Replace if shield is damaged or missing.
- ◆ Check that the cutting attachment is firmly attached and in safe operating condition.
- ◆ Check that support handle is adjusted for safe, comfortable operation. See Assembly Section for proper adjustment.

# WARNING

Moving parts can amputate fingers or cause severe injuries. Keep hands, clothing and loose objects away from all openings.

- Always stop engine, disconnect spark plug, and make sure all moving parts have come to a complete stop before removing obstructions, clearing debris, or servicing unit.
- Do not start or operate unit unless all guards and protective covers are properly assembled to unit.
- Never reach into any opening while the engine is running.
   Moving parts may not be visible through openings.

# **WARNING**

Periodically check fuel system (fuel lines, vent, grommet, fuel tank, and fuel cap) for leaks especially if the unit is dropped. If damage or leaks are found, do not use unit, otherwise serious personal injury or property damage may occur. Have unit repaired by an Authorized Service Dealer before using.

### **EMISSION CONTROL**

### CARB and FPA Emission Control Information

The emission control system for the engine is EM (engine modification) and, if the second to last character of the Engine Family on the Emission Control Information label (sample below) is "B", "C", "K", or "T", the emission control system is EM and TWC (3-way catalyst). The fuel tank/fuel

EMISSION CONTROL INFORMATION ENGINE FAMILY: (E) EHXS.0214EQ DISPLACEMENT: 21.2cc EMISSION COMPLIANCE PERIOD: SOHours THIS ENGINE MEETS 2013 U.S.EPA EXH/EVP & CALIFORNIA EXH/EVP EMISSION REGULATIONS FOR S.O.R.E. REFER TO OWNER'S MANUAL FOR MAINTENANCE SPECIFICATIONS AND ADJUSTMENTS.

YAMABIKO CORP. MMM/YYYY



line emission control system is EVAP (evaporative emissions). Evaporative emissions for California models are only applicable to fuel tanks and fuel feed lines

An Emission Control Label is located on the engine. (This is an EXAMPLE ONLY, information on label varies by engine FAMILY).

### EMISSION CONTROL INFORMATION

ENGINE FAMILY: CEHXS.0214KL DISPLACEMENT: 21.2cc EMISSION COMPLIANCE PERIOD: 300Hours THIS ENGINE MEETS 2012 U.S. EPA EXH/EVP & CALIFORNIA EXHIPVP EMISSION REGULATIONS FOR S.O.R.E. REFER TO OWNER'S MANUAL FOR MAINTENANCE SPECIFICATIONS AND ADJUSTMENTS. YAMABIKO CORP. MMM/YYYY E


### **Product Emission Durability (Emission Compliance Period)**

The 50 or 300 hour emission compliance period is the time span selected by the manufacturer certifying the engine emissions output meets applicable emissions regulations, provided that approved maintenance procedures are followed as listed in the Maintenance Section of this manual.



# **DESCRIPTION**

Locate the safety decal(s) or etching(s) on your unit. Make sure they are legible, and that you understand and follow the instructions. If any cannot be read, replacements can be ordered from your Authorized Service Dealer. Images shown below are for example only. Those on your unit might appear slightly different.

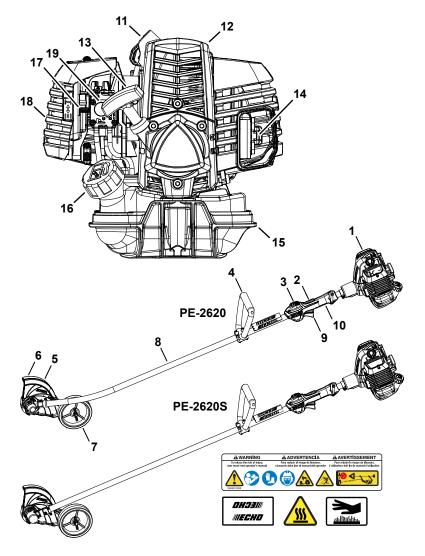

15

- 1. Power head
- 2. Throttle trigger lockout
- 3. Stop switch
- 4. Support handle - for left hand
- Debris shield and flap 5.
- 6. Blade
- 7. Wheel
- 8. Driveshaft assembly
- 9. Throttle trigger
- 10. Throttle handle - for right hand
- 11. Spark plug
- Top guard 12.
- 13. Recoil starter handle
- 14. Spark arrester muffler or spark arrester muffler with catalyst
- 15. Fuel tank
- 16. Fuel tank cap
- 17. Choke
- 18. Air filter
- 19. Purge bulb

CONTENTS PE-2620/S

### **CONTENTS**

After opening the carton, check for damage. Immediately notify your retailer or Authorized Service Dealer of damaged or missing parts. Use the contents list to check for missing parts.

The ECHO product you purchased has been factory pre-assembled for your convenience. Due to packaging restrictions, some assembly may be necessary.

- 1 Power head / drive shaft assembly
- Operator's manual
- 1 Warranty statement
- 1 Support handle
- 1 Lower bracket, support handle
- 4 5 x 35 mm screws
- 2 Split pins

# **OPERATION**

# **WARNING**

Moving parts can amputate fingers or cause severe injuries. Keep hands, clothing and loose objects away from all openings. Always stop engine, disconnect spark plug, and make sure all moving parts have come to a complete stop before removing obstructions, clearing debris, or servicing unit.

# **▲** WARNING

Engine exhaust is hot, and contains Carbon Monoxide (CO), a poison gas. Breathing CO can cause unconsciousness, serious injury, or death. Exhaust can cause serious burns. Always position unit so that exhaust is directed away from your face and body.

# **WARNING**

Operation of this equipment may create sparks that can start fires around dry vegetation. This unit is equipped with a spark arrester to prevent discharge of hot particles from the engine. Metal cutters can also create sparks if the cutter strikes rocks. metal, or other hard objects. Contact local fire authorities for laws or regulations regarding fire prevention requirements.

### Fuel

# WARNING

Diesel fuels and alternative fuels, such as E-15 (15% ethanol), E-85 (85% ethanol) or any fuels not meeting ECHO requirements are not approved for use in ECHO two-stroke gasoline engines. Use of diesel or alternative fuels can cause performance problems, loss of power, overheating, fuel vapor lock, and unintended machine operation, including, but not limited to, improper clutch engagement. Diesel or alternative fuels can also cause premature deterioration of fuel lines, gaskets, carburetors and other engine components.

### **Fuel Requirements**

Gasoline - Use fresh (purchased within the last 30 days from the pump) 89 Octane [R+M/2] (mid grade or higher) gasoline known to be good quality. Gasoline may contain up to 10% Ethanol (grain alcohol) or 15% MTBE (methyl tertiary-butyl ether). Gasoline containing methanol (wood alcohol) is NOT approved. Use of ECHO branded fuel is recommended to extend engine life in all air-cooled two-stroke and two/four stroke hybrid engines.

Two-Stroke Oil - A two-stroke engine oil, such as ECHO branded twostroke oils, meeting ISO-L-EGD (ISO/CD 13738) and J.A.S.O. FD Standards must be used. ECHO branded two-stroke oils meet these standards. Engine problems due to inadequate lubrication caused by failure to use an ISO-L-EGD (ISO/CD 13738) and J.A.S.O. M345-FD certified oil will void the two-stroke engine warranty.

OPERATION PE-2620/S

# **WARNING**

Two-stroke engine oil contains petroleum distillates and other additives that may be harmful if swallowed. Heated oil can release vapors that can cause flash fire, or ignite with explosive force. Read and follow the oil manufacturer's instructions, and observe all safety warnings and precautions for handling flammable liquids. For more detailed safety and first aid information, visit www.echo-usa.com for a copy of the Material Safety Data Sheet.

- ◆ Keep out of reach of children.
- If swallowed, do not induce vomiting. Call physician or a poison control center immediately.
- ♦ Wear safety glasses when mixing or handling.
- ◆ Avoid repeated or prolonged skin contact.
- ◆ Avoid inhaling oil mists or vapors.

# NOTICE

ECHO branded two-stroke oils may be mixed at 50:1 ratio for application in all ECHO engines sold in the past regardless of ratio specified in those manuals.

### **Handling Fuel**

# **A** DANGER

Fuel is flammable. Use extreme care when mixing, storing or handling, or serious personal injury will result.

- ◆ Use an approved fuel container. Mark fuel containers as containing two-stroke mixture fuel.
- Do not smoke near fuel.
- ◆ Do not allow flames or sparks near fuel.
- ◆ Fuel tanks/cans may be under pressure. Always loosen fuel caps slowly allowing pressure to equalize.
- ◆ Never refuel a unit when the engine is hot or running!
- Do not fill fuel tanks indoors. Always fill fuel tanks outdoors over bare ground.
- ◆ Do not overfill fuel tank. Wipe up spills immediately.
- Securely tighten fuel tank cap and close fuel container after refueling.



- Inspect for fuel leakage. If fuel leakage is found, do not start or operate unit until leakage is repaired.
- ◆ Use caution when handling fuel. Mix and pour fuel outdoors where there are no sparks and flames. Slowly remove the fuel cap only after stopping the engine and allowing the unit to cool. Do not smoke while fueling or mixing fuel. Move the unit at least 3 m (10 ft.) from the fueling point before starting the engine.

# A DANGER

Gasoline vapor is heavier than air, and can travel along the ground to nearby sources of ignition such as electrical motors, pilot lights, and hot or running engines. Vapors ignited by an ignition source can flash back to the fuel container, resulting in an explosion, fire, serious or fatal injuries, and extensive property damage.

**Mixing Instructions** 

# NOTICE

Stored fuel ages. Do not mix more fuel than you expect to use in 30 days or 90 days when a fuel stabilizer is added.

- Fill an approved fuel container with half of the required amount of gasoline.
- 2. Add the proper amount of two-stroke oil to gasoline.
- Close container and shake to mix oil with gasoline.
- Add remaining gasoline, close fuel container, and remix.

Fuel to Oil Mix – 50:1 Ratio			
U	US		tric
Gas	Oil	Gas	Oil
gal.	fl.oz.	L	СС
1	2.6	5	100
2	5.2	10	200
5	13	25	500

# NOTICE

Spilled fuel is a leading cause of hydrocarbon emissions. Some locations may require the use of automatic fuel shut-off containers to reduce fuel spillage.

OPERATION PE-2620/S

**Storage** - Fuel storage laws vary by locality. Contact your local government for the laws affecting your area. As a precaution, store fuel in an approved, airtight container. Store in a well-ventilated, unoccupied building, away from sparks and flames.

 Empty the fuel tank prior to storing the unit. Return unused fuel to an approved fuel storage container.

# NOTICE

Stored two-stroke fuel can separate. Always shake fuel container thoroughly before each use.

# NOTICE

Used oil and gasoline, and soiled towels are hazardous waste materials. Disposal laws vary by locality.


# Starting Cold Engine

# **▲ WARNING**


The attachment will operate immediately when the engine starts, and could result in possible serious injury. Keep movable parts of the attachment away from objects that could become entangled or thrown, and surfaces that could cause loss of control.

Note: If a protective blade cover is used, remove it before starting


 Move stop switch button (A) forward, away from the STOP position.

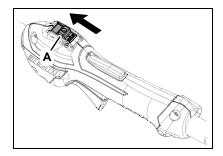

- 2. Move choke lever (B) to COLD START position.
- Pump purge bulb (C) until fuel is visible and flows freely in the clear fuel tank return line. Pump bulb an additional four or five times.

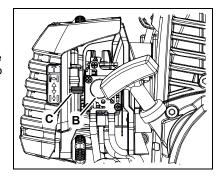

4. Lay the unit on a flat area and keep movable attachment parts clear of all obstacles. Firmly grasp throttle handle and throttle trigger lockout with left hand and fully depress throttle trigger to wide open position. Rapidly pull recoil starter handle/rope (D) until engine starts (or maximum five pulls).

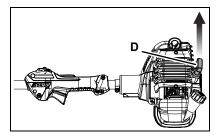

After engine starts (or five pulls), move choke to the RUN (open)
position. Firmly grasp throttle handle and throttle trigger lockout with left
hand and fully depress throttle trigger to wide open position. Release
throttle trigger and allow unit to warm up at idle for several minutes.

Note: If engine does not start with choke in RUN position after five pulls, repeat instructions 2 - 5.

After engine warm-up, grip throttle handle and support handle. Depress
the throttle trigger lockout, and gradually depress throttle trigger to
increase engine RPM to operating speed.


# **Starting Warm Engine**

# **WARNING**


The attachment should not move at idle, otherwise serious personal injury may result.

Note: If attachment moves, readjust carburetor according to Carburetor Adjustment instructions in this manual or see your Authorized Service Dealer


 Move stop switch button (A) forward away from the STOP position.

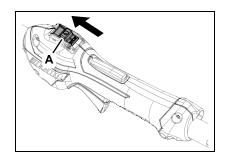


 Pump purge bulb (B) until fuel is visible in the clear fuel return line. Pump bulb an additional four or five times.

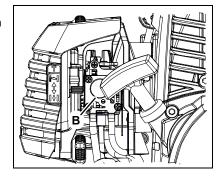

 Lay the unit on a flat area and keep movable attachment parts clear of all obstacles. Firmly grip throttle handle and throttle trigger lockout with left hand. Rapidly pull recoil starter handle/rope (D) until engine starts.



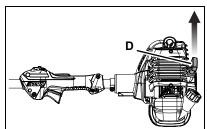


OPERATION PE-2620/S

# **Stopping Engine**

1. Release throttle trigger and allow engine to return to idle before shutting off engine.

2. Move stop switch button (A) backward to STOP position.

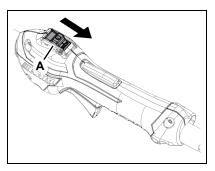

# WARNING

If engine does not stop when stop switch is moved to STOP position, close choke - COLD START position - to stall engine. Have your Authorized Service Dealer dealer repair stop switch before using unit again.

# **Edger Operation Techniques**

- 1. Before edging, water the area to soften the ground to make edging easier.
- 2. Before edging, check the area and remove all obstacles and objects that could be thrown.
- 3. Plan to edge regularly to make it easier to keep a neat edge and to avoid having to make more than one pass.

Note: Blade depth may have to be adjusted due to differences in height between the hard surface and the top of the grass.

# WARNING

Never adjust blade height with engine running, otherwise serious personal injury may result.

# CAUTION

Wear gloves or personal injury may result. Gear case and surrounding area may be hot.


X7532341602 23 © 05/25 ECHO Incorporated

OPERATION PE-2620/S

Loosen adjustment knob (A).
 Move wheel up to increase cutting depth, or down to decrease cutting depth. A depth of (B) 13 mm (0.5 in.) is optimal. Tighten adjustment knob (A).

- Before edging, plan your direction of travel so that the unit will always be positioned on your right side and so that you walk on a hard surface whenever possible.
- A A

6. Position edger as shown.

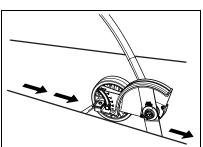

# **WARNING**

Before edging, be sure to read and understand the entire Operator's Manual to avoid serious injury.

- 7. When starting to edge, run the engine at full throttle, and lower the blade gently into the ground, being careful not to hit the concrete with the blade.
- 8. Do not force the blade. Move only as quickly as the blade will allow.

# **WARNING**

The complete unit, specifically the drive shaft assembly and muffler exhaust area, may become very hot during use. Avoid contact during and immediately after operation, otherw

24





during and immediately after operation, otherwise serious personal injury may result.

# **MAINTENANCE**

# WARNING

Moving parts can amputate fingers or cause severe injuries. Keep hands, clothing and loose objects away from all openings. Always stop unit, disconnect spark plug or remove battery, and make sure all moving parts have come to a complete stop before removing obstructions, clearing debris, or servicing unit. Allow the unit to cool before performing maintenance or adjustments. Wear gloves to protect hands from sharp edges and hot surfaces.

# **WARNING**

Operating a poorly maintained unit can result in serious injuries to operator or bystanders. Always follow all maintenance instructions as written, otherwise serious personal injury can result.

Your unit is designed to provide many hours of trouble-free service. Regular scheduled maintenance will help your unit achieve that goal. If you are unsure or are not equipped with the necessary tools, we recommend that you take your unit to a Authorized Service Dealer for maintenance. To help you decide whether you want to do it yourself or have the dealer do it, each maintenance task has been graded. If the task is not listed, see your Authorized Service Dealer for repairs.

# NOTICE

The use of emission control components other than those specifically designed for this unit is a violation of federal law.

### Skill Levels

**Level 1** = Easy to do. Common tools may be required.

**Level 2** = Moderate difficulty. Some specialized tools may be required.

**Level 3** = See your Authorized Service Dealer.

Click HERE or go to http://www.echo-usa.com/products/maintenance-kit

or

https://www.shindaiwa-usa.com/you-can.aspx

### **Maintenance Intervals**

COMPONENT / SYSTEM	MAINTENANCE PROCEDURE	SKILL LEVEL
Daily or Before Use		
Air filter	Inspect / Clean*	
Choke shutter	mopeot/ olean	1
Fuel system	Inspect <sup>3</sup>	
Cooling system	Inspect / Clean	2
Recoil starter rope	Inspect / Clean*	1
Screws / nuts / bolts	Inspect / Tighten / Replace*	•
Blade	Inspect / Replace*	1
Every Refuel		
Fuel system	Inspect <sup>3</sup>	1
3 Months		
Air filter	Replace*	
Fuel filter	Inspect*	1
Fuel cap gasket	Порсог	•
Spark plug	Inspect / Clean / Replace*	
Muffler spark arrester	mopeot/ olean/ replace	
Cylinder exhaust port	Inspect / Clean / De-carbon	
Drive shaft (flex cable models)	Grease <sup>1</sup>	2
Gear housing (certain models)	Grease <sup>2</sup>	
Yearly		
Fuel filter	Inspect / Replace*	1
Fuel cap gasket	Replace*	ı

Note: Time intervals shown are maximum. Actual use and your experience will determine the frequency of required maintenance.

Maintenance Procedure Notes:


- <sup>1</sup> Apply lithium-based grease every 25 hours of use.
- <sup>2</sup> Apply lithium-based grease every 50 hours of use.
- <sup>3</sup> Low evaporative fuel tanks do not require regular maintenance to maintain emission integrity.
- \* Replacement is recommended based on the finding of damage or wear during inspection.

### Air Filter


### Level 1

Parts required: Tune-up kit.


- Close choke (COLD START position). This prevents dirt from entering the carburetor throat when the air filter is removed. Brush accumulated dirt from air filter area
- Remove air filter cover. Brush dirt from inside cover. 2.
- 3. Ensure throttle wire retaining clip (A) remains in place as shown when removing or installing air filter cover.

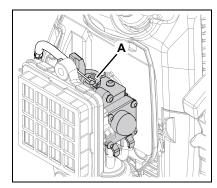

- Remove foam pre-filter (B) and 4. air filter (C).
- Clean foam pre-filter in water/ 5. detergent solution and rinse with clean water. Wrap the filter in a clean, dry cloth and squeeze (do not wring) dry. Allow to dry completely before reuse. Do not oil.
- Lightly brush debris from air filter. Replace it if it is damaged, fuel soaked, very dirty, or the rubber sealing edges are deformed.

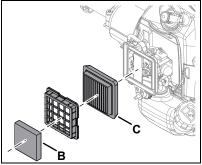

- 7. Assemble components in reverse order.
- 8. Ensure air filter is assembled with pleats oriented vertically.

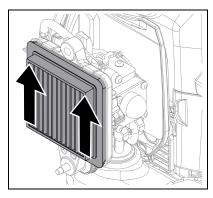

### **Fuel Filter**


### Level 1.

Parts required: Tune-up kit.

# A DANGER

Fuel is flammable. Use extreme care when mixing, storing or handling, or serious personal injury may result.

- Use a clean cloth to remove loose dirt from around fuel cap and empty fuel tank.
- 2. Pull fuel filter out through gas port, and inspect fuel filter.
- 3. When the fuel filter is dirty, replace it as follows:
  - a. Do not remove the wire coil clamp to remove the fuel filter. Pinch the fuel filter with the fingers on one hand and the fuel line with the other hand. Pull and twist slightly to separate.

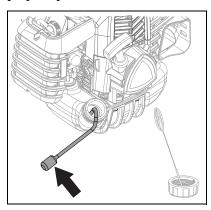

b. Install the new fuel filter in reverse order.

Note: When the inside of the fuel tank is dirty, rinse the tank out with gasoline to clean it.

Note: Federal EPA regulations require all model year 2012 and later gasoline powered engines produced for sale in the United States to be equipped with a special low permeation fuel supply hose between the carburetor and fuel tank. When servicing model year 2012 and later equipment, only fuel supply hoses certified by EPA can be used to replace the original equipment supply hose. Fines up to \$37,500 may be enforced for using an un-certified replacement part.

# **Spark Plug**


### Level 2.

Parts required: Tune-up kit.

# NOTICE

Use only NGK CMR7H spark plug to avoid damage to the unit.

 Remove spark plug and check for fouling, worn and rounded center electrode.

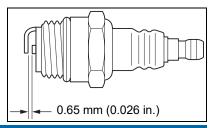

# NOTICE

Do not sandblast to clean. Remaining sand will damage engine.

- 2. Clean the plug or replace with a new one.
- 3. Adjust spark plug gap to 0.65 mm (0.026 in.).
- 4. Tighten spark plug to 102-153 kgf•cm (89-133 lbf•in).

# **Cooling System**


Level 2.

# **NOTICE**

To maintain proper engine operating temperatures, cooling air must pass freely through engine cover (A). This flow of air carries combustion heat away from the engine.

Overheating and engine seizure can occur when:


 Air intakes are blocked, preventing cooling air from reaching the cylinder.

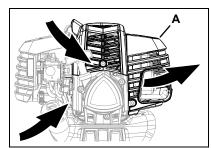

 Dust and grass build up on the outside of the cylinder. This build up insulates the engine and prevents the heat from leaving.

Removal of cooling passage blockages or cleaning of cooling fins is considered normal maintenance. Any failure attributed to lack of maintenance is not warranted.

- 1. Remove spark plug lead.
- Remove muffler cover (A), engine cover (B), and air filter cover (C).

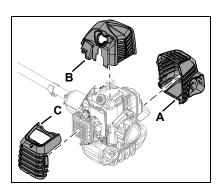


# NOTICE

Do not use a metal scraper to remove dirt from the cylinder fins.

Use a brush with plastic or nylon bristles to remove dirt from the cylinder fins.

- Remove grass and leaves from the grid (C) between the recoil starter and fuel tank.
- Assemble components in reverse order.

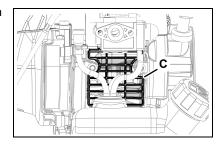

# **Exhaust System**


### **Spark Arrester Screen**

### Level 2.

Parts required: Spark arrester screen, gasket.

- 1. Remove spark plug lead.
- 2. Remove muffler cover (A).
- Place piston at Top Dead Center (TDC) to prevent carbon or dirt from entering cylinder.
- Remove spark arrester screen cover (B), gasket (C), and screen (D), from muffler body.
- Clean carbon deposits from muffler components.

Note: When cleaning carbon deposit, be careful not to damage the catalytic element inside muffler.

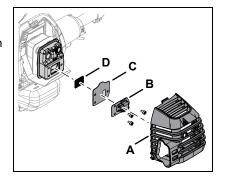

- 6. Replace screen if it is cracked, plugged, or has holes burned through.
- 7. Assemble components in reverse order.

### **Exhaust Port Cleaning**

### Level 2.


32

Parts needed: Heat shield (as required).

# NOTICE

Never use a metal tool to scrape carbon from the exhaust port. Do not scratch the cylinder or piston when cleaning the exhaust port. Do not allow carbon particles to enter the cylinder.

- 1. Remove spark plug lead from spark plug.
- 2. Remove muffler cover (A).
- 3. Place piston at top dead center.
- 4. Remove muffler (B).
- Use a wood or plastic scraping tool to clean deposits from cylinder exhaust port (C).
- 6. Inspect heat shield (D), replace if damaged.
- Install heat shield and muffler.
- 8. Tighten muffler mounting bolts (or nuts) to 90-110 kgf•cm (80-95 lbf•in).
- 9. Install muffler cover and attach spark plug lead.
- 10. Start engine and warm to operating temperature.
- 11. Stop engine and tighten muffler mounting bolts (or nuts) to 90-110 kgf•cm (80-95 lbf•in).

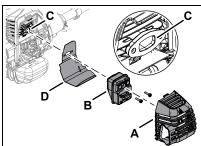

# **Carburetor Adjustment**

Level 2.

# **WARNING**

When carburetor adjustment is completed, the cutting attachment should not move at idle, otherwise serious personal injury may result.

### Engine Break-In

New engines must be operated a minimum duration of two tanks of fuel break-in before carburetor adjustments can be made. During the break-in period your engine performance will increase and exhaust emissions will stabilize. Idle speed can be adjusted as required.

### High Altitude Operation


This engine has been factory adjusted to maintain satisfactory starting, and durability performance up to 335 m (1,100 ft.) above sea level (ASL) (96.0 kPa). To maintain proper engine operation above 335 m (1,100 ft.) ASL the carburetor may need to be adjusted by an Authorized Service Dealer.

# NOTICE

If the engine is adjusted for operation above 335 m (1,100 ft.) ASL, the carburetor must be re-adjusted when operating the engine below 335 m (1,100 ft.) ASL, otherwise severe engine damage may result.

Note: Every unit is run at the factory and the carburetor is set in compliance with emission regulations. Carburetor adjustments, other than idle speed, must be performed by an authorized dealer.

 Check idle speed and reset if necessary. If a tachometer is available, idle speed screw (A) should be set to the specifications found on the Specifications page of this manual. Turn idle screw (A) clockwise to increase idle speed; counterclockwise to decrease idle speed.

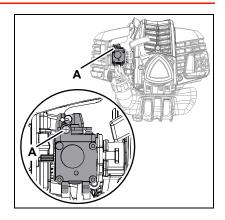

### Lubrication

### Level 1.

Parts required: Lithium-based grease.


# NOTICE

Gear cases without a grease plug do not require lubrication.

Note: Your debris shield may appear different than the debris shield shown.


### **Gear Housing**

- Remove grease plug (A), if required, and add grease to gear housing. Do not overfill.
- 2. Replace plug and tighten securely.

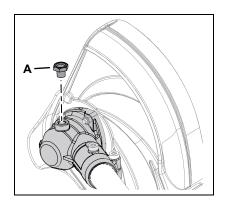

### **Drive Shaft**

- Loosen screw (A) and remove center locating screw (B). Pull gear box and shield from drive shaft housing.
- Pull flexible cable from the drive 2. shaft housing, wipe clean and apply 15 ml (0.5 oz.) of grease.
- 3. Slide the flexible cable back in the drive housing. Do not get dirt on the flex cable.
- 4. Install the gear housing and shield assembly. Align locating screw hole with hole in drive shaft housing.
- Tighten screws securely. 5.

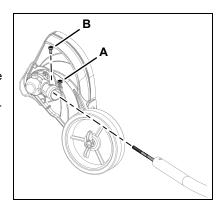

# Edger Blade Replacement

Level 1.


Parts required: Blade, new split pin.

Note: Replace blade when it is bent, damaged, or worn shorter than 152.4 mm (6 in.).

# CAUTION

Wear gloves or personal injury may result. Gear case and surrounding area may be hot.


- 1. Remove split pin (A).
- Align hole in inner blade adapter (B) with notch in gear housing, and insert locking tool (G) to prevent PTO shaft (C) from rotating.

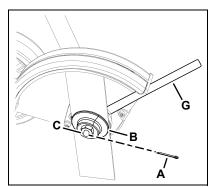

- Remove blade nut (D) by turning clockwise. Remove outer blade adapter (E), and blade (F).
- 4. Install and center blade (F) on inner blade adapter (B).
- Install outer adapter (E) and nut (D). Tighten nut (D) firmly, turning counterclockwise.

Note: Never reuse old split pin.

 Install new split pin (A) to secure nut, and bend both legs of pin counterclockwise around PTO shaft (C).

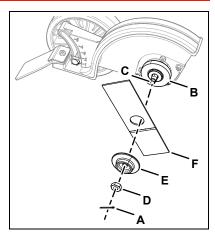

### TROUBLESHOOTING

# **A** DANGER

Fuel vapors are flammable and can cause fire and/or explosion. Never test for ignition spark by grounding spark plug near cylinder plug hole, otherwise serious personal injury can result.

ENGINE PROBLEM TROUBLESHOOTING CHART				
Problem	Check	Status	Cause	Remedy
	Fuel at	No fuel at	Fuel filter or fuel	Clean or replace.
	carburetor.	carburetor.	line obstructed.	See your dealer.
Engine starts hard	Fuel at cylinder.	No fuel at cylinder.	Carburetor	See your dealer.
or				Open choke.
Engine does not start		Muffler wet with fuel.  Fuel mixture too rich.	Clean or replace air filter.	
Start			rich.	Adjust carburetor.
				See your dealer.

ENGINE PROBLEM TROUBLESHOOTING CHART				
Problem	Check	Status	Cause	Remedy
Engine starts hard	Spark at end of plug wire.		Stop switch OFF. Electrical problem. Interlock switch.	Turn switch to ON. See your dealer.
or Engine does not start	Spark at plug.	No spark.	Incorrect gap. Covered with carbon. Fouled with fuel. Spark plug defective.	Adjust to 0.65 mm (0.026 in.). Clean or replace spark plug.
	Air filter	Air filter dirty.	Normal wear.	Clean or replace.
	Fuel filter	Fuel filter dirty.	Contaminants or residue in fuel.	Replace filter or replace fuel.
Engine runs, but	Fuel vent	Fuel vent plugged.	Contaminated fuel.	Clean or replace.
dies or	Spark plug	Plug dirty or worn.	Normal wear.	Clean and adjust or replace.
Engine does not	Carburetor	Improper adjustment.	Vibration	Adjust
accelerate properly	Cooling system	Cooling system dirty or plugged.	Extended operation in dirty or dusty locations.	Clean
	Spark arrester screen	Spark arrester screen plugged.	Normal wear.	Replace
Engine does not crank		J/A	Internal engine problem.	See your dealer.

STORAGE PE-2620/S

### **STORAGE**

## Long-Term Storage (Over 30 Days)

# **▲** DANGER

Do not store in enclosure where fuel fumes may accumulate or reach an open flame or spark.

Do not store your unit for a prolonged period of time (30 days or longer) without performing protective storage maintenance which includes the following:

- 1. Store unit in a dry, dust-free place, out of the reach of children.
- 2. Place the stop switch in the OFF position.
- Remove accumulation of grease, oil, dirt and debris from exterior of unit.
- Perform all periodic lubrication and services that are required.
- 5. Tighten all the screws and nuts.

# WARNING

During operation the muffler or catalytic muffler and surrounding cover become hot. Always keep exhaust area clear of flammable debris during transportation or when storing, otherwise serious property damage or personal injury may result.

# **▲** DANGER

Fuel is flammable. Use extreme care when mixing, storing or handling, or serious personal injury will result.

- Drain fuel tank completely.
- 7. Press purge bulb six to seven times to remove remaining fuel from carburetor then drain the tank again.
- 8. Close choke, start and run the engine until it stops due to lack of fuel.
- 9. Allow engine to cool. Remove the spark plug lead from the spark plug.
- 10. Remove the spark plug.
- 11. Pour 7 cc (0.25 fl. oz.) of fresh, clean, two-stroke engine oil into the cylinder through the spark plug hole.
- Pull the recoil starter handle two to three times to distribute the oil inside the engine.

X7532341602 © 05/25 ECHO Incorporated

- 13. Observe the piston location through the spark plug hole. Pull the recoil handle slowly until the piston reaches the top of its travel and leave it there.
- 14. Install the spark plug.
- 15. Connect the spark plug lead to the spark plug.

# **SPECIFICATIONS**

MODEL	PE-2620	PE-2620S	
Length (without cutter head)	1,740 mm (69.0 in.)	1,775 mm (69.9 in.)	
Width	352 mm (13.8 in.)	273 mm (10.7 in.)	
Height	335 mm (13.1 in.)	344 mm (13.5 in.)	
Weight - dry (without cutter head)	5.4 kg	(11.9 lb.)	
Type of engine	Air-cooled, two-stroke, sine	ngle cylinder gasoline	
Displacement	25.4 cc	(1.55 in. <sup>3</sup> )	
Bore	34 mm	(1.34 in.)	
Stroke	28 mm	(1.10 in.)	
Carburetor	Diaphragm with purge pu	mp	
Air filter system	Primary – Non-woven fabric Secondary (pre-filter) – Polyurethane foam		
Ignition system	Flywheel magneto, capacitor discharge ignition type		
Spark plug	NGK CMR7H Gap 0.6 mm (0.026 in.)		
Exhaust system	Spark arrester muffler or spark arrester muffler with catalyst		
Starter system	Automatic rewind starter		
Clutch	Centrifugal type		
Fuel	Mixed (gasoline and two-stroke oil)		
Fuel / oil ratio	50:1		
Gasoline	Use 89 Octane unleaded. Do not use fuel containing methyl alcohol, more than 10% ethyl alcohol or 15% MTBE. Do not use alternative fuels such as E15 or E85.		
Oil	ISO-L-EGD (ISO/CD 13738) and J.A.S.O. M345-FD, two-stroke, air-cooled engine oil.		
Fuel tank capacity	0.56 L (18.9 US fl. oz.)		

MODEL	PE-2620	PE-2620S
Operation rod	25.0 mm (1.0 in.) diamete	er aluminum tube
Drive shaft	6.35 mm (0.25 in.) flexible	e shaft
Gear reduction ratio	2.07:1	
Rotating direction	Counterclockwise; viewed	d from left side
Cutter head	203 mm (8 in.) blade	
Vibration reduction systems	Rubber cushion on engine mount. Rubber anti- vibration grip on rear handle	
Handle	Front – D-loop type Rear – Throttle handle with rubber anti-vibration grip	
Idle speed	3,000	) RPM
Clutch Engagement	4,100 RPM	
Wide open throttle speed	11,500 RPM	

### PRODUCT REGISTRATION

### Thank you for choosing ECHO Power Equipment

Please go to <a href="http://www.echo-usa.com/Warranty/Register-Your-ECHO">http://www.echo-usa.com/Warranty/Register-Your-ECHO</a> to register your new product on-line. It's **FAST** and **EASY!** NOTE: Your information will never be sold or misused by ECHO Incorporated. Registering your purchase enables us to contact you in the unlikely event of a service update or product recall, and verifies your ownership for warranty consideration.

If you do not have access to the Internet, you can complete the form below and mail to:

ECHO Incorporated, Product Registration, PO Box 1139, Lake Zurich, IL 60047.

# $/\!\!/\!\!/\!\!/$ PRODUCT REGISTRATION CARD:TARJETA DE REGISTRO: CARTE D'ENREGISTREMENT DU PRODUIT

ahorre una estampilla! Le alertaran sobre actualizaciones del producto y/o se le enviara información sobre los nuevos pro-ductos ECHO y las ofertas especiales. Simplemente visite: Registrese en la pagina web www.echo-usa.com Zip Code : Código Postal : Code Postal OPCIÓN POR INTERNET: lease Print : Por Favor Enscriba Con Letra De Molde : En Lettre Carré S.V.P. E-Mail Address : Dirección De Correo Electrónico : Courrier Electronique Purchaser's Name : Nombre del Comprador : Nom de l'acheteur ONLINE OPTION: Register online and save a stamp! You will be alerted of product updates and/or be sent new ECHO product information and special offers. Simply go to: www.echo-usa.com State: Estado: Province Address : Dirección : Adresse City: Ciudad: Ville

Do you wish to receive periodic ECHO product information and special offers

¿Desea usted recibir información periódica y ofertas especiales por correo elec-

Ironico sobre el producto ECHO? TYes

□ Yes

by e-mail?

Souhaitez-vous recevoir périodiquement de l'information sur les produits

ECHO et les offres spéciales par courrier électronique ? Oui

Visitó usted la pagina web ECHO antes de comprar su producto? Did you visit the ECHO website before purchasing your product?

e N D

□ Yes

Avez-vous visité le site d'ECHO avant de procurer votre produit?

₽ □

ino I ∑ □

2 □

No U

Uso primario de la herramienta:□Profesional □ Dueño de casa □ Alquiler

Jsage principal : 

Professionnel 

Residential

Primary use of tool: Professional Homeowner

☐ Location

Confidential: Information provided will not be shared or sold

**OPTION EN LIGNE**: Enregistrer en ligne et épargner un imbre! Vous serez informé sur les nouveaux produits ECHO

et les mises à jour de produit ainsi que les offres spéciales. Simplement visitez le: www.echo-usa.com

Rental Equip.

02-2012 X7572270206 Marchand ☐ Distribuidor ■ Warranty Garantie Qualité ☐ Garantía ☐ Dealer Ouality Calidad Quel facteur (facteurs) vous a influencé le plus? What factor(s) most influenced your purchase? ¿Qué factor(es) influenció más en su compra? ECHO INC., 400 Oakwood Rd., Lake Zurich, IL 60047 Experiencia Anterior ☐ Prior Experience WWW ECHO-USA COM □ Expérience ☐ Marque Brand ☐ Precio ☐ Marca ☐ Friend/Family ☐ Funcionamiento □ Performance Performance ☐ Amigo/Familia ☐ Ami/Famille 800,432,ECHO ☐ Confiabilidad ☐ Reliability Registering your purchase enables us to contact you in the unlikely event of a service published or product recall and verifies your ownership in the event of isss. Ell publisher as compreten not permitted by the service of a revocation del productly yrefificación de production caso de noto o perdida. Le mensus menter de votre achier torse permittant de votre achier production service or le mente de votre achier producti et de production el caso indicatorior bette instructions deminished not de rappel du produit et verifier de votre achier producti et verifier de votre achier producti et verifier de votre achier producti et verifier de votre achier de votre achier producti et verifier de votre achier producti et verifier de votre achier de votre de verifier de v de série Fecha de la Compra Š Serie: Serial Number : Numero de Date of Purchase: Where Purchased : Nombre del Almacén donde fue Comprado : Lieu d'achat Date de l'achat Model Number: Numero del Modelo: No. de modéle Phone Number : Número De Teléfono : Téléphone

MEGHO 41

# **NOTES**

U89712001001 - U89712999999 U89912001001 - U89912999999 U89613001001 - U89613999999 U89813001001 - U89813999999 U98615001001 - U98615999999 U98715001001 - U98715999999



400 Oakwood Road Lake Zurich, IL 60047 www.echo-usa.com